

21899

Honda CB 1000 Hornet Fly Screen Fitting Instructions

Kit Includes:

1.	X1	C21899	Fly Screen
2.	X1	CFK21899A	Bracket A
3.	X1	CFK21899B	Bracket B
4.	X4	CBOLM50005	M5 x 12mm Bolt
5.	X8	CWASM50002	M5 Washer
6.	X4	CNUTM50002	M5 Nyloc Nut
7.	X2	CSCR0004	Flanged Screw
8.	X2	CSPAM80002	Spacer
OEM:			
9.	X2	-	OEM Screw

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and
feel free to leave us a review!

Please note: bracket A has one small hole and
bracket B has two small holes to help distinguish them.

Assembly Instructions


- Start by removing the OEM screws and fit brackets A + B using the fittings as shown in **Fig 1**.
- Attach the fly screen to brackets A + B as shown in **Fig 2**.
- Fully tighten all mounting points and check fixings periodically.

Fig 1

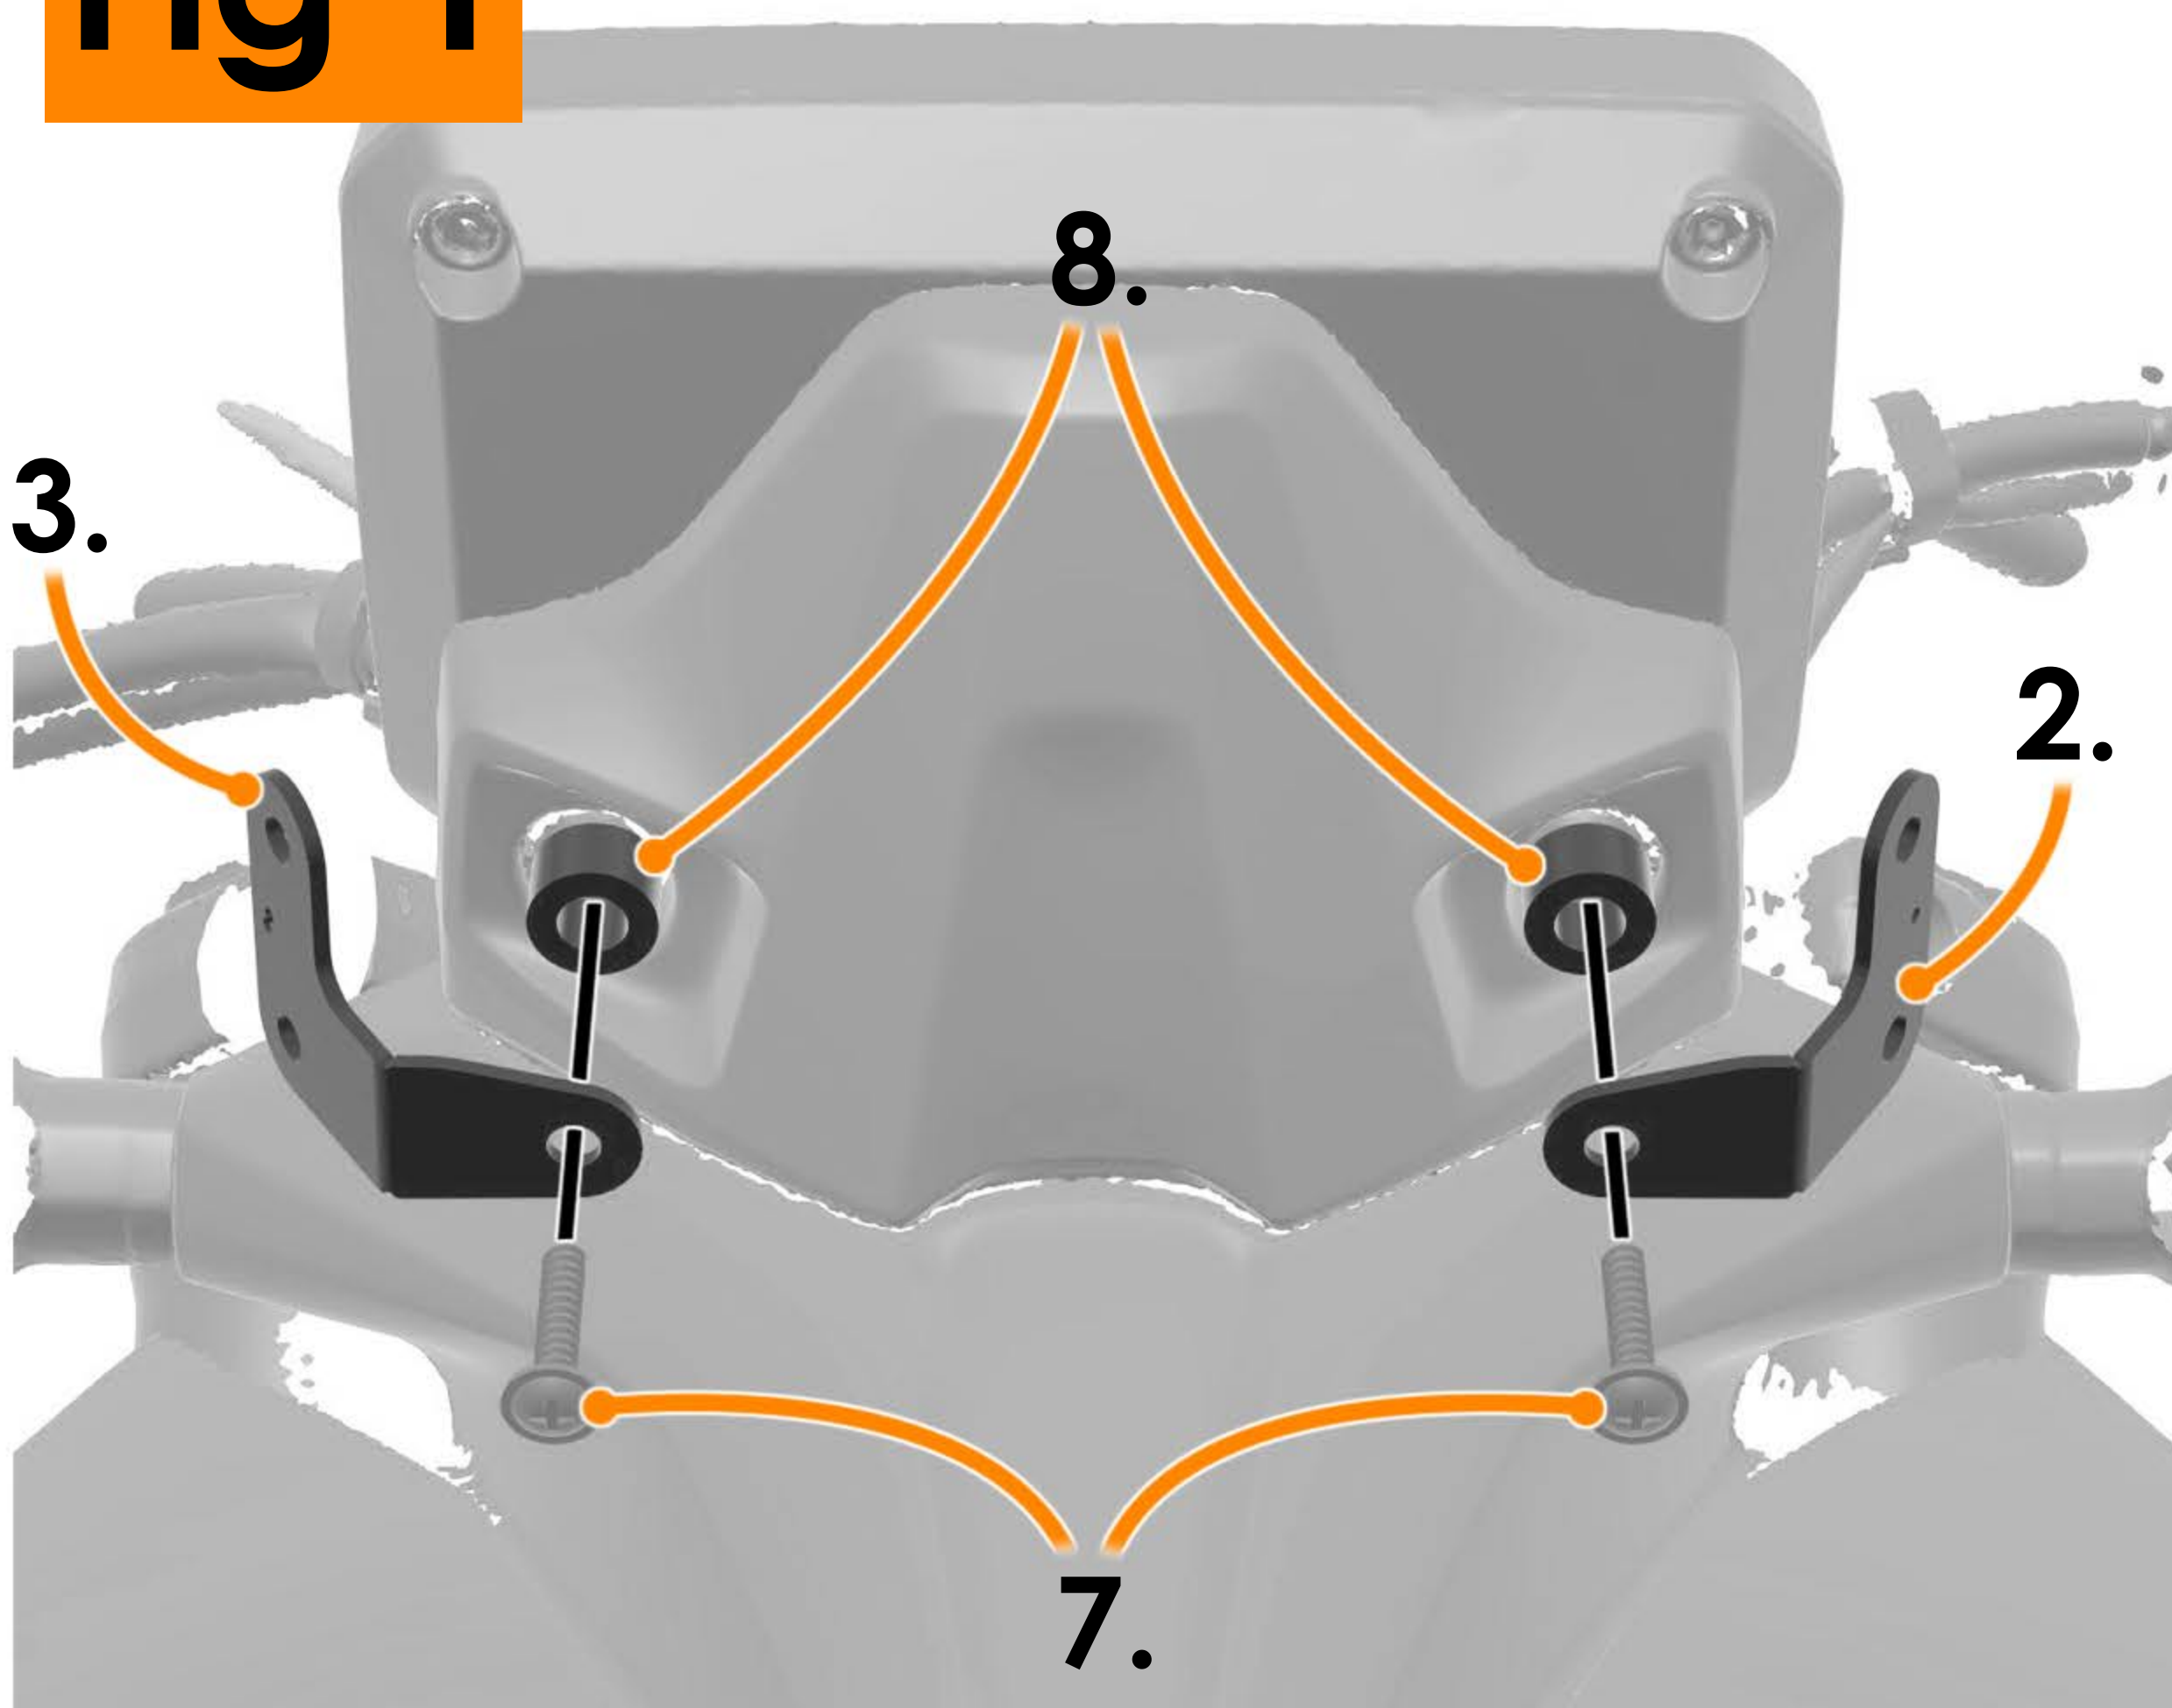

Check alignment of brackets with mounting points in fly screen before fully tightening the flanged screws provided.

Fig 2

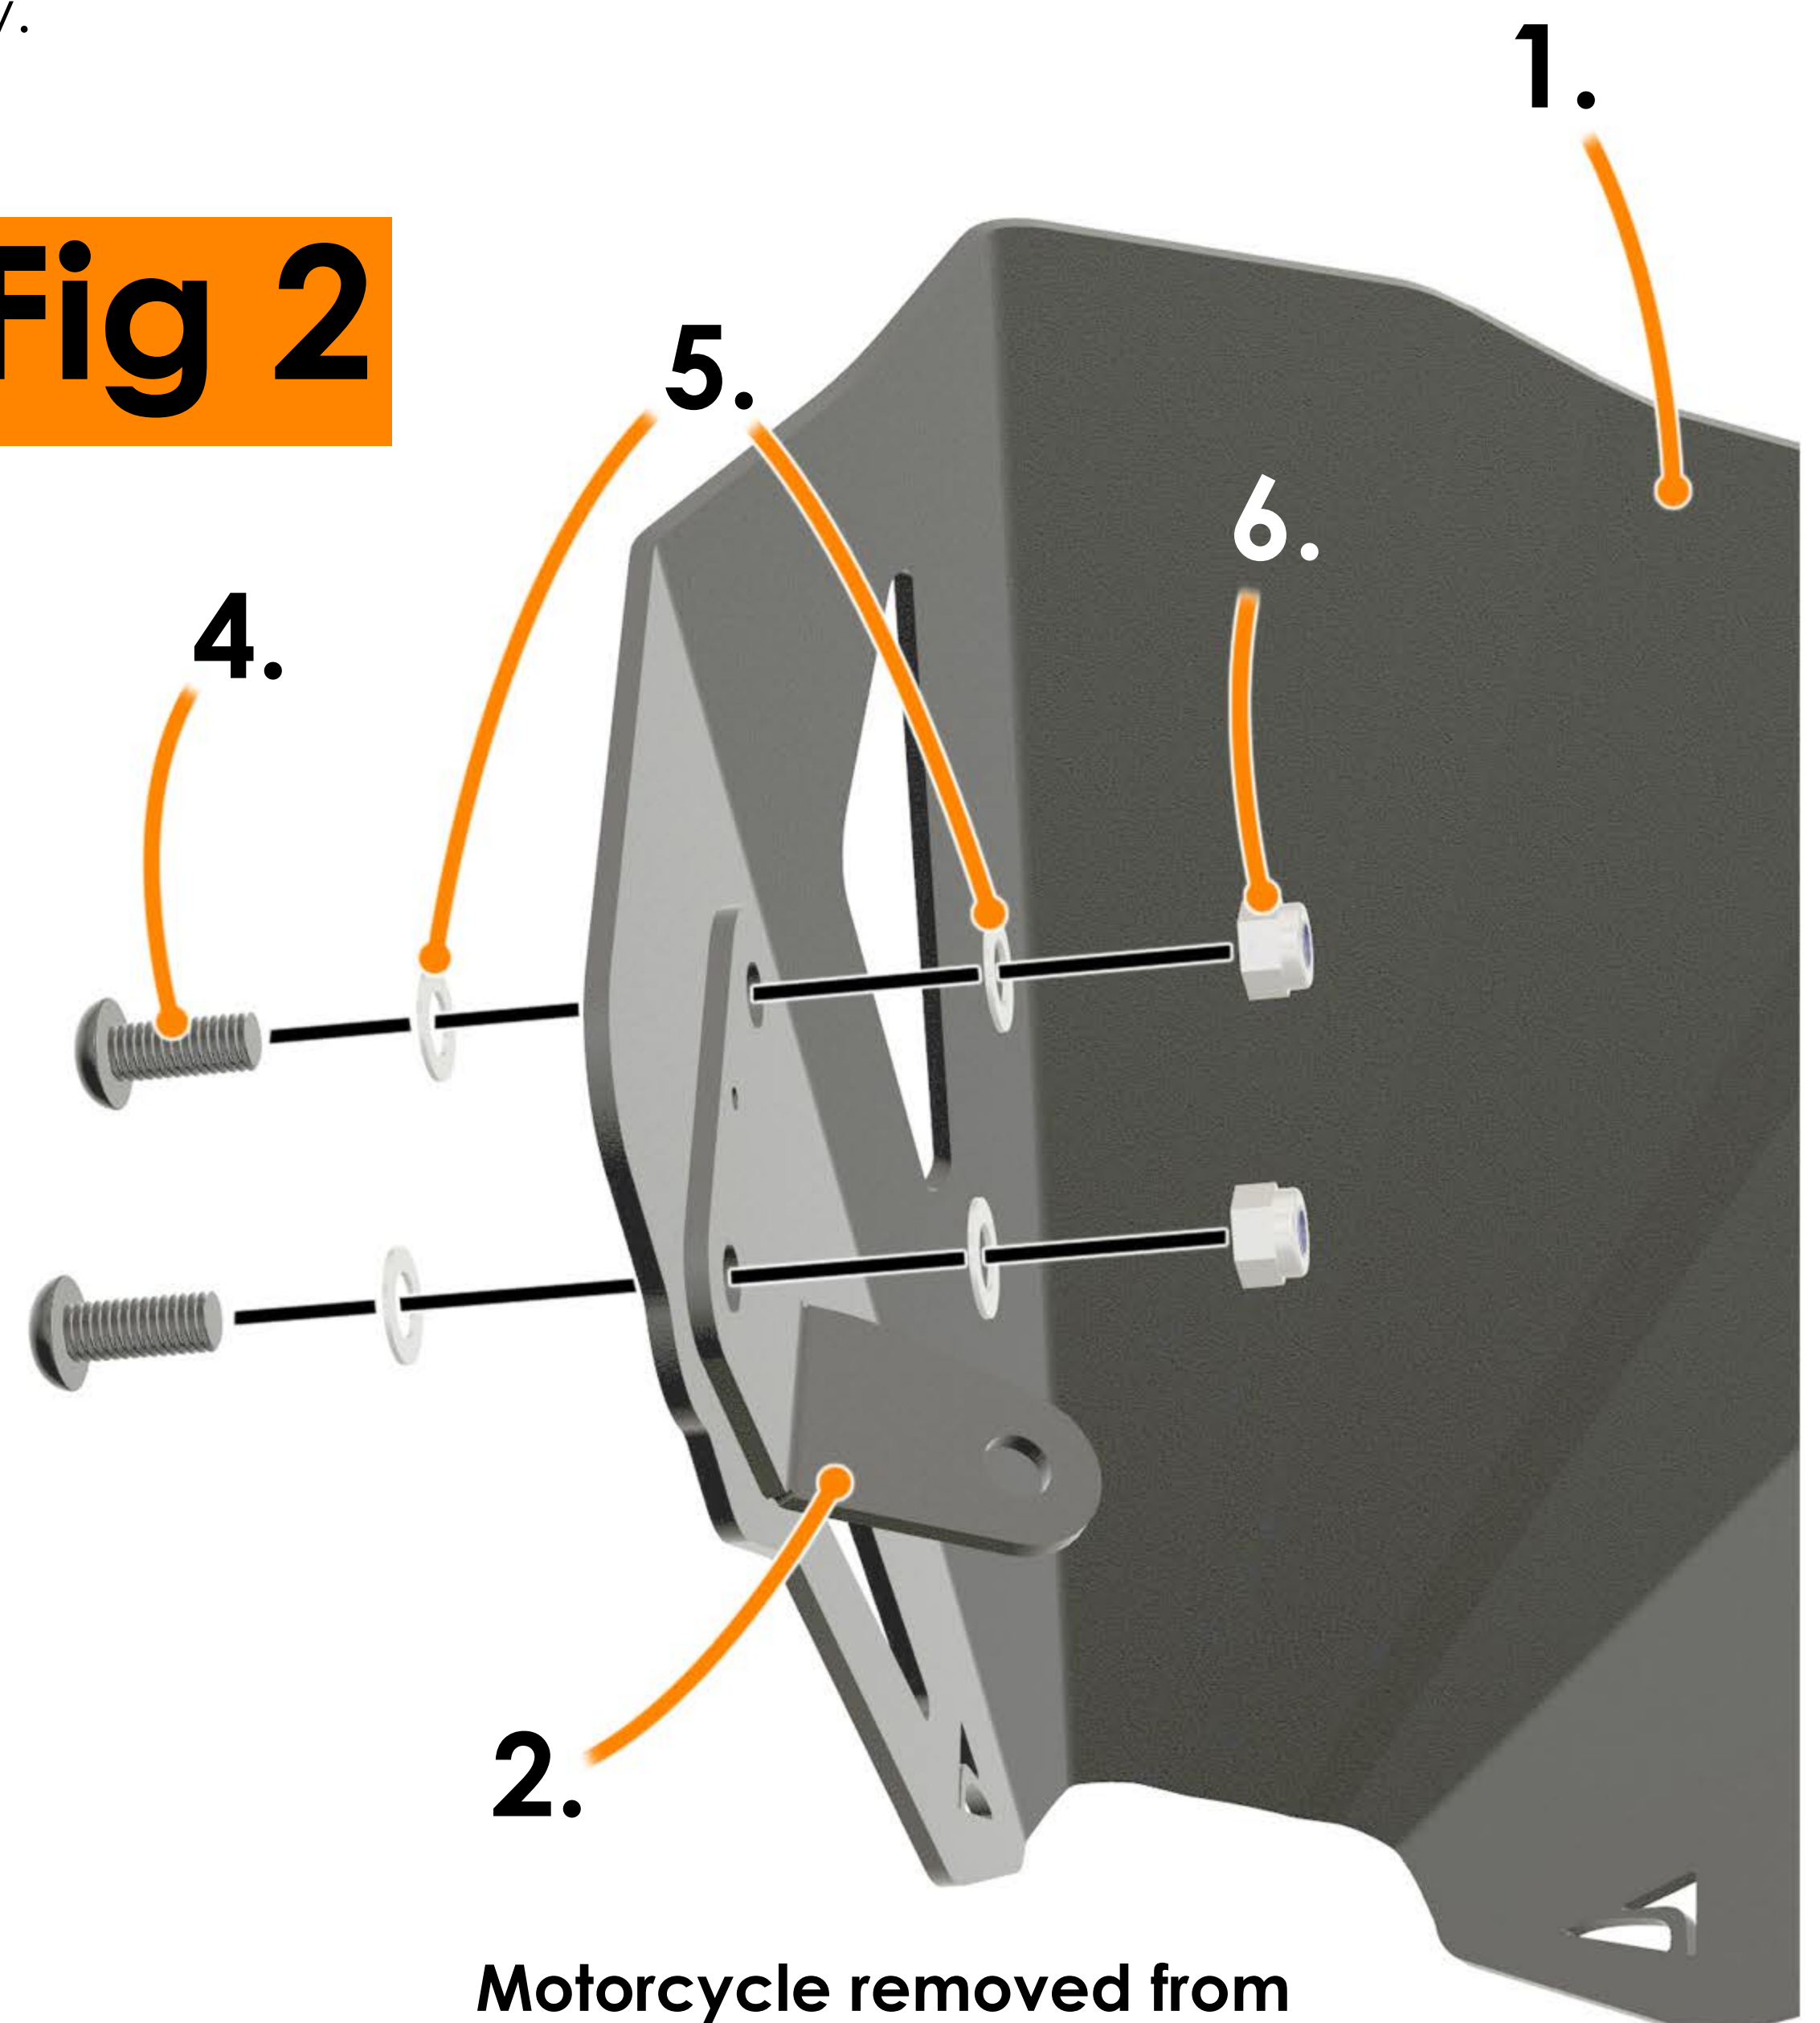

Motorcycle removed from illustration for better visibility.

