


## 26700 Triumph Speed 400 Fly Screen 2024> Fitting Instructions

### Kit Includes:

|     |    |            |                                                                  |
|-----|----|------------|------------------------------------------------------------------|
| 1.  | X1 | C26700     | Fly Screen                                                       |
| 2.  | X1 | CFK26700A  | Bracket (LHS)                                                    |
| 3.  | X1 | CFK26700B  | Bracket (RHS)                                                    |
| 4.  | X4 | CBOLM60002 | M6 X 12 Button Head Bolt                                         |
| 5.  | X8 | CWASM60003 | M6 Washer                                                        |
| 6.  | X4 | CNUTM60003 | M6 Nyloc Nut                                                     |
| 7.  | X2 | CBOLM80001 | M8 x 35 Socket Cap Bolt                                          |
| 8.  | X2 | CSPAM80002 | M8 Spacer                                                        |
| 9.  | X1 | CFOA0005   | Circular Foam Pad                                                |
| 10. | X1 | SMOT001    | Screen & Kit (X3 Well Nut, M5 x 16 Bolt, M5 Washer and Bolt Cap) |

### Assembly Instructions

- Begin by removing the OEM Bolts from the Head Unit as shown in '**FIG. 1**'. Take care when removing the bolts as the Head Unit will become loose.
- Using the M6 fittings provided (Items 4, 5 and 6) loosely attach the Brackets (Items 2 and 3) to the Fly Screen (Item 1). See '**FIG. 3**' for reference.
- Attach the Circular Foam Pad (Item 9) to the inside of the Fly Screen. See '**FIG. 2**' for reference.
- Loosely fit the Fly screen to the motorcycle, lining up the bracket holes with the mounting points. See '**FIG. 1**' for reference.
- Using the M8 fixings provided (Items 7 and 8) loosely fit the flyscreen to the mounting points. See '**FIG. 3**' for reference.
- Once the Fly Screen is in the correct position, fully tighten all fixings.

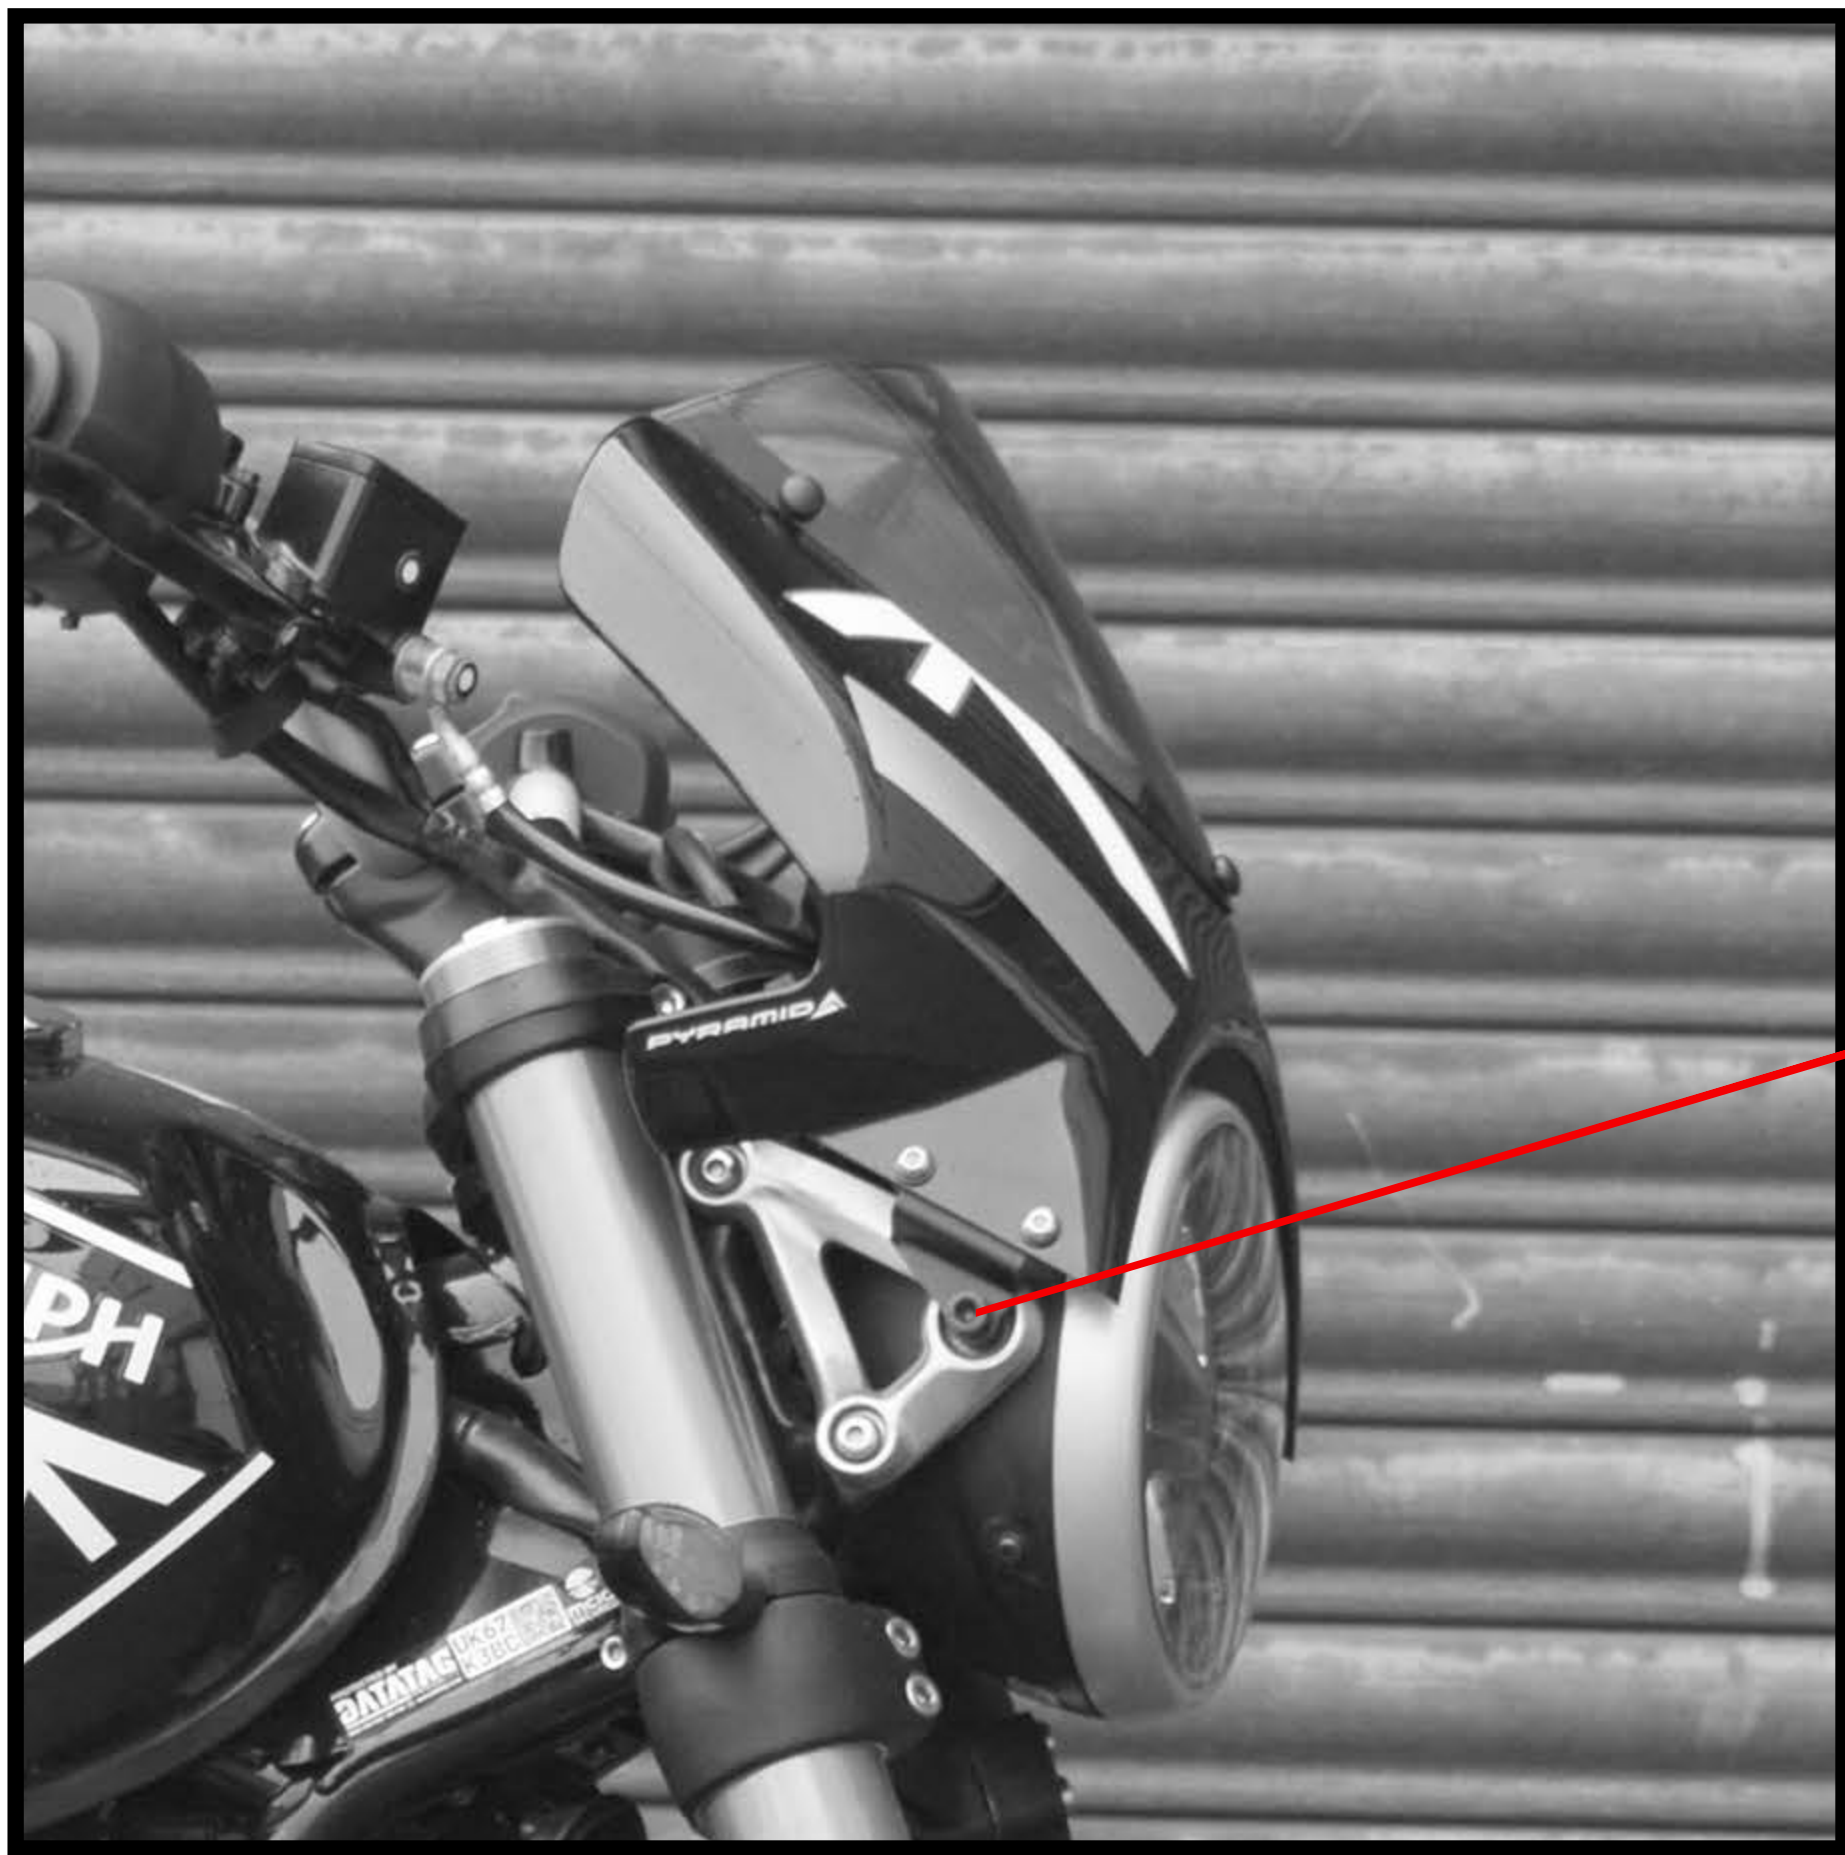

**FIG. 1**

OEM Bolts  
Mounting Points

### Please Note:


We advise that all fixings  
are checked periodically.

Any questions?  
sales@pyramidmoto.co.uk  
+44 (0)1427 677990  
www.pyramidmoto.co.uk



Follow us on social media and  
feel free to leave us a review!

Circular Foam Pad

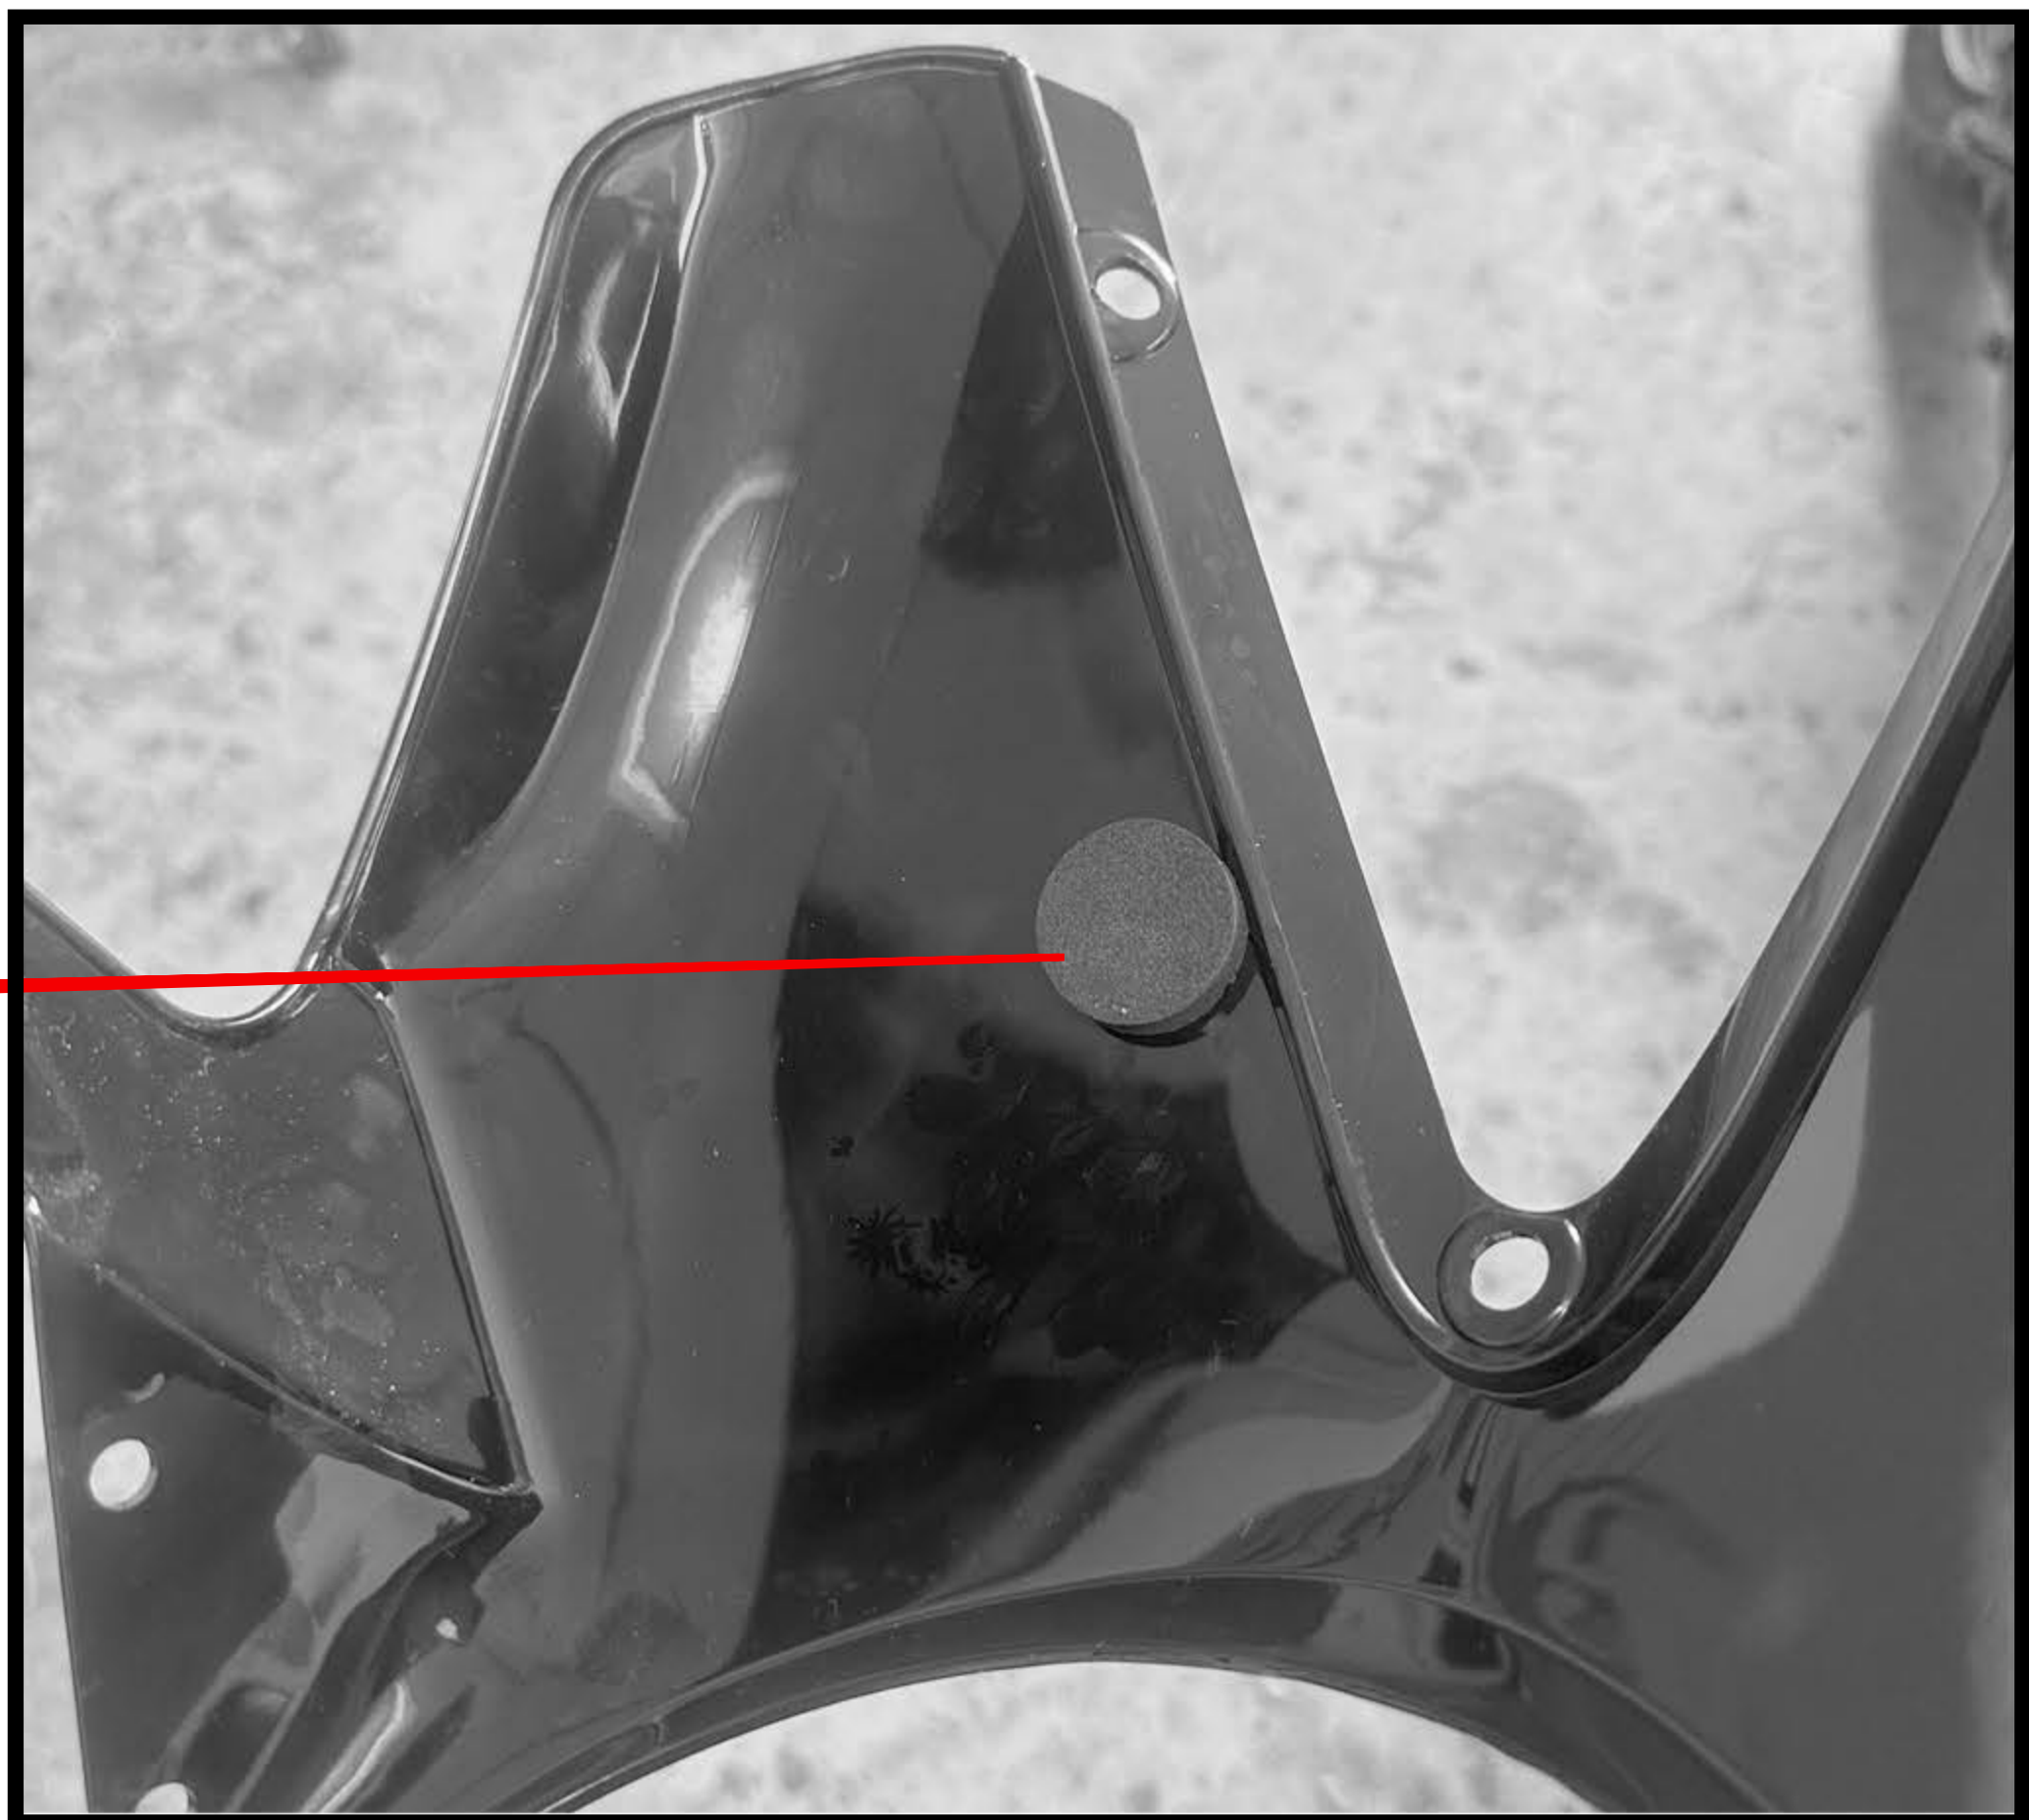


**FIG. 2**

## 26700 Triumph Speed 400 Fly Screen 2024> Fitting Instructions

Please rotate the page for full clarity of the illustration below.

FIG. 3

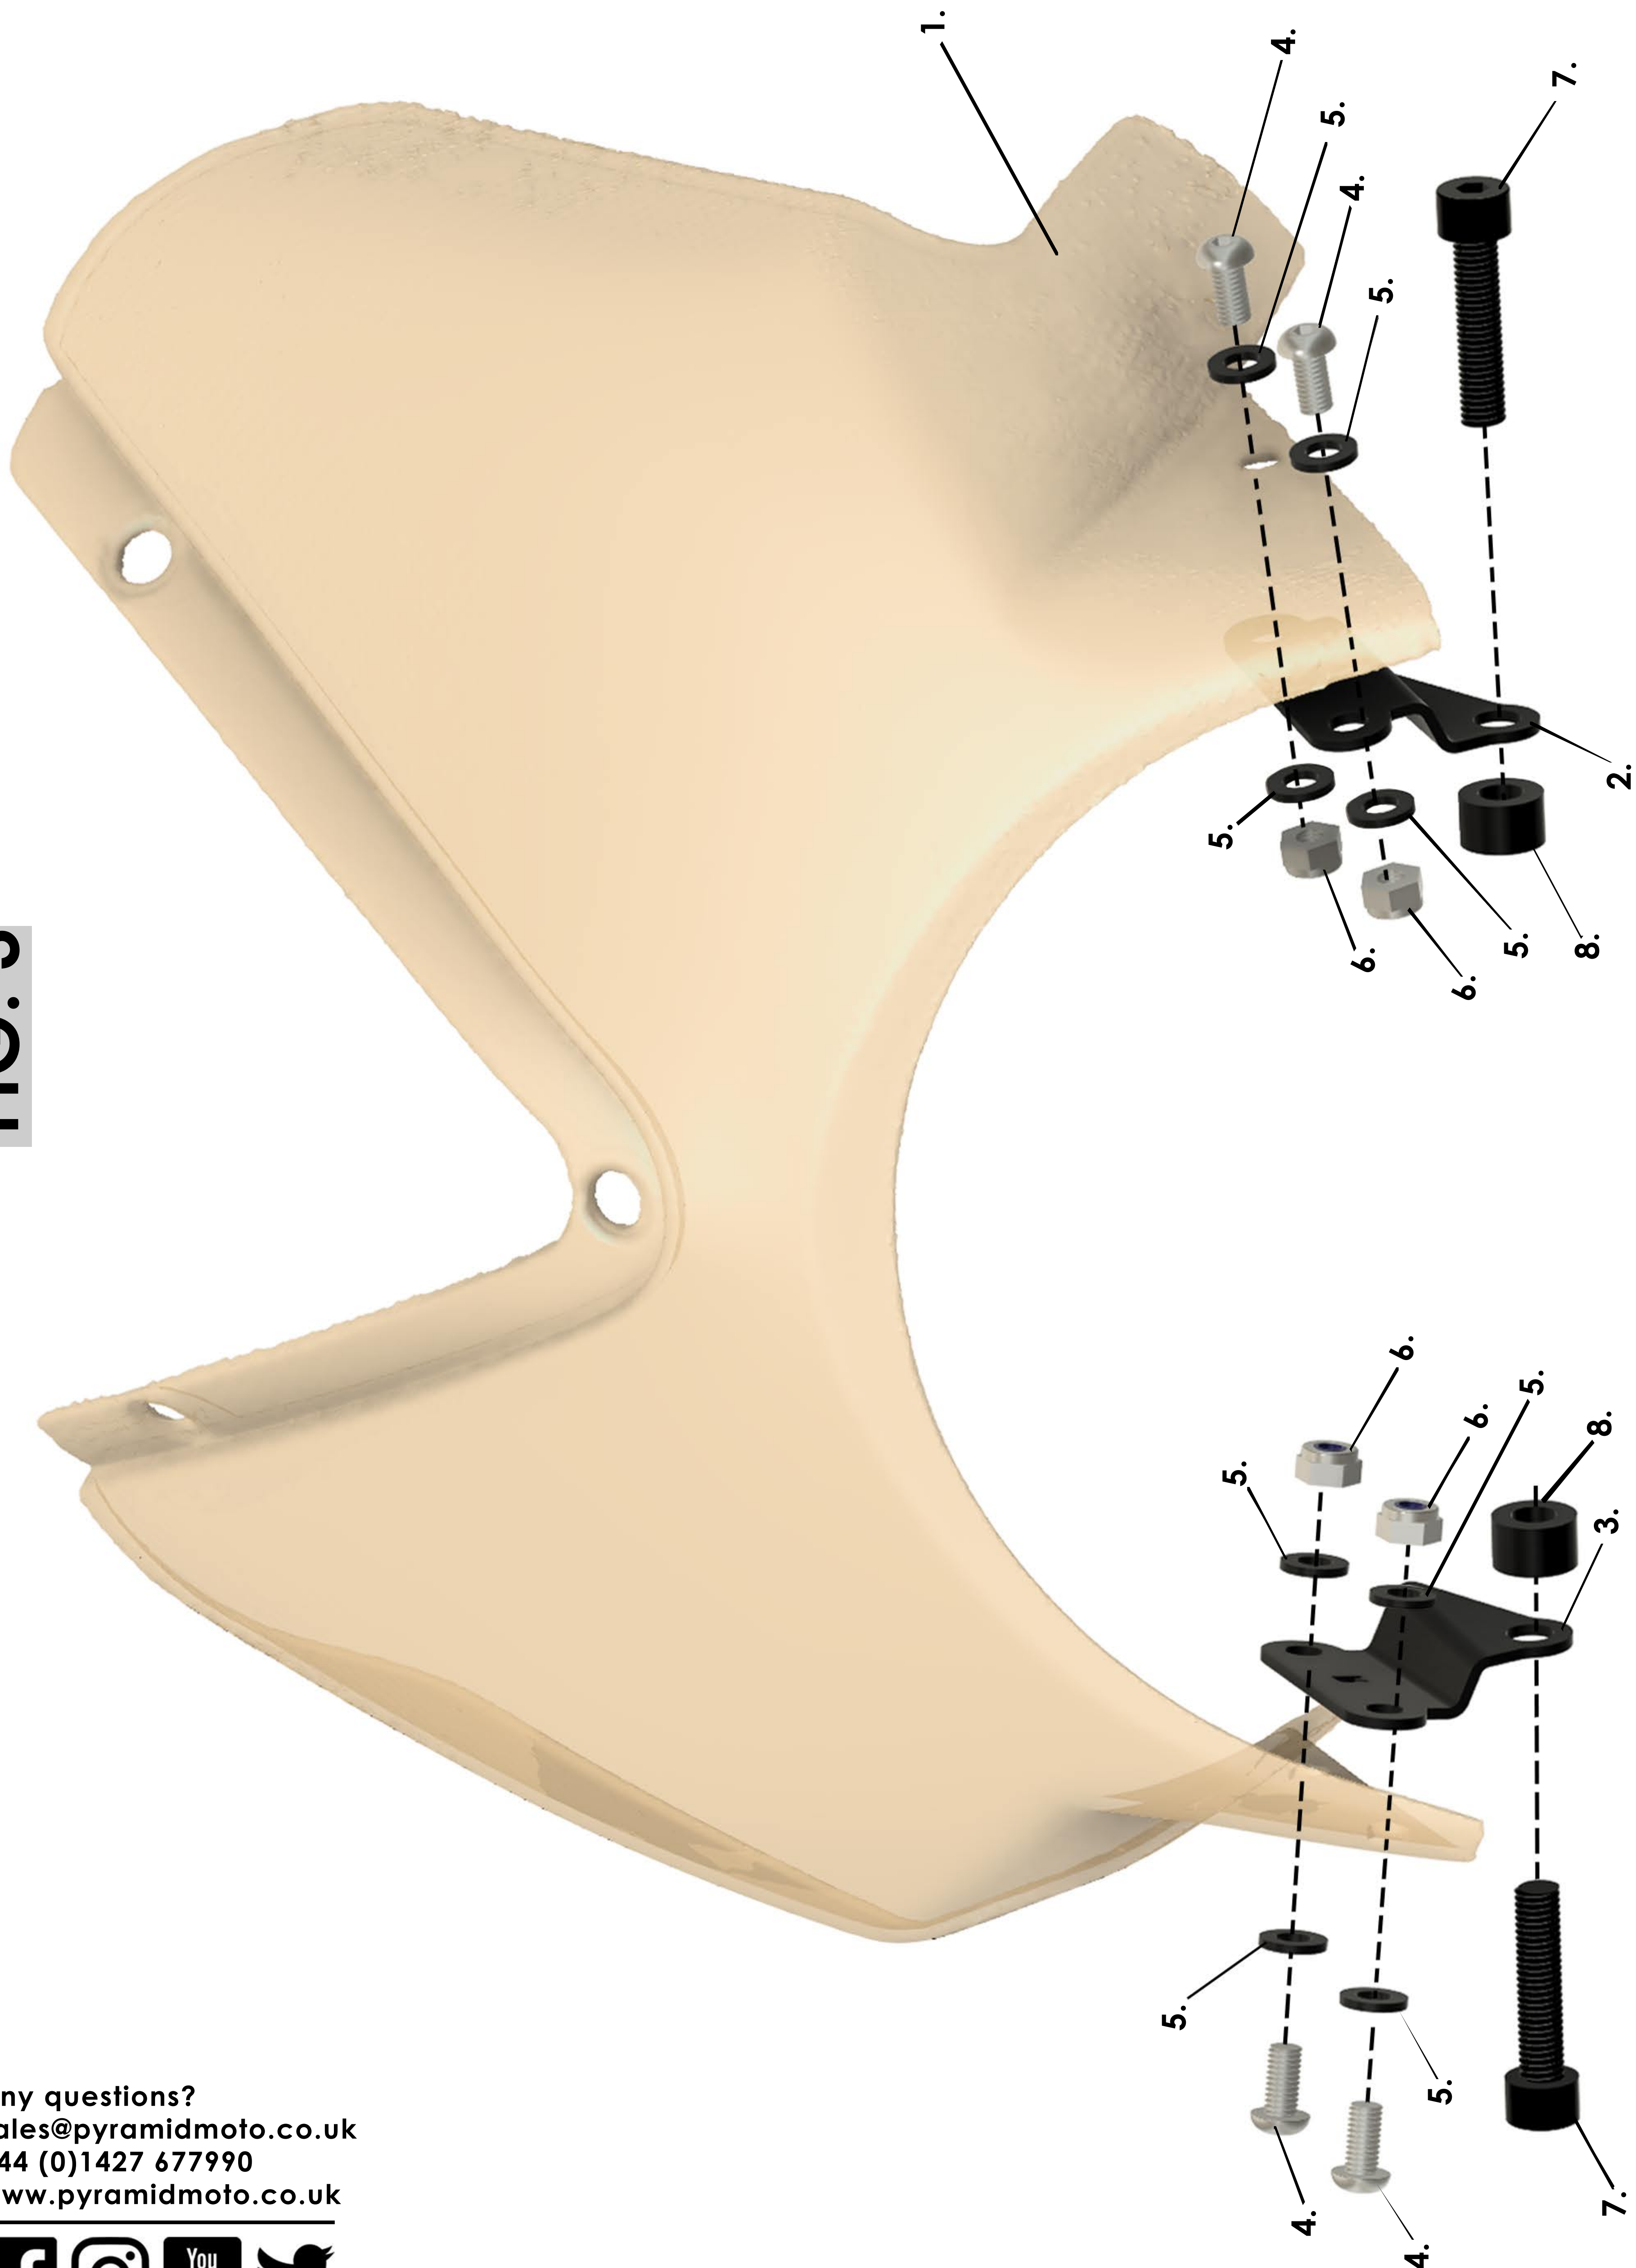

Any questions?  
[sales@pyramidmoto.co.uk](mailto:sales@pyramidmoto.co.uk)  
 +44 (0)1427 677990  
[www.pyramidmoto.co.uk](http://www.pyramidmoto.co.uk)



Follow us on social media and  
 feel free to leave us a review!