

Motorschutzbügel

BMW R 850 R bis Bj. 2002

BMW R 1100 R

Ausführung B


Hepco & Becker GmbH
An der Steinmauer 6
66955 Pirmasens
Germany

Tel: +49 (0) 6331 1453 100
Fax: +49 (0) 6331 1453 120
e-mail: vertrieb@hepco-becker.de

Internet: www.hepco-becker.de



Artikel-Nummer: 502.902 00 01 schwarz
502.902 00 02 chrom

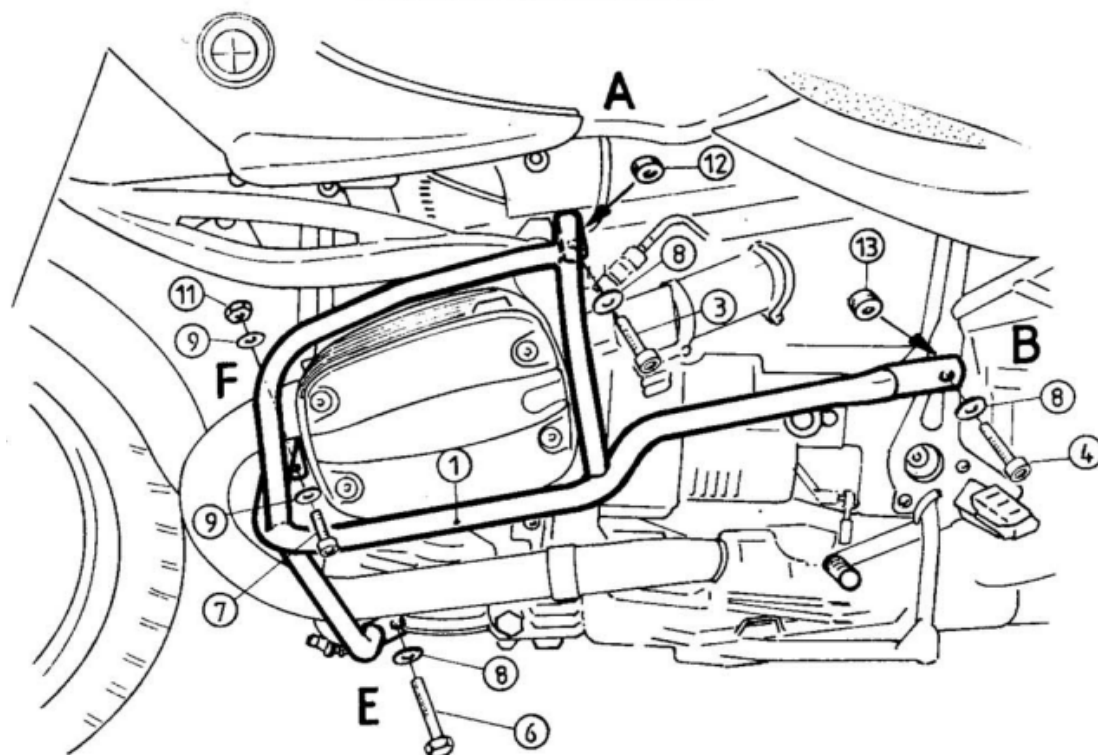


LEFT SIDE

Assembly Instructions

A TORX key T50 is required to remove the original screws!

Part #	Quantity	Description
1	1	Engine protection bar - left
3	1	Allen bolt M10 x 55
4	1	Allen bolt M10 x 55
6	1	Hex bolt M10 x 90
7	1	Allen bolt M8 x 25
8	3	U-Washers $\varnothing 10.5\text{mm}$
9	2	U-Washers $\varnothing 8.4\text{mm}$
11	1	Self-locking nut M8
12	1	Aluminum spacer $\varnothing 18 \times \varnothing 11 \times 12\text{mm}$ (from 1997+)
	1	Aluminum spacer $\varnothing 18 \times \varnothing 11 \times 35\text{mm}$ (through -1996)
13	1	Aluminum spacer $\varnothing 18 \times \varnothing 11 \times 12\text{mm}$ (from 1997+)
	1	Aluminum spacer $\varnothing 18 \times \varnothing 11 \times 26\text{mm}$ (through -1996)

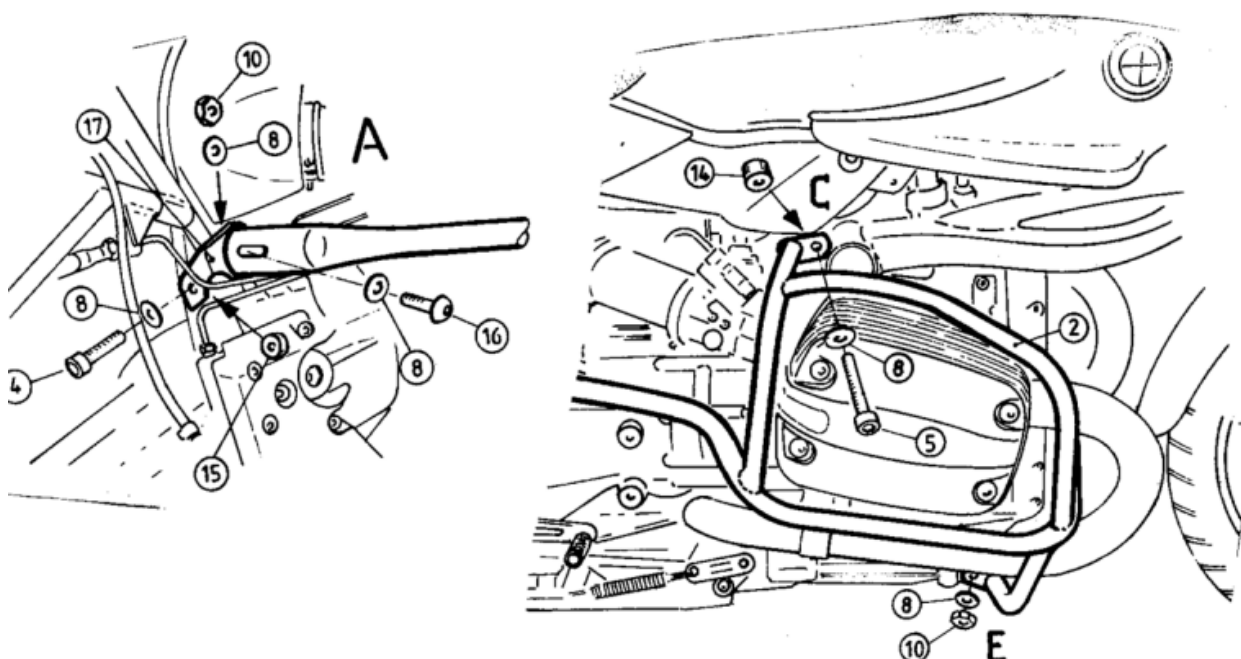

RIGHT SIDE

Part #	Quantity	Description
2	1	Engine protection bar - right
4	1	Allen bolt M10 x 65
5	1	Allen bolt M10 x 90
8	5	U-Washers Ø10.5mm
10	2	Self-locking nut M10
14	1	Aluminum spacer Ø18 x Ø11 x 48mm (from 1997+)
	1	Aluminum spacer Ø18 x Ø11 x 62mm (through -1996)
15	1	Aluminum spacer Ø18 x Ø11 x 17mm (from 1997+)
	1	Aluminum spacer Ø18 x Ø11 x 30mm (through -1996)
16	1	Pan head screw M10 x 25
17	1	Retaining tab (make sure that the brake circuits do not rub against the tab!)

After assembly, check all screw connections for tightness!

Please note our attached service information