

36500M Triumph Speed / Scrambler 400 X Luggage Plate 2023> Fitting Instructions

Kit Includes:

1.	X1	C36500M	Cover Plate
2.	X1	CFK36500A	Mounting Plate
3.	X4	CBOLM60009	M6 x 20mm Flanged Button-Head Bolt
4.	X5	CBOLM60014	M6 x 20mm Countersunk Bolt
5.	X5	CWASM60001	M6 Flat Washer
6.	X5	CNUTM60003	M6 Nyloc Nut
7.	X5	CSPAM60003	M6 Spacer

OEM Parts (From the Motorcycle):

8.	X4	OEM Fixing	M6 Flanged Nut
----	----	------------	----------------

Please Note: This product is designed to be compatible with the Triumph Rear Rack only.

Assembly Instructions

- Begin the installation by removing the existing rear rack plate. Please ensure you retain the 4 x M6 flanged nuts (**Item 8**).
- Place the mounting plate (**Item 2**) so that the 4 x slotted holes sit centrally over the mounting locations. **Loosely attach** 4 x M6 flanged button-head bolts (**Item 3**) and the 4 x OEM M6 nuts (**Item 8**). Once aligned centrally, **fully tighten** the fixings.
- Place 5 x M6 spacers (**Item 7**) over the plate mounting holes. Subsequently lay the cover plate (**Item 1**) over the spacers.
- Using 5 x M6 countersunk bolts (**Item 4**), M6 washers (**Item 5**) and M6 nyloc nuts (**Item 6**), **loosely thread** the bolts so that the cover plate is attached to the mounting plate. Once fitted, **fully tighten** all fixings evenly.
- **Please avoid overtightening all fixings.**
- Your Pyramid Luggage Plate installation is now complete.

Please Note: We advise that all fixings are checked periodically.

FIG. 1



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and
feel free to leave us a review!

36500M Triumph Speed / Scrambler 400 X Luggage Plate 2023> Fitting Instructions

Please refer to 'FIG. 2' below as reference to the assembly of the product.

FIG. 2

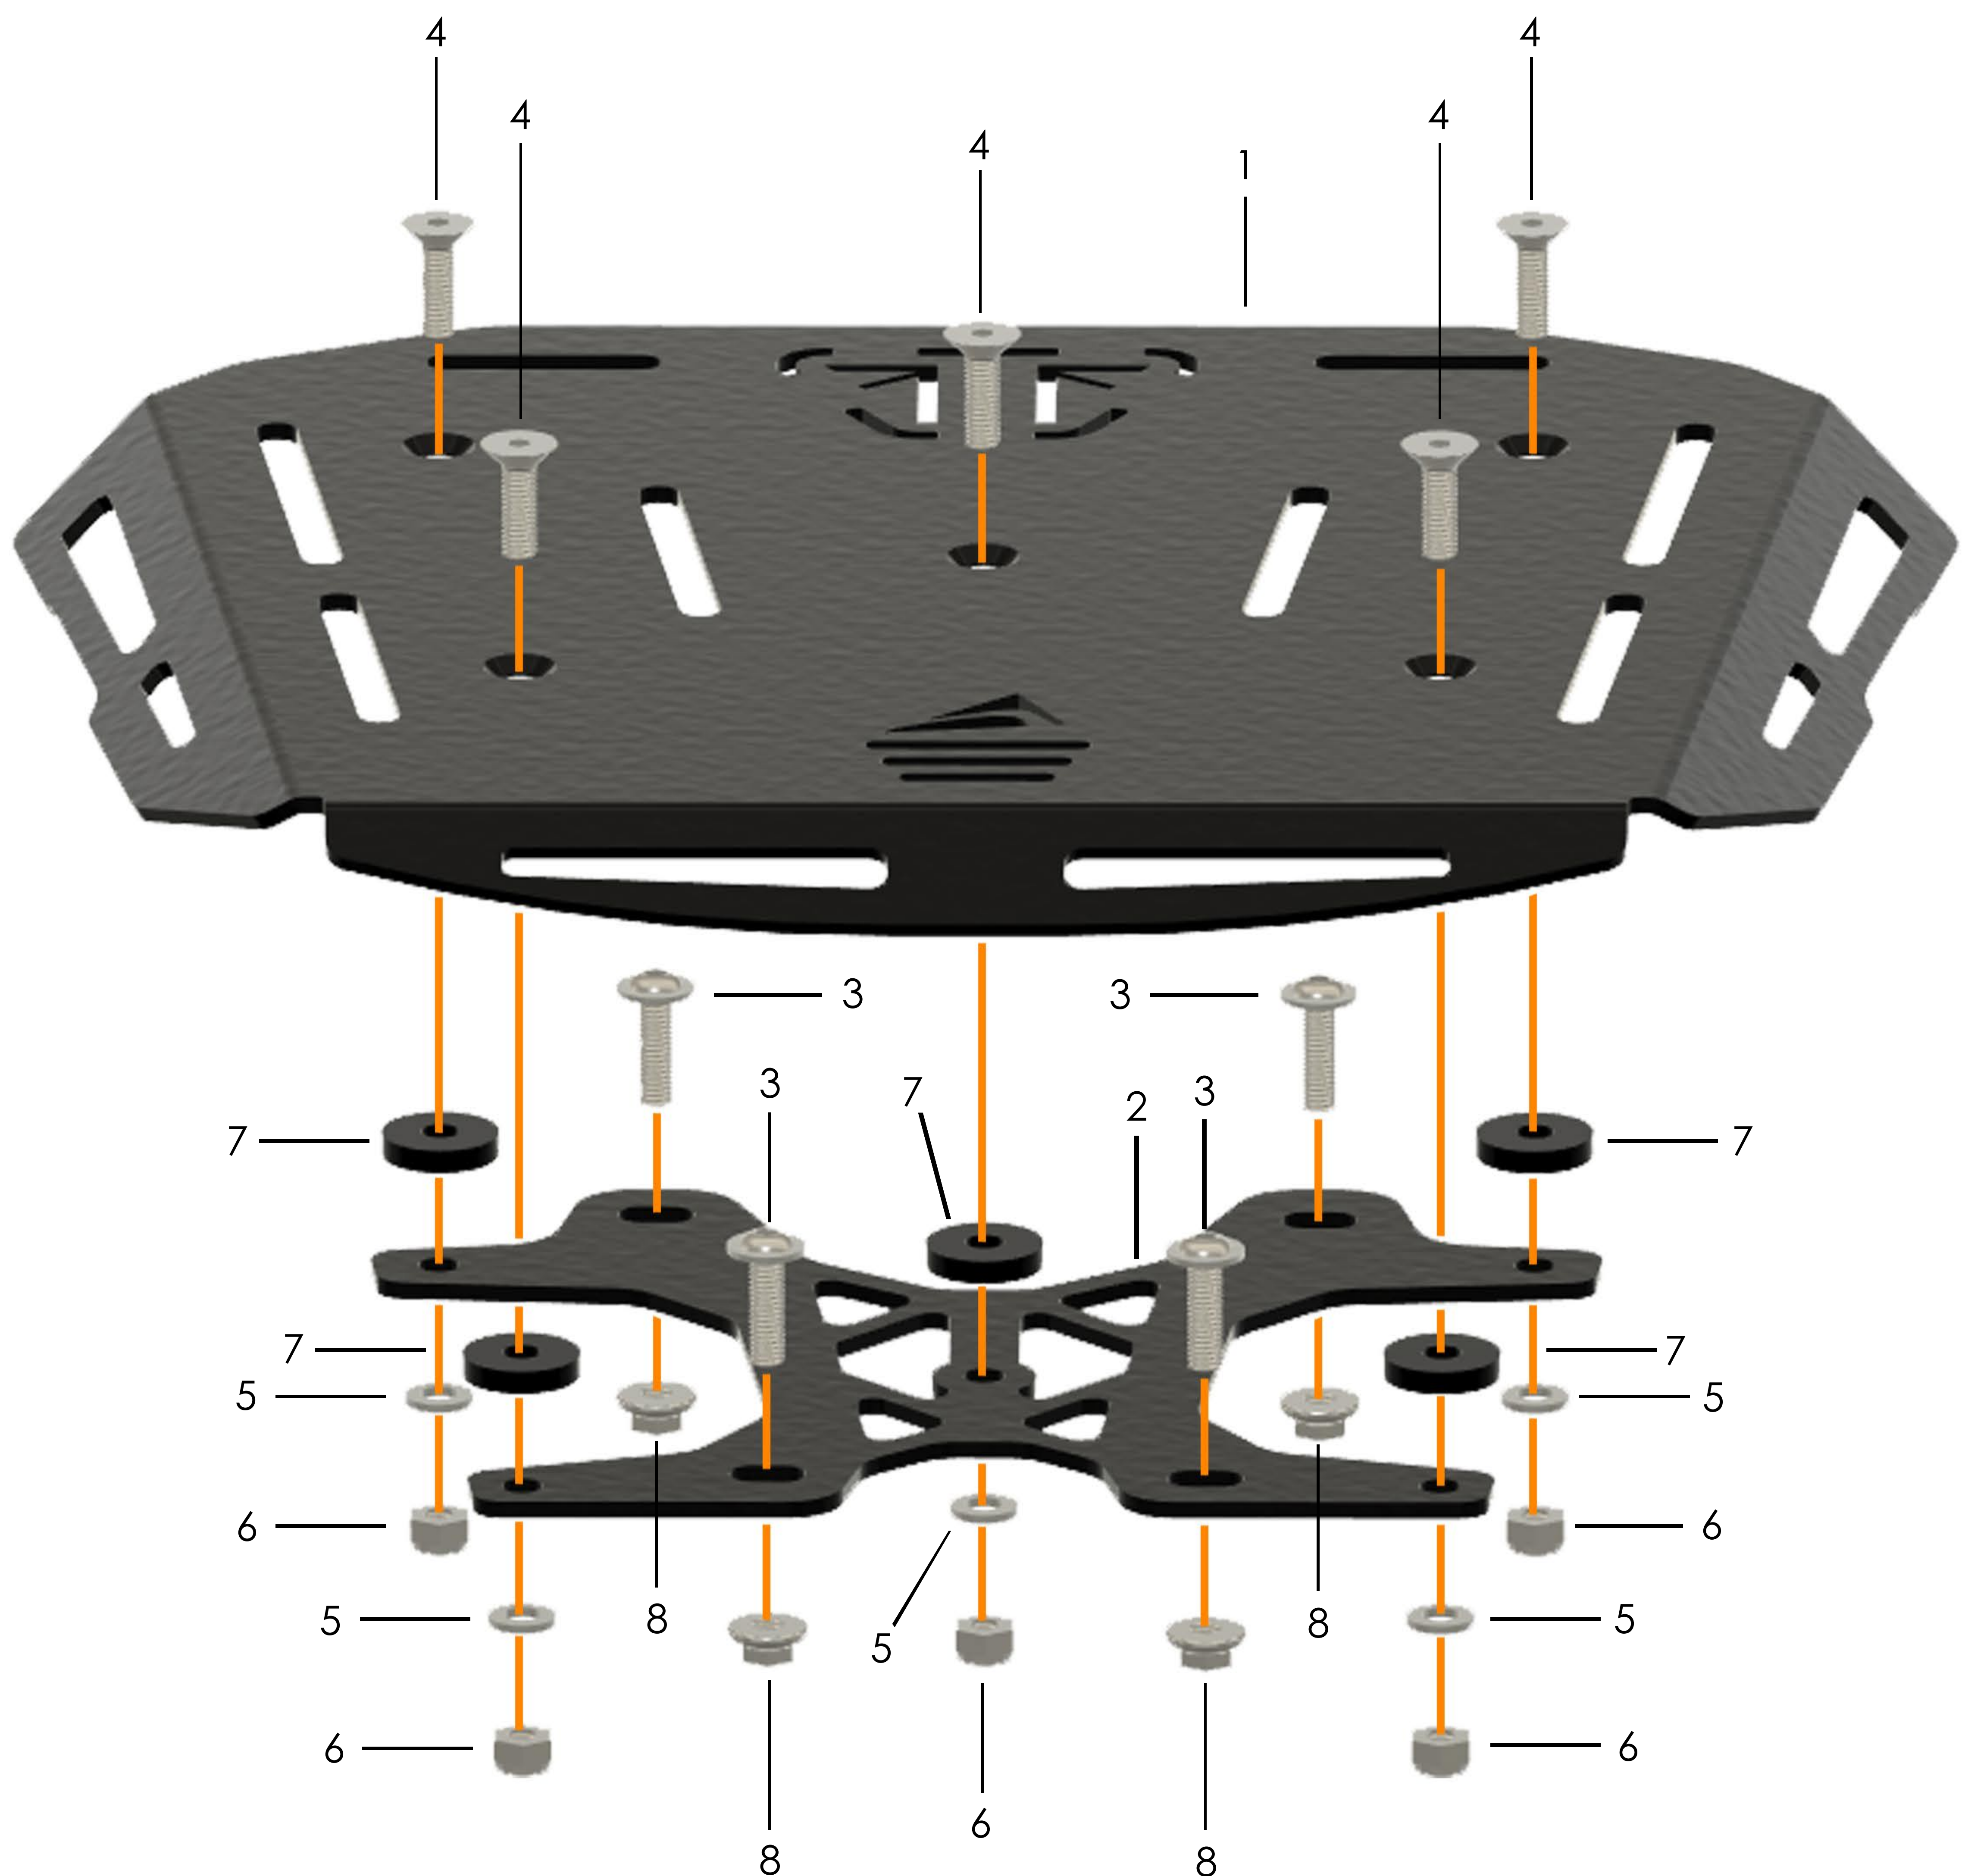

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!