

36036

Triumph Tiger Sport 800 Frontal Wing

Fitting Instructions

PYRAMID

Kit Includes:

1.	X1	C36036	Wing
2.	X2	CBOLM50008	M5 x 16mm Bolt


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by removing the OEM bolts from the underside of the headlight.
- Fit the wing using the bolts provided as shown in the image below.
- Fully tighten all mounting points and check fixings periodically.

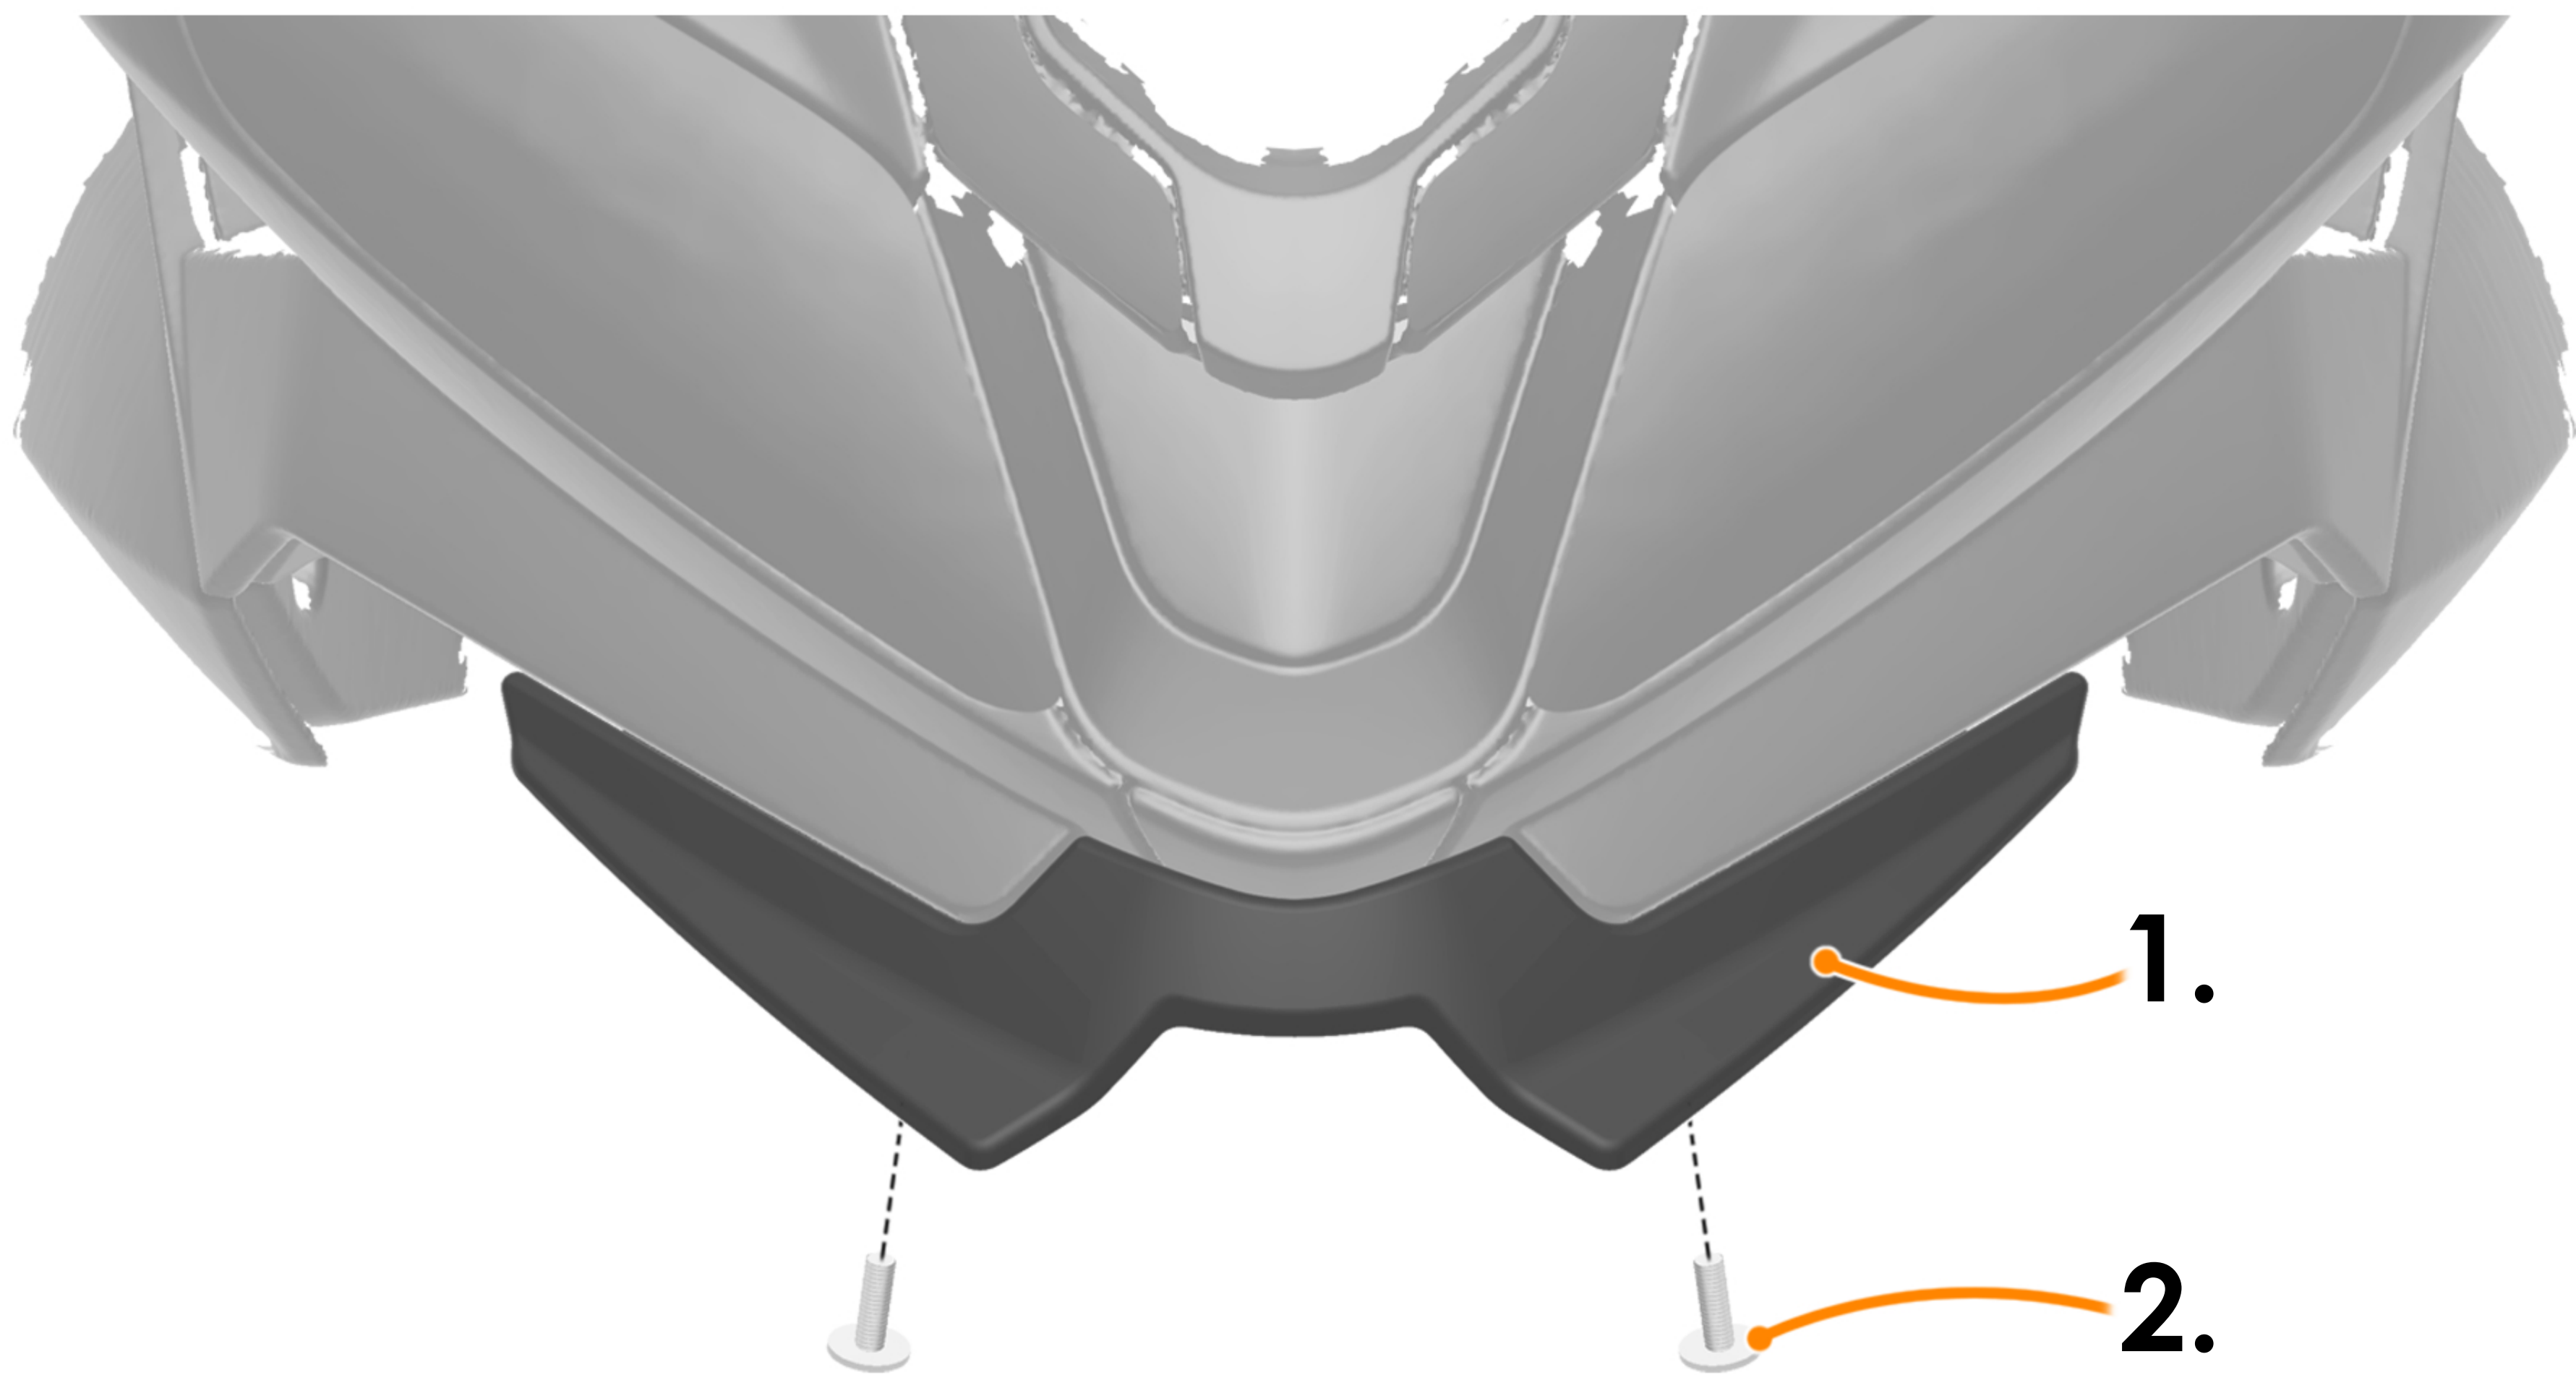

36036

Triumph Tiger Sport 800 Frontal Wing

Fitting Instructions

PYRAMID

Kit Includes:

1.	X1	C36036	Wing
2.	X2	CBOLM50008	M5 x 16mm Bolt

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by removing the OEM bolts from the underside of the headlight.
- Fit the wing using the bolts provided as shown in the image below.
- Fully tighten all mounting points and check fixings periodically.

