

22199 Yamaha MT-09 Fly Screen 2024> Fitting Instructions

Kit Includes:

1.	X1	C22199	Fly Screen
2.	X1	CFK22199	Bracket
3.	X2	CBOLM60013	M6 x 16 Countersunk Bolt
4.	X2	CNUTM60008	M6 Cage Nut (pre-fitted)
5.	X1	CFOA0002	Foam Strip (103mm length) (pre-cut by Pyramid)

OEM Parts (From the Motorcycle):

6.	X2	OEM Screw
7.	X2	OEM M5 Washer
8.	X2	OEM M6 Bolt
9.	X2	OEM M6 Washer

Assembly Instructions

- Begin by removing the OEM fixings as shown in '**FIG. 1**'. Take care when removing the OEM fixings as the Head Unit will become loose.
- Using the OEM Screws and M5 OEM Washers (Items 6 and 7), fit the Bracket (Item 2) to the mounting points shown in '**FIG. 1**' and fully tighten the fixings.
- Fit the Foam Strip (Item 5) along the top edge of the Fly Screen (Item 1). See '**FIG. 2**' for reference.
- Using the OEM M6 Bolts and Washers (Items 8 and 9) loosely fit the Fly Screen to the mounting points shown in '**FIG. 1**'.
- Align the holes on the Fly Screen with the holes on the Bracket and loosely fit them using the M6 Countersunk Bolts provided (Item 3). See '**FIG. 2**' for reference.
- Once the Fly Screen is in the correct position, fully tighten all fixings.

OEM Screws
Bracket Mounting Points

OEM M6 Bolts
Mounting Points

Please Note:

We advise that all fixings
are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

FIG. 1




22199 Yamaha MT-09 Fly Screen 2024> Fitting Instructions

Please rotate the page for full clarity of the illustration below.

FIG. 2

5. Foam Strip to be fitted here

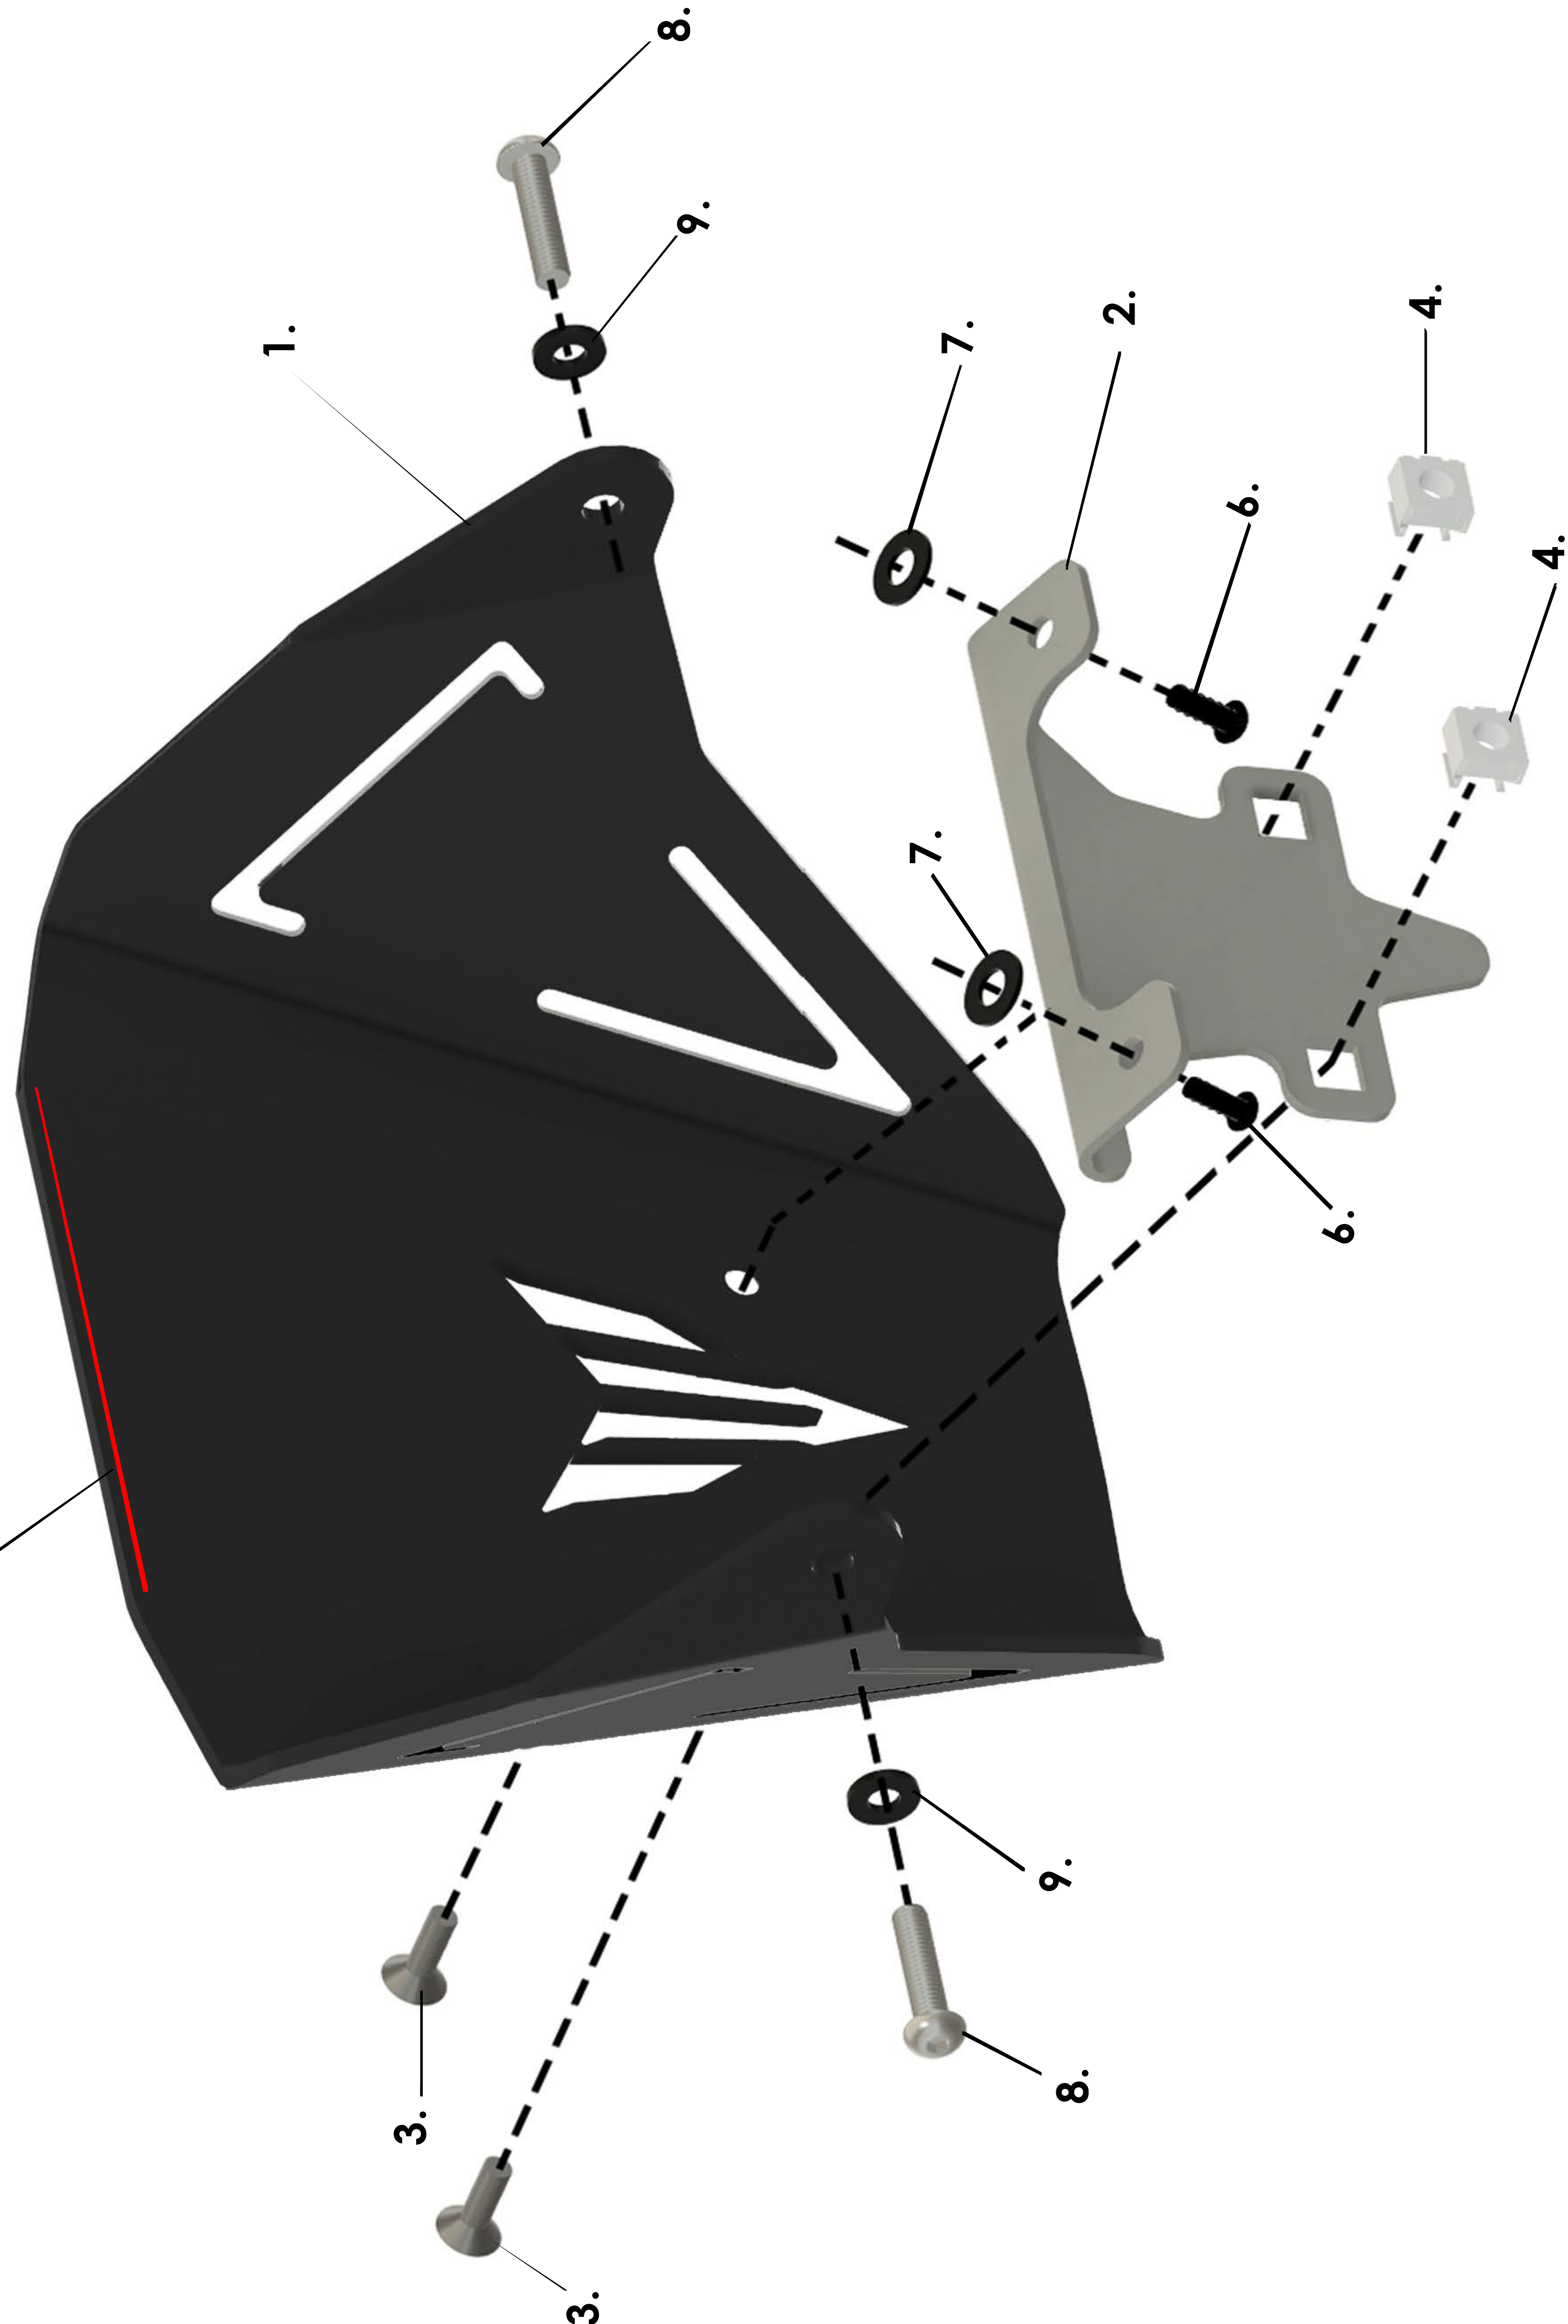

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!