

07650M/S Triumph Speed / Scrambler 400 X 2023> Fitting Instructions

Kit Includes:

1.	X1	07650M/S	Chainguard
2.	X2	CWASM100001	M10 Flat Washer

OEM Parts (From the Motorcycle):

3.	X2	OEM Fixing	M6 Collared Chainguard Bolt
----	----	------------	-----------------------------

Please note: The assembly for the Pyramid Chainguard remains the same for both the Black and Silver finishes, denoted 'M' and 'S' respectively.

Assembly Instructions

- Begin the installation by removing the 2 x OEM M6 collared bolts (**Item 3**) from the swinging arm, holding the OEM chainguard. Subsequently remove the OEM chainguard from the motorcycle.
- Reusing the 2 x OEM M6 collared bolts (**Item 3**), fit the Pyramid Chainguard (**Item 1**) and 2 x M10 washers (**Item 2**) to the motorcycle's swinging arm. Please **hand tighten** the bolts equally to ensure correct fitment. Please use '**FIG. 1**' for reference.
- Once in place, proceed to **fully tighten** the bolts.
- Your Pyramid Chainguard installation is now complete.

Please Note: We advise that all fixings are checked periodically.

FIG. 1

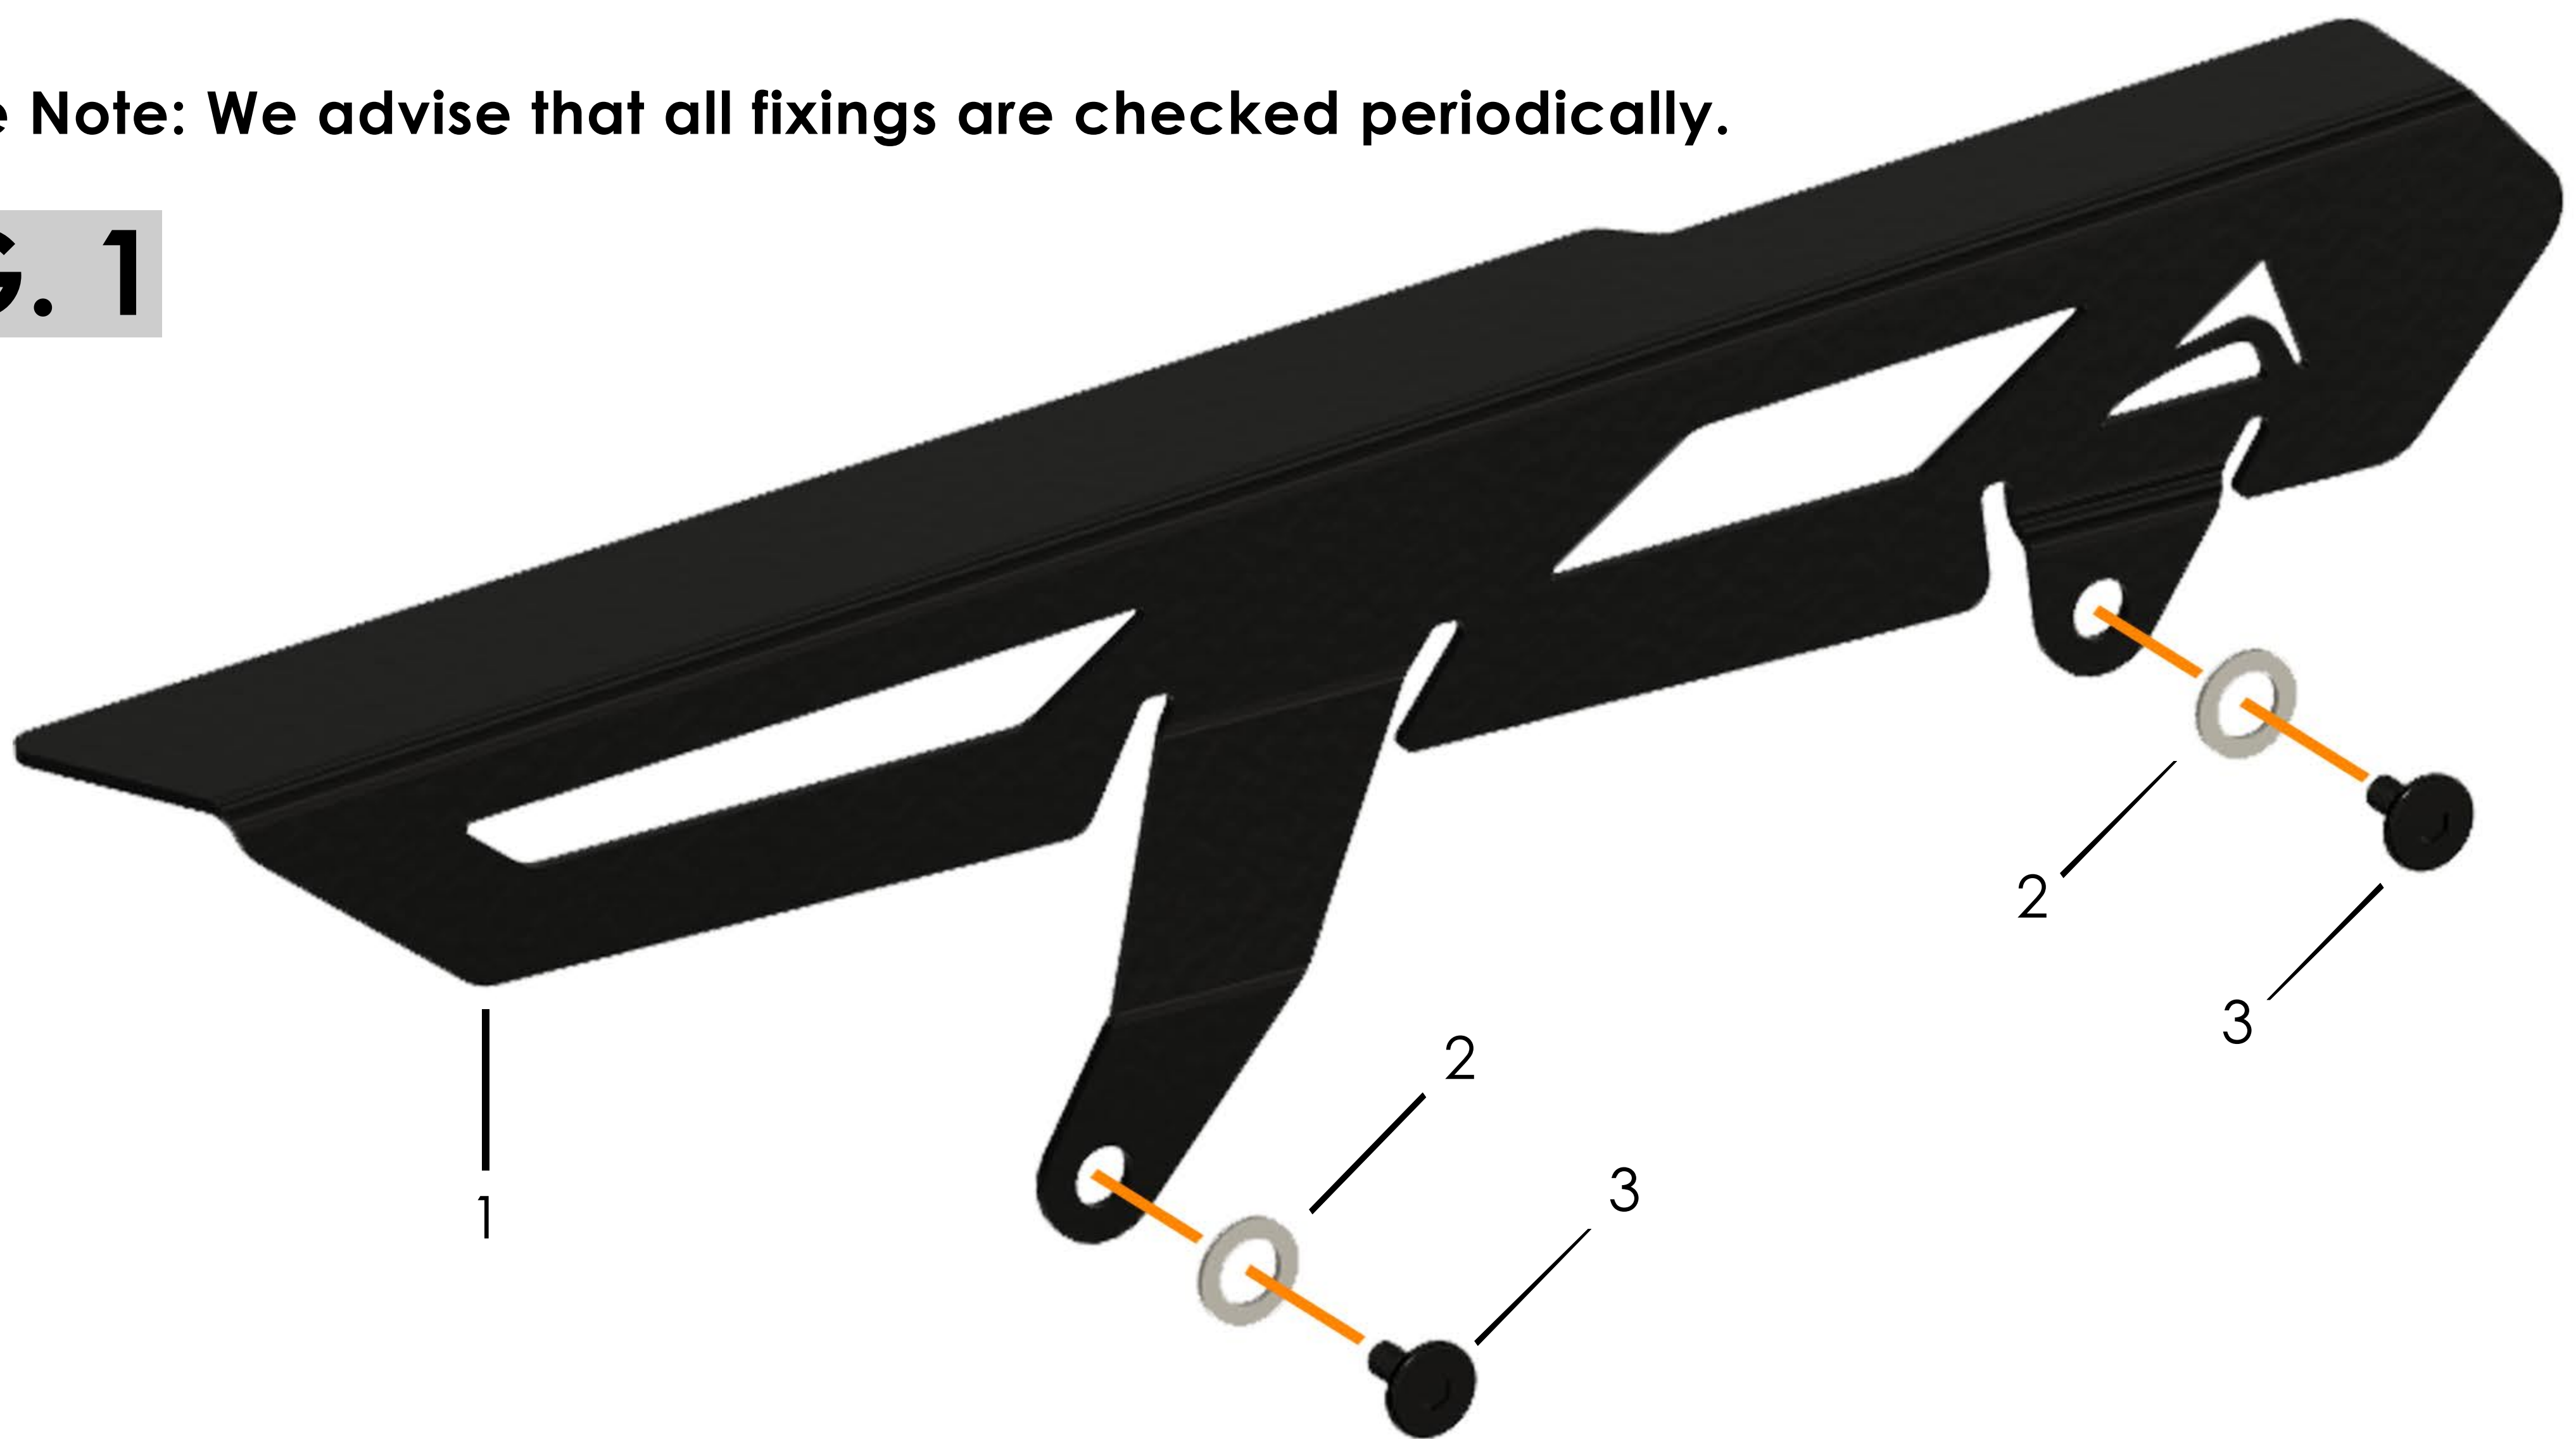


FIG. 2



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!