

071100 Honda Africa Twin + Transalp Hugger Fitting Instructions

Kit Includes:



1.	X1	C071100	Hugger
2.	X1	CFK071100A	Bracket A
3.	X1	CFK071100B	Bracket B
4.	X8	CBOLM60035	M6 x 16mm Bolt
5.	X5	CWASM60001	M6 Washer
6.	X5	CNUTM60003	M6 Nyloc Nut

OEM Fittings:

7.	X1	OEM Part	OEM Swingarm Bolt
----	----	----------	-------------------

Assembly Instructions

- Start by removing the OEM chainguard from the motorcycle. The three OEM mounting bolts are **not needed** for the fitment of the Pyramid hugger.
- Remove the OEM swingarm bolt securing the brake hose retainer - see **Fig 1**.
- Attach bracket B using the OEM swingarm bolt (removed in the previous step) and one M6 x 16mm bolt (included in the fitting kit) - see **Fig 1**.
- Loosely attach bracket A to the Pyramid hugger using two M6 x 16mm bolts, two M6 washers, and two M6 nyloc nuts - see **Fig 2**.
- Attach the Pyramid hugger to the motorcycle using the remaining fittings - see **Fig 3 + 4**.
- Fully tighten all mounting points and check fixings periodically.

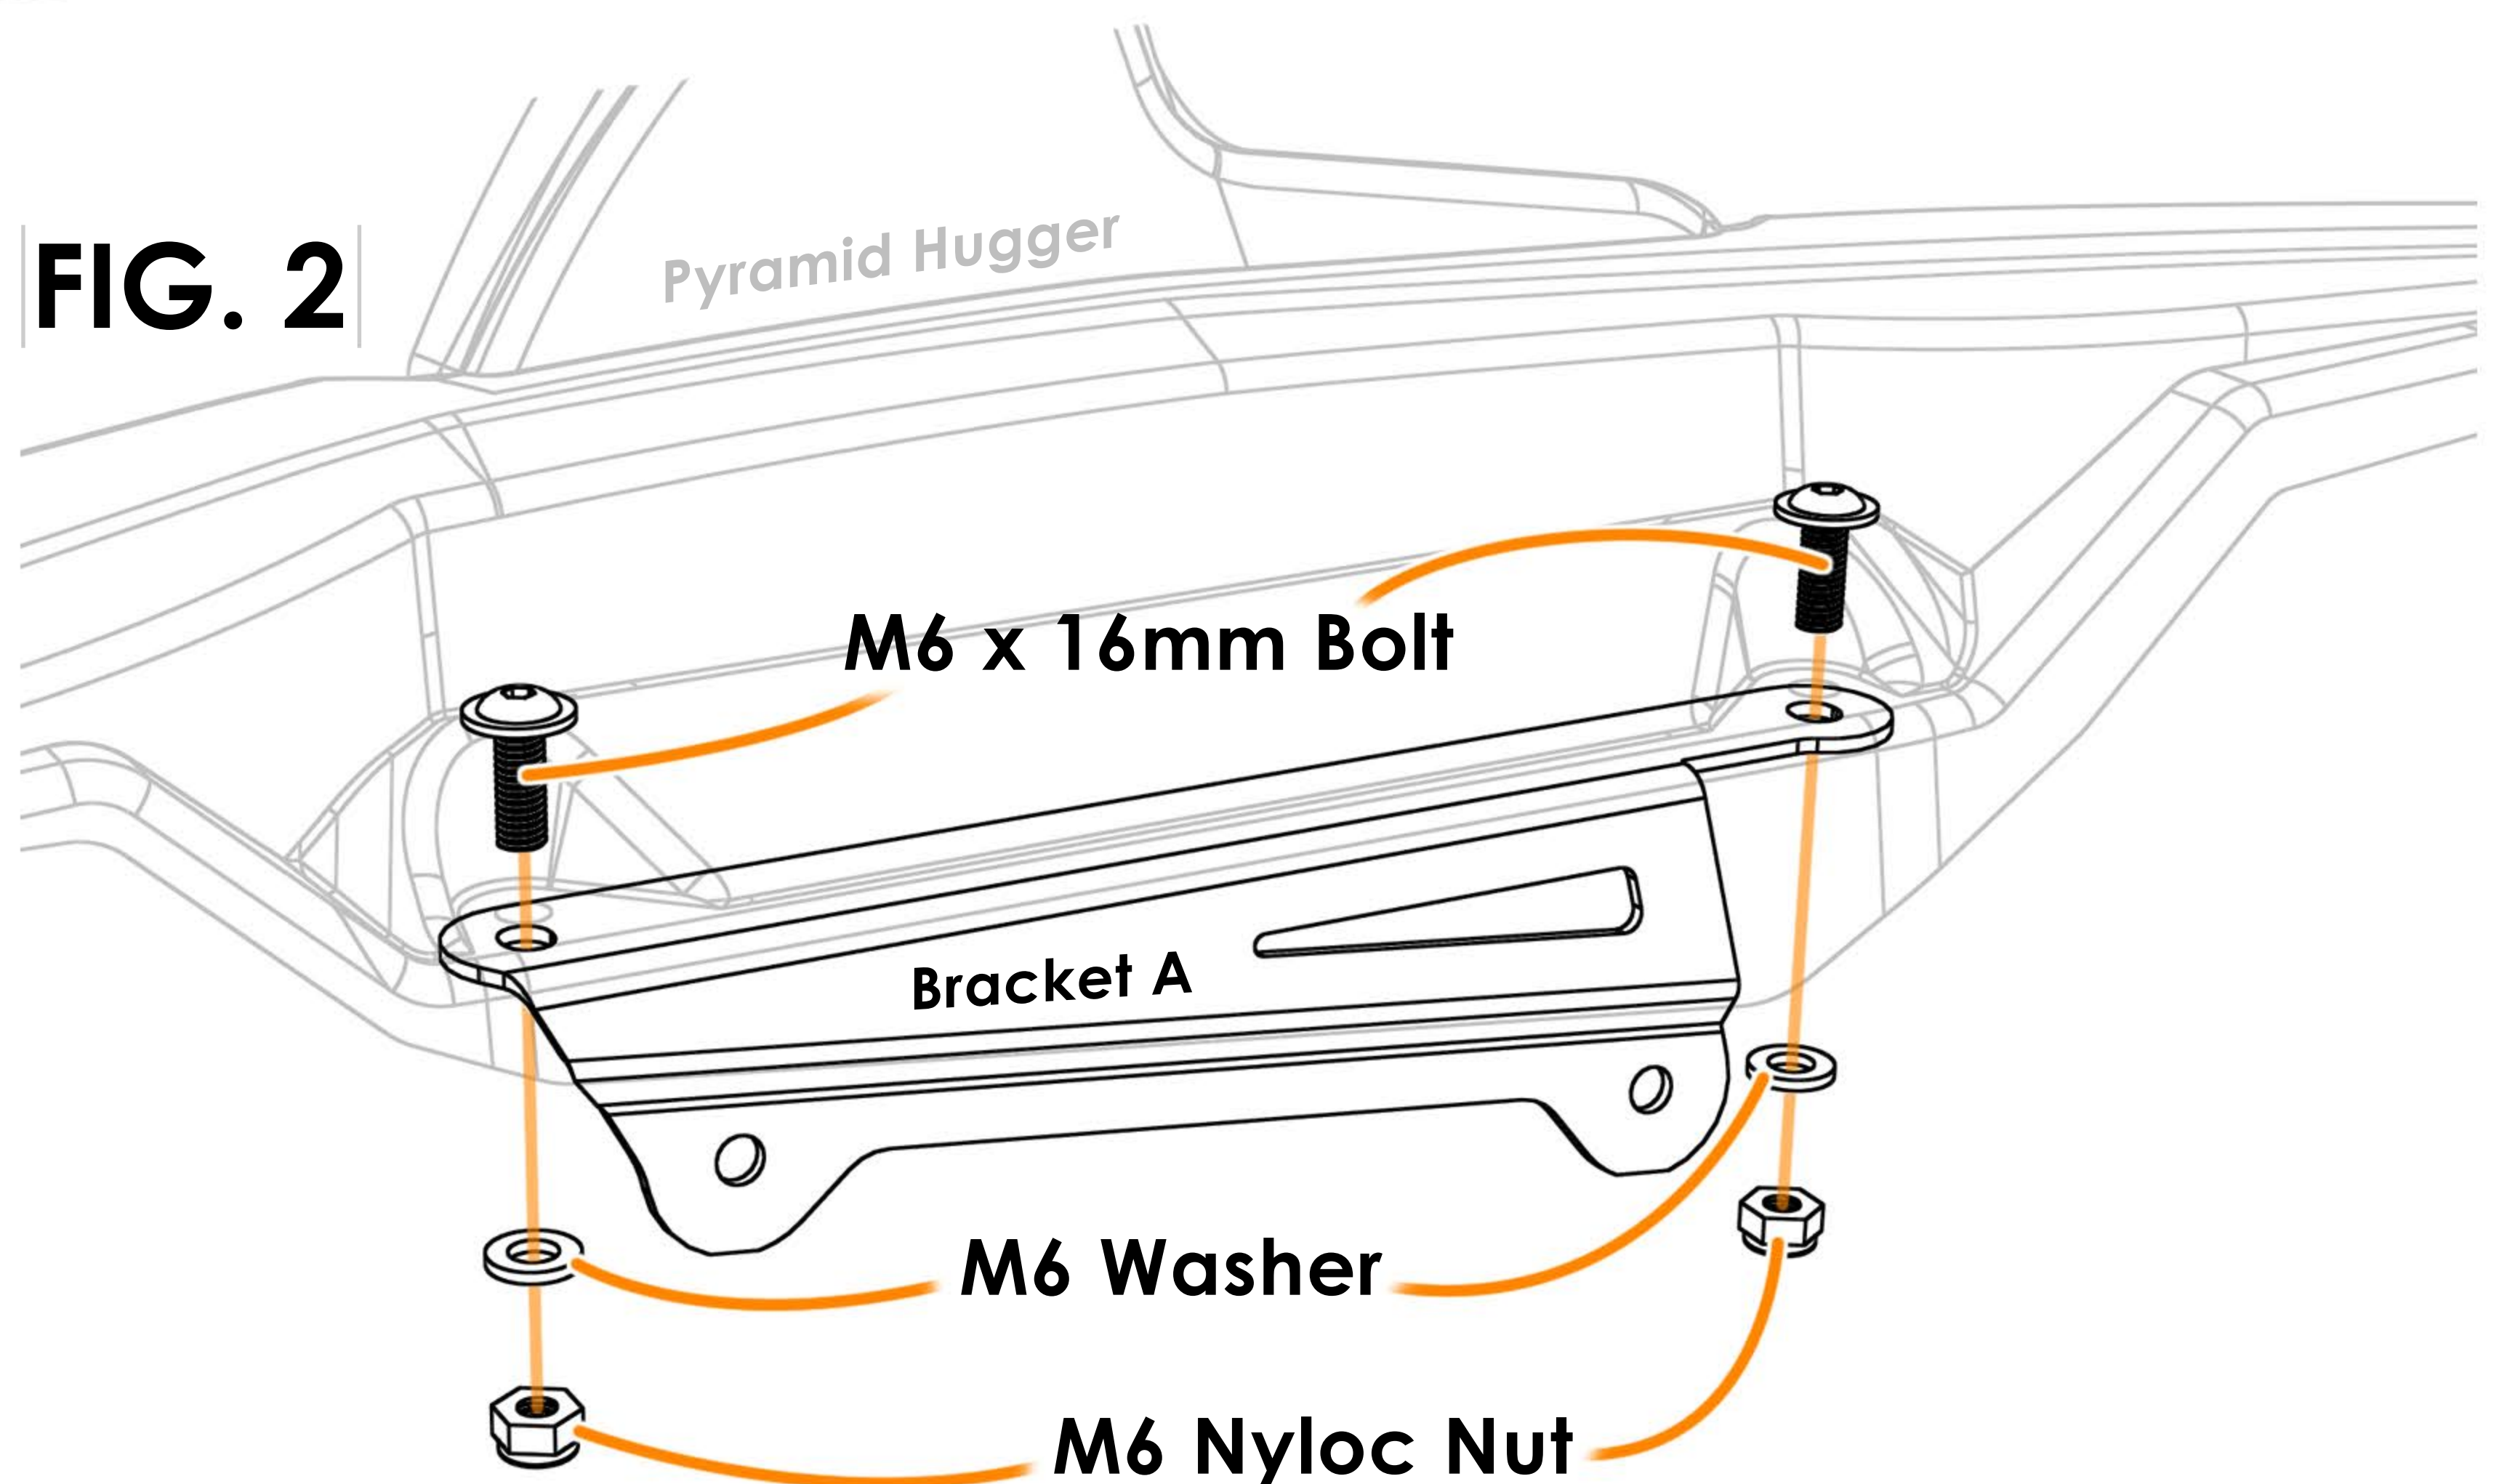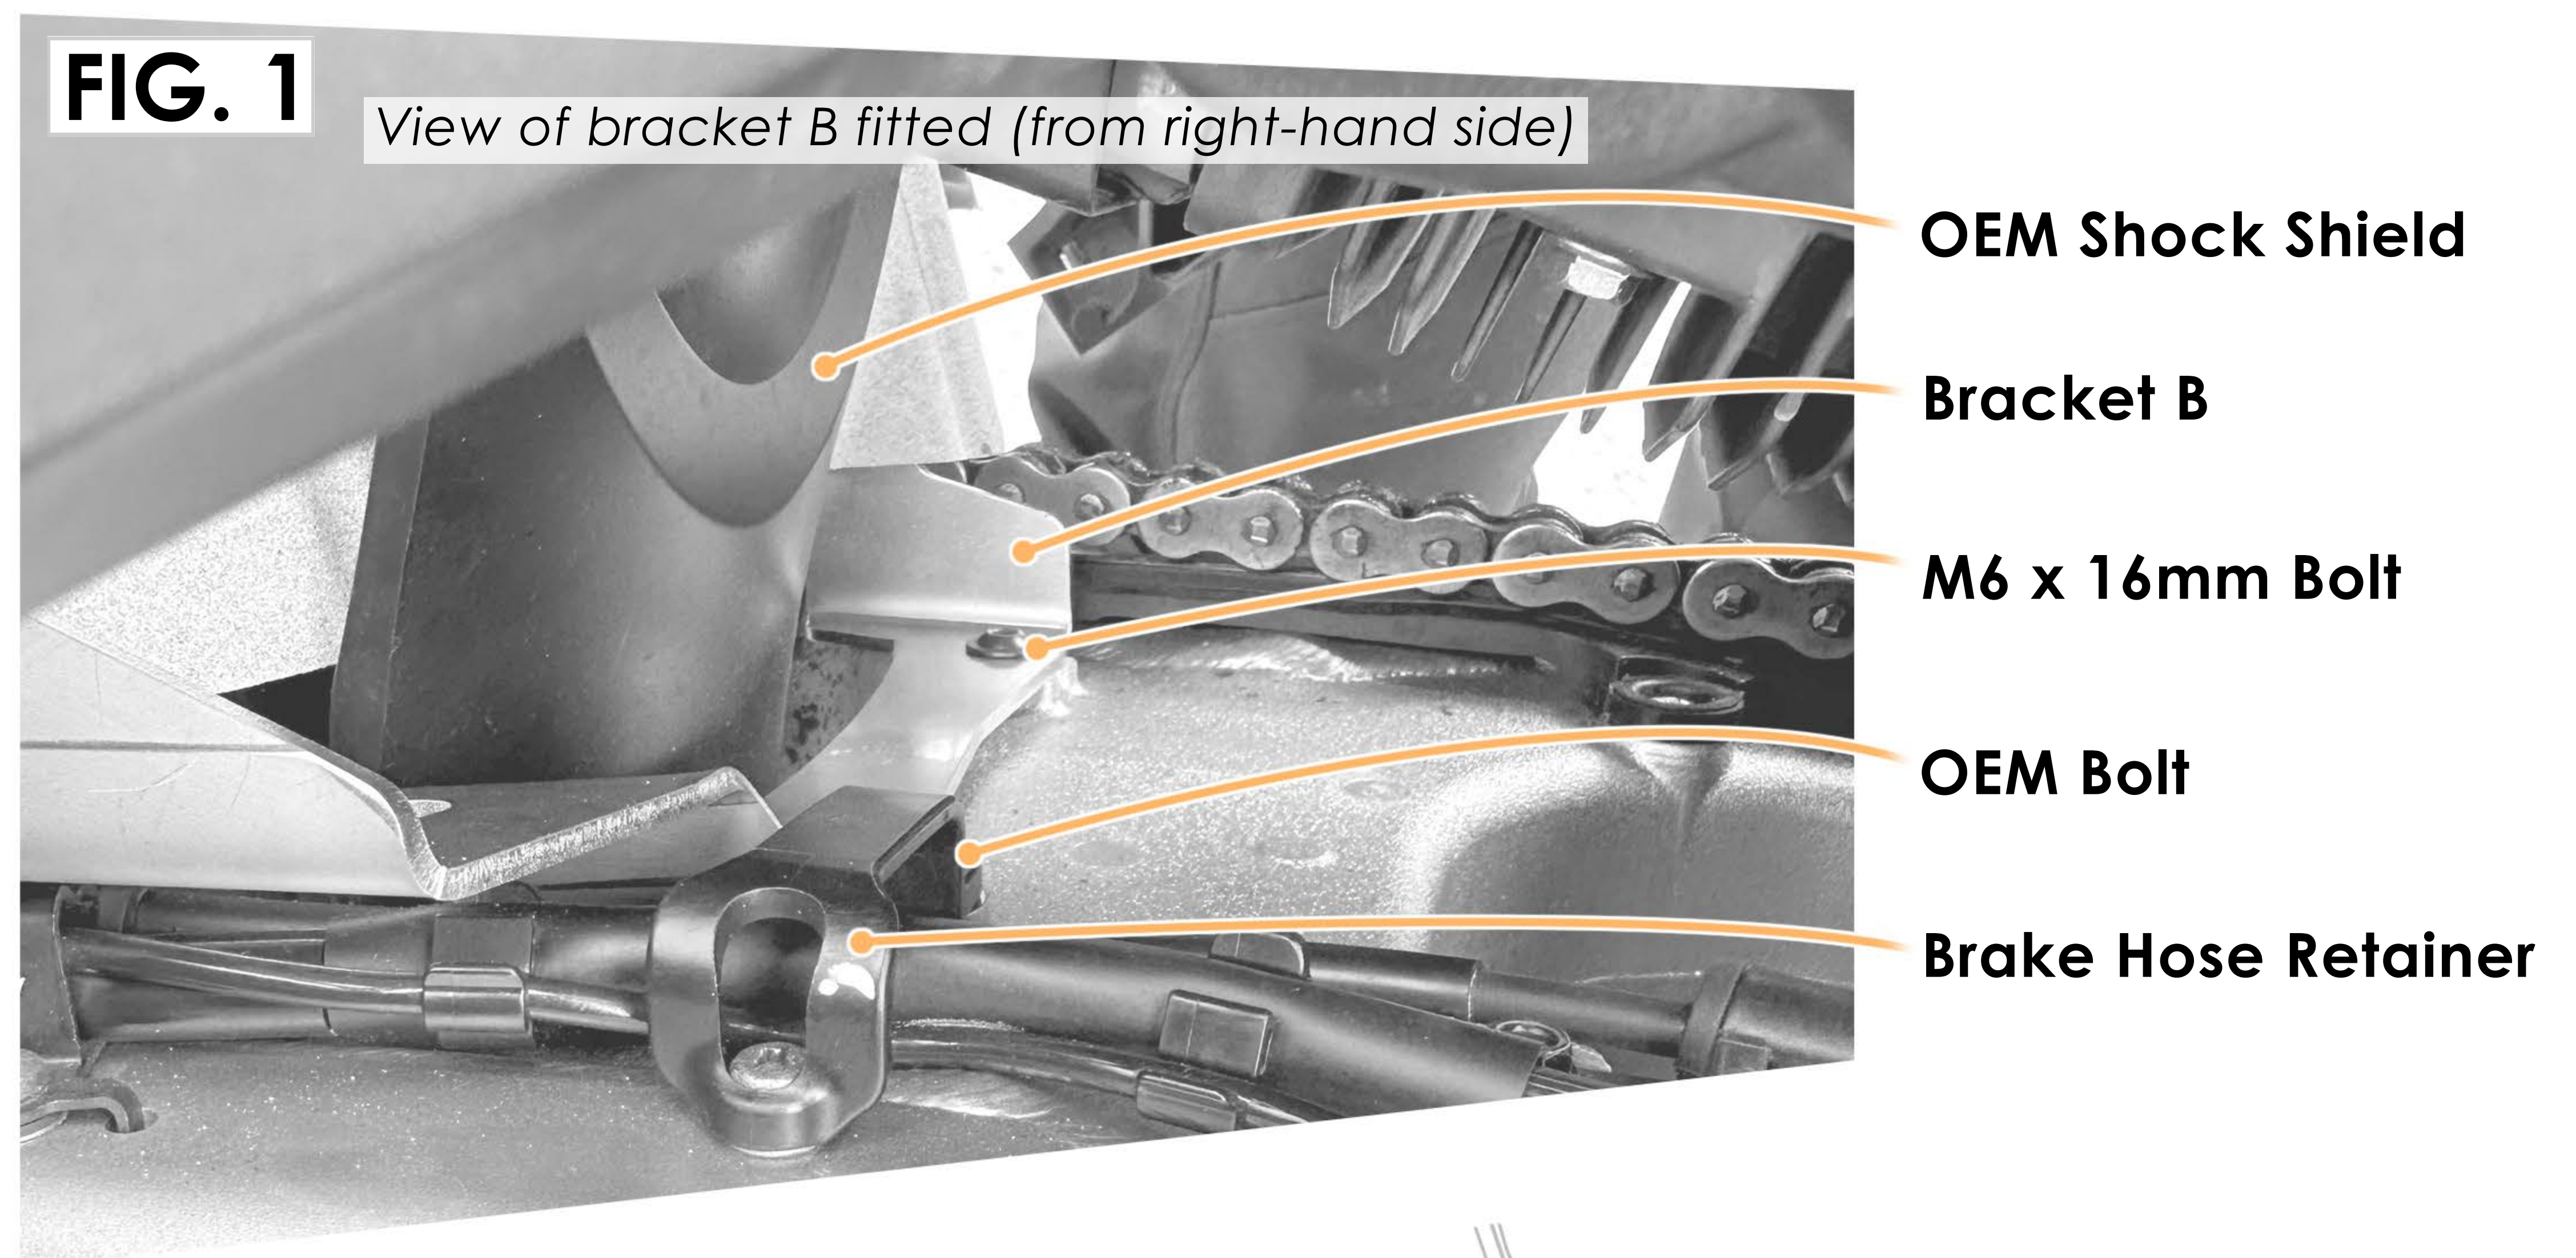


Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!


071100 Honda Africa Twin + Transalp Hugger Fitting Instructions

1. Hugger
2. Bracket A
3. Bracket B
4. M6 x 16mm Bolt
5. M6 Washer
6. M6 Nyloc Nut
7. OEM Swingarm Bolt

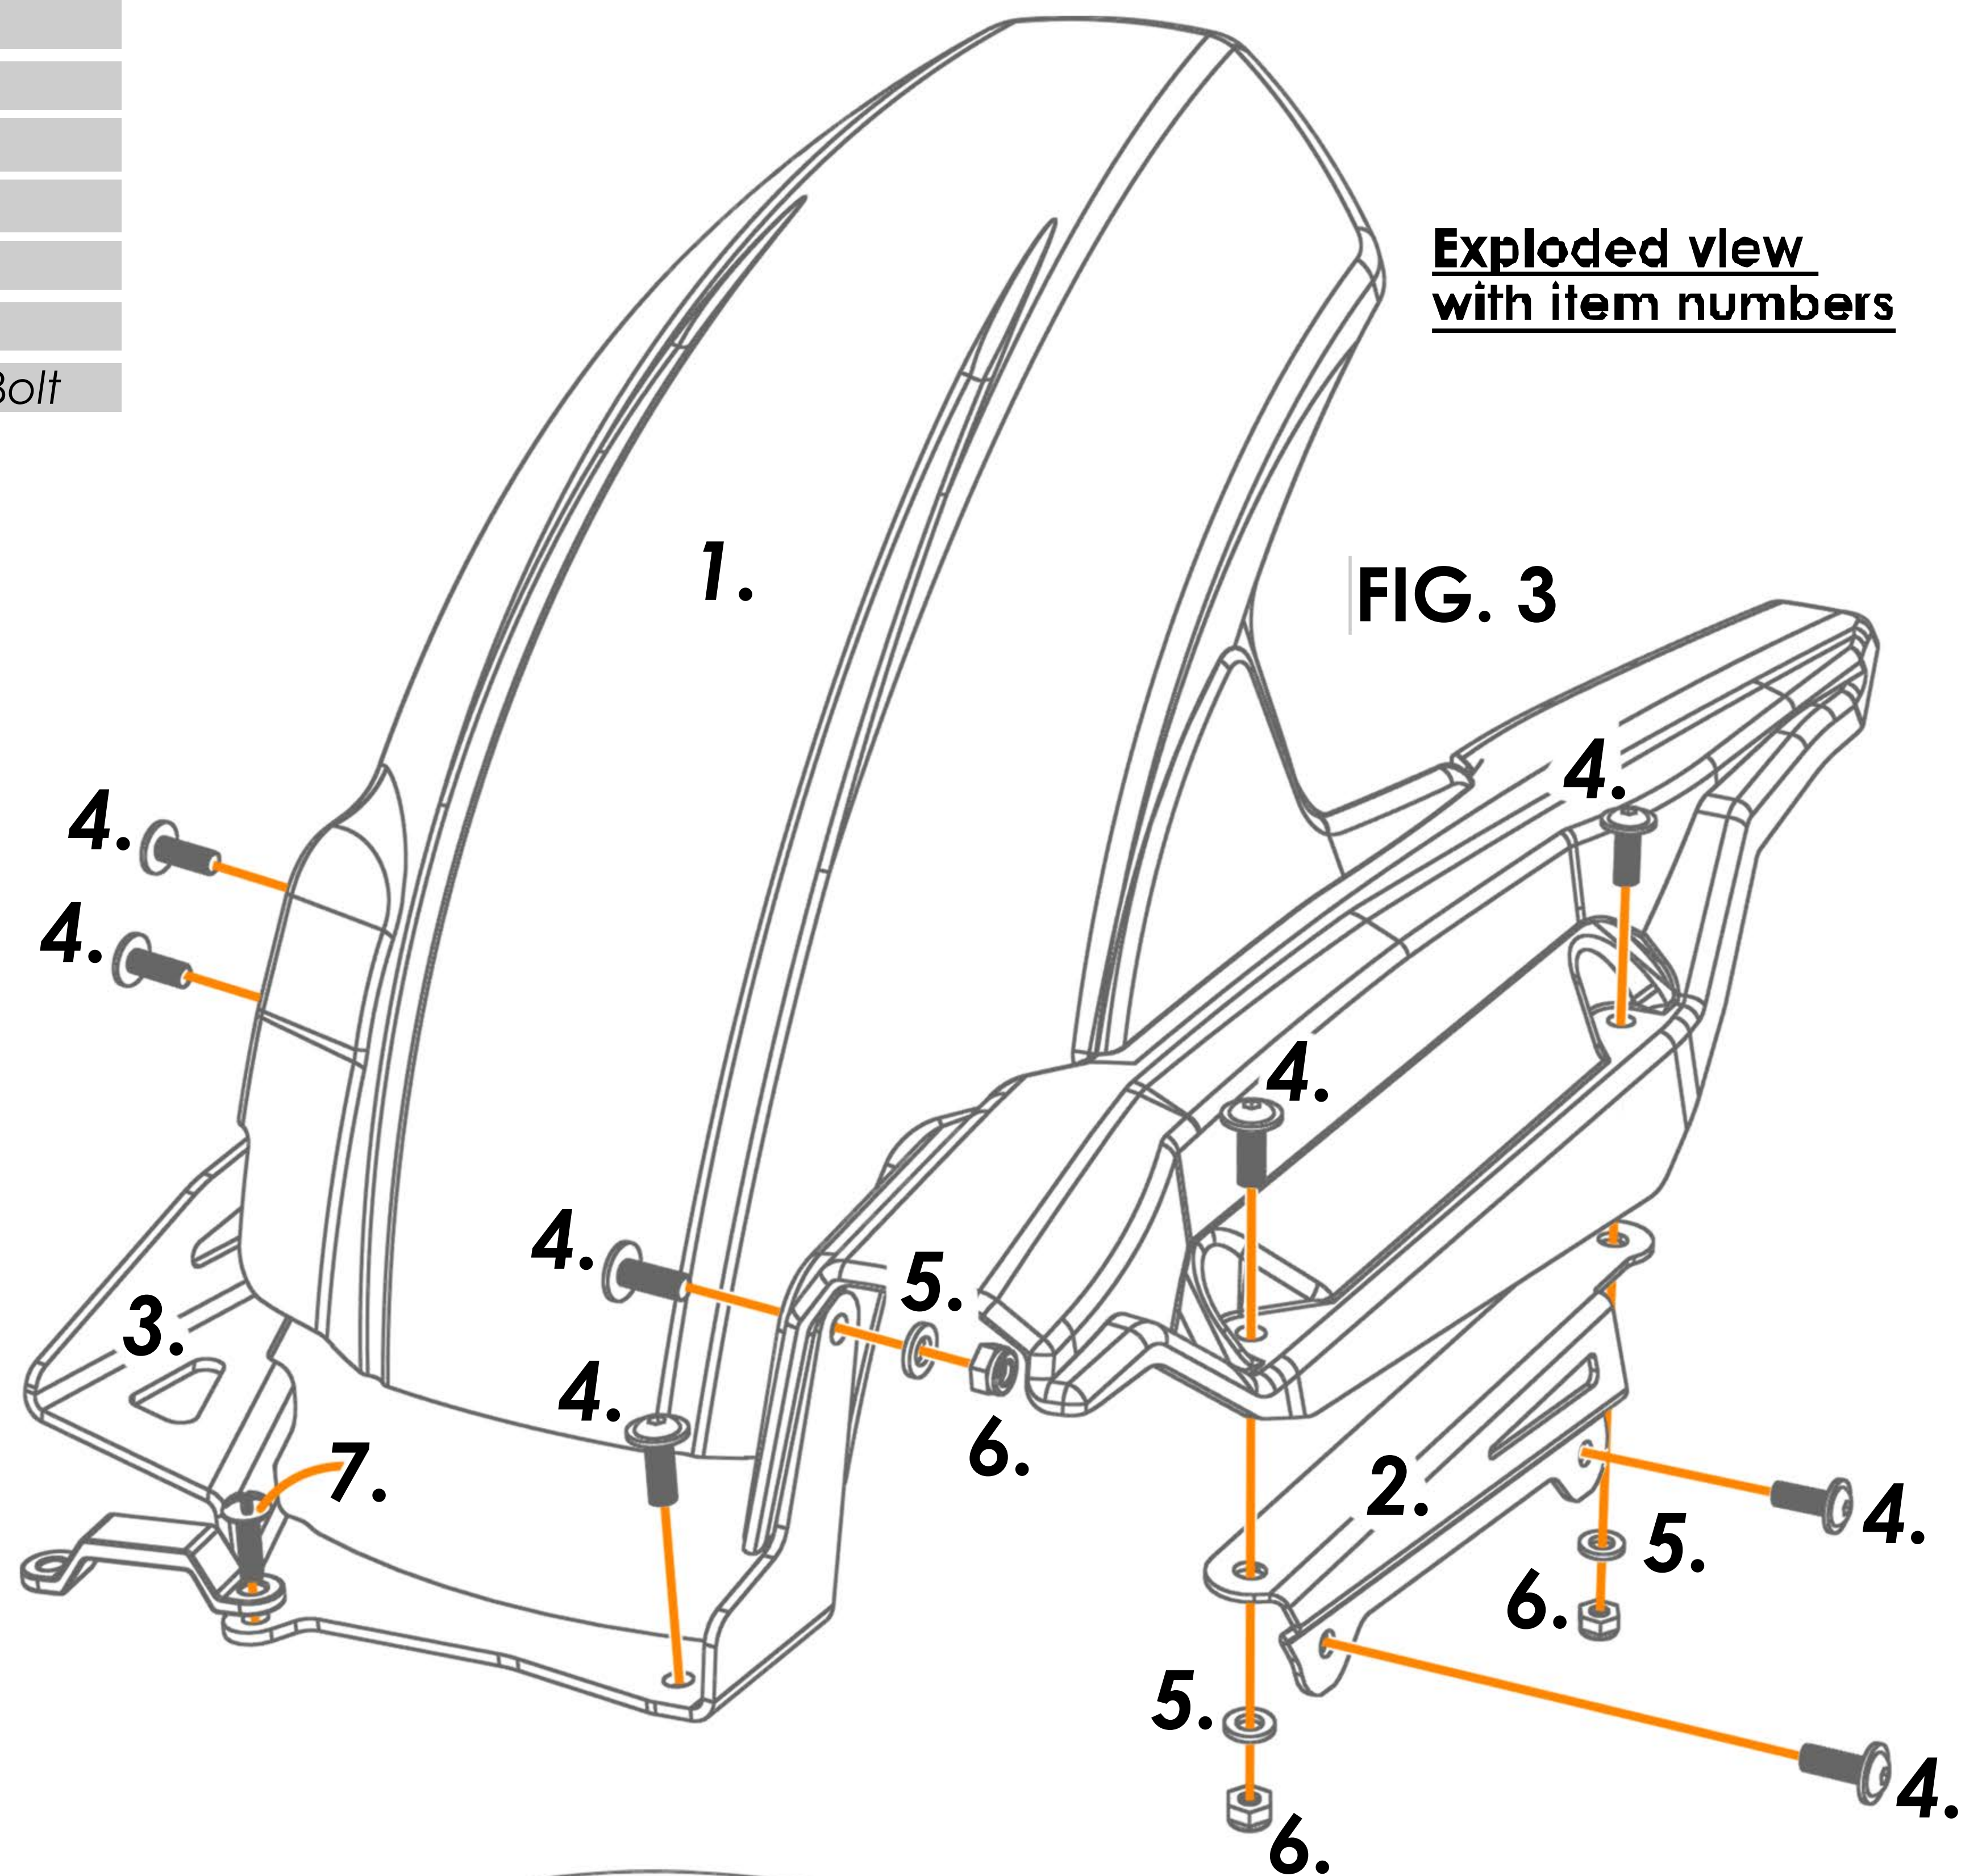

Exploded view with item numbers

FIG. 4

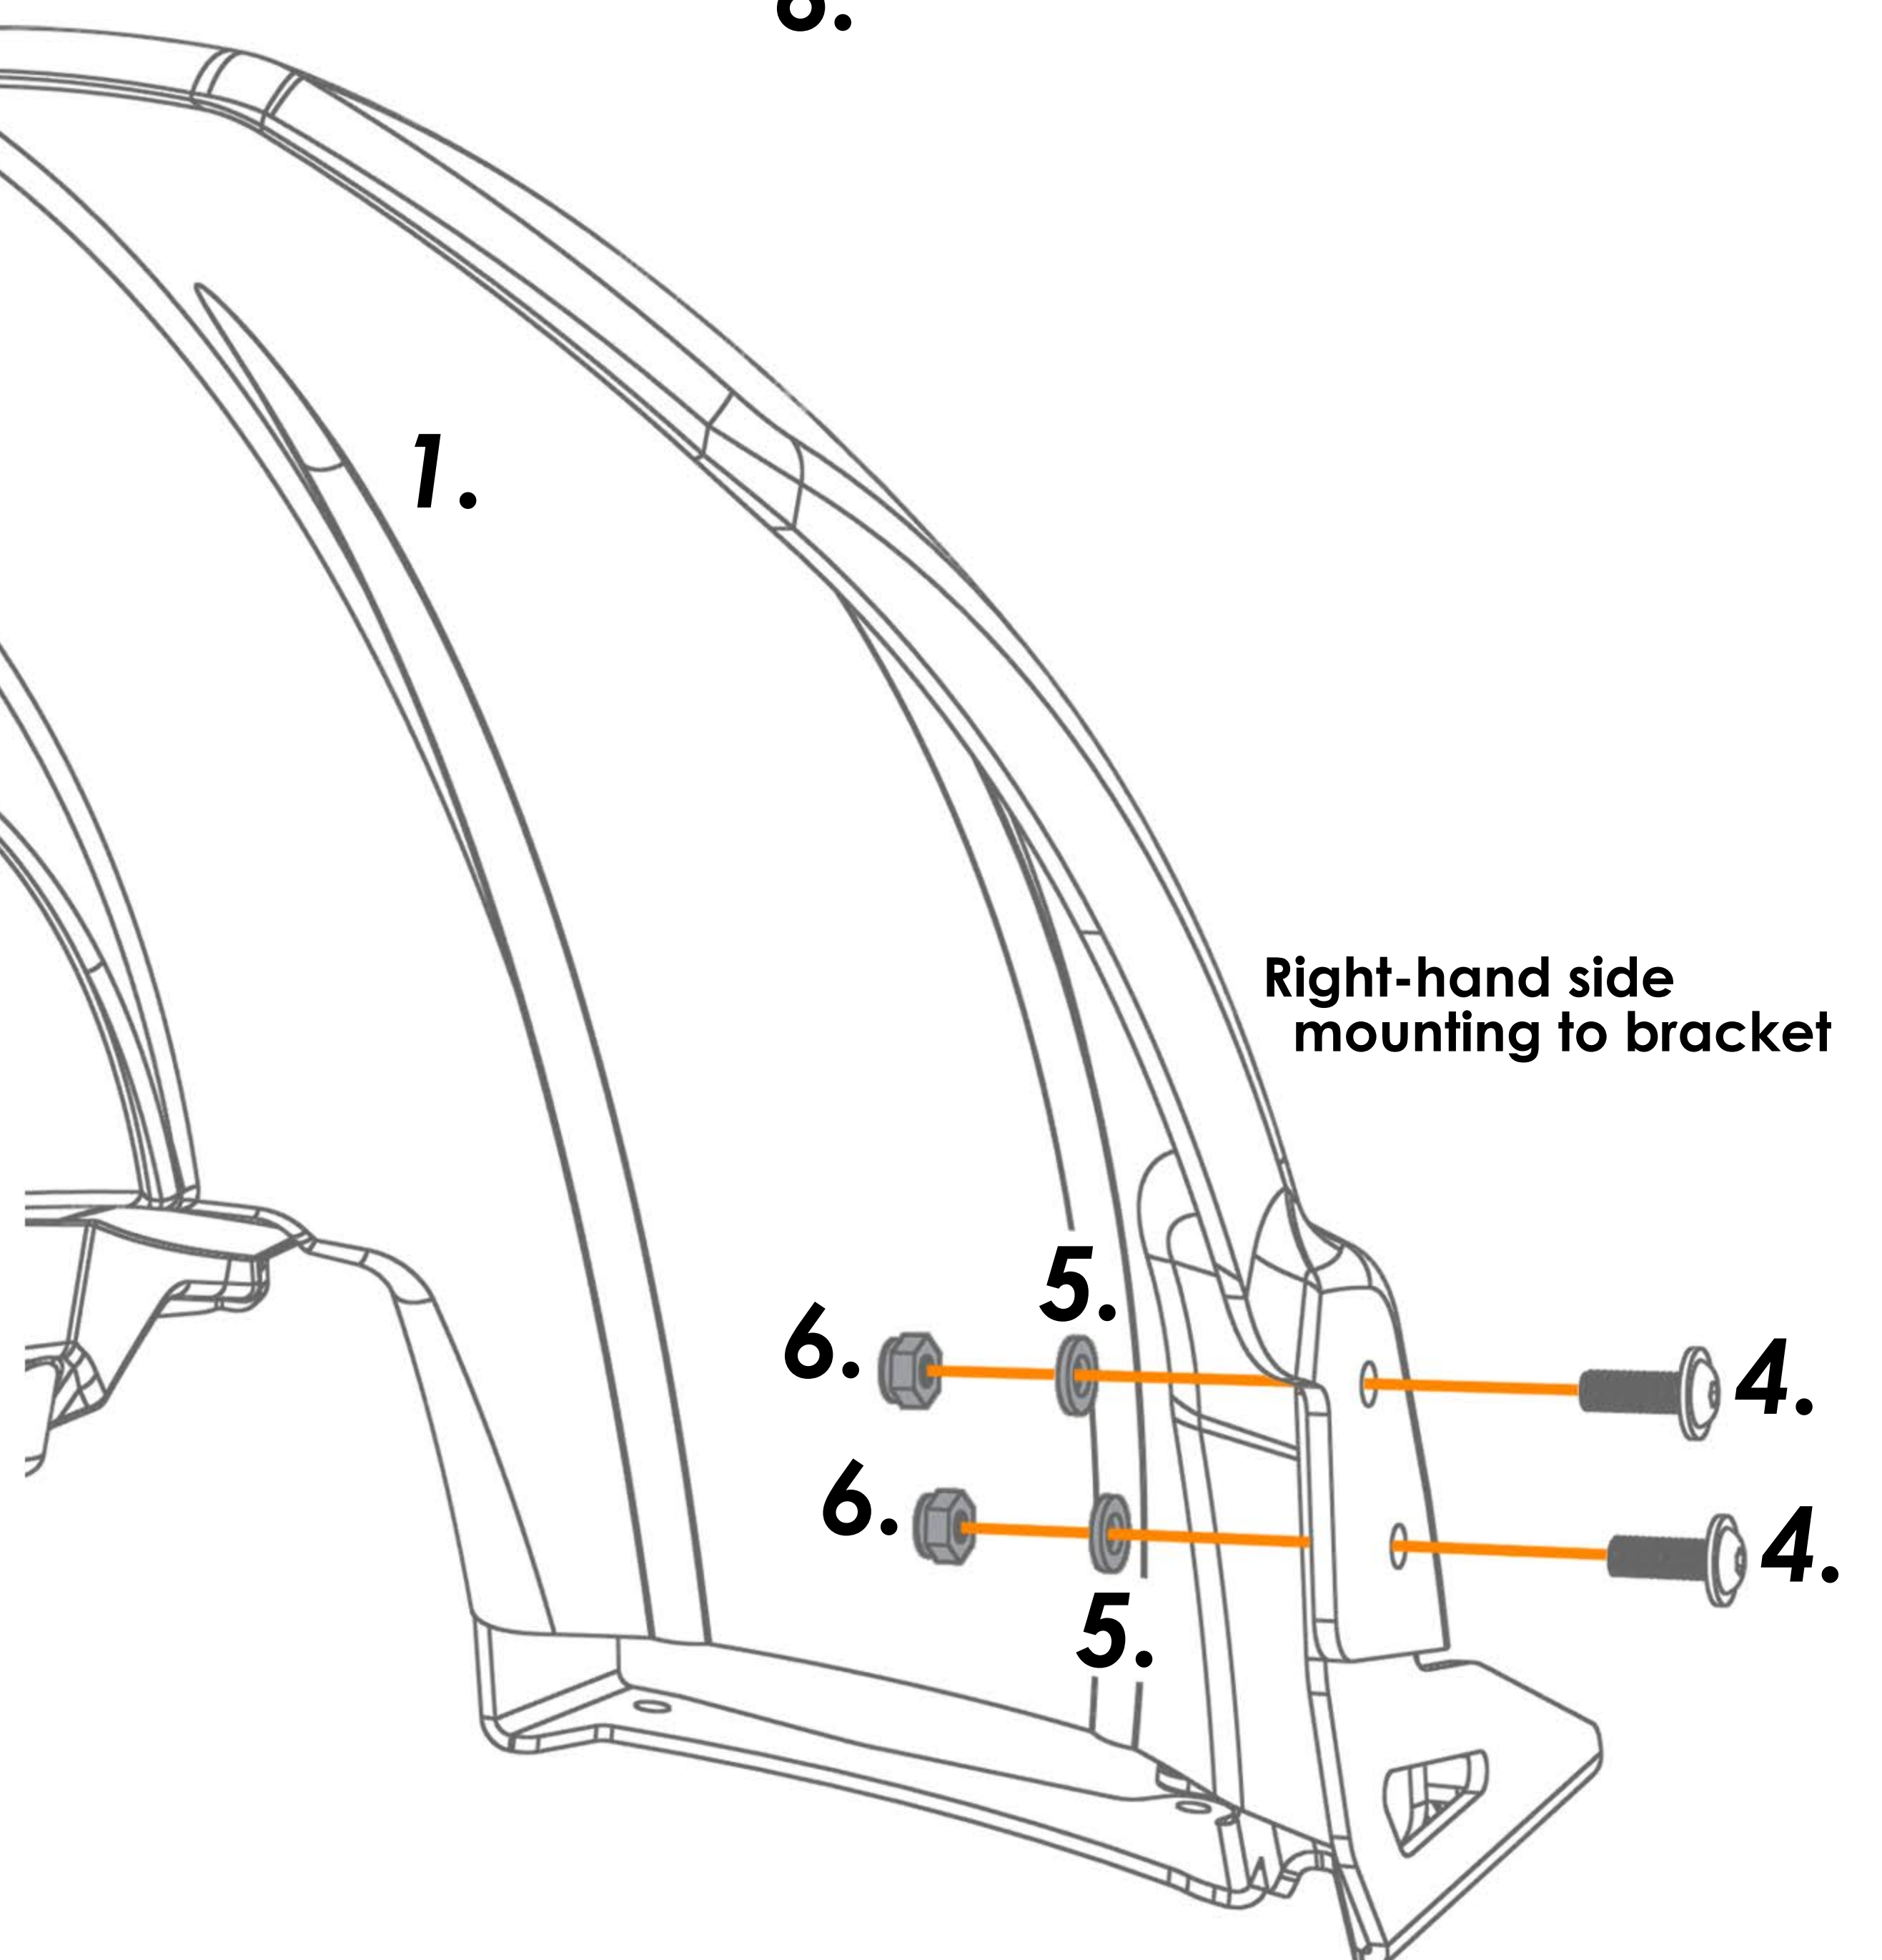

Pyramid Hugger on motorcycle

