

30630 Triumph Tiger Sport 800 Handguards Fitting Instructions

Kit Includes:

1.	X2	C30630	Handguards (pair)
2.	X1	CFK30630A	Bracket (LHS)
3.	X1	CFK30630B	Bracket (RHS)
4.	X4	CSPAM60025	M6 Custom Angled Spacer
5.	X2	CWASM60008	M6 Large Washer
6.	X2	CBOLM60012	M6 X 30mm Flanged Button Head Bolt
7.	X2	CNUTM60003	M6 Nyloc Nut
8.	X2	CWASM60001	M6 Small Washer
9.	X2	CBOLM60008	M6 X 16mm Flanged Button Head Bolt

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk





Follow us on social media and feel free to leave us a review!

Assembly Instructions

- Begin by removing the bar-end caps and mirrors from the motorcycle.
- Attach the LHS handguard (Item 1) to the bar-end using one M6 x 30mm bolt (Item 6) and two M6 custom angled spacers (Item 4). See 'FIG. 2+3' for reference.

Please note the orientation of the custom angled spacers as this will affect the overall alignment. Ensure they are both interlocked inside the handguard before tightening.

- Attach the LHS bracket (Item 2) to the LHS handguard using the supplied M6 fittings (Items 7, 8 and 9). See 'FIG.1+2' for reference.
- Secure the bracket to the motorcycle using the mirrors. It is possible to reorient the position of the mirrors when fully fitted by adjusting the two nuts on each mirror.
- Repeat the steps above for the RHS Handguard.
- Once the handguards are in the correct position, fully tighten all fixings.

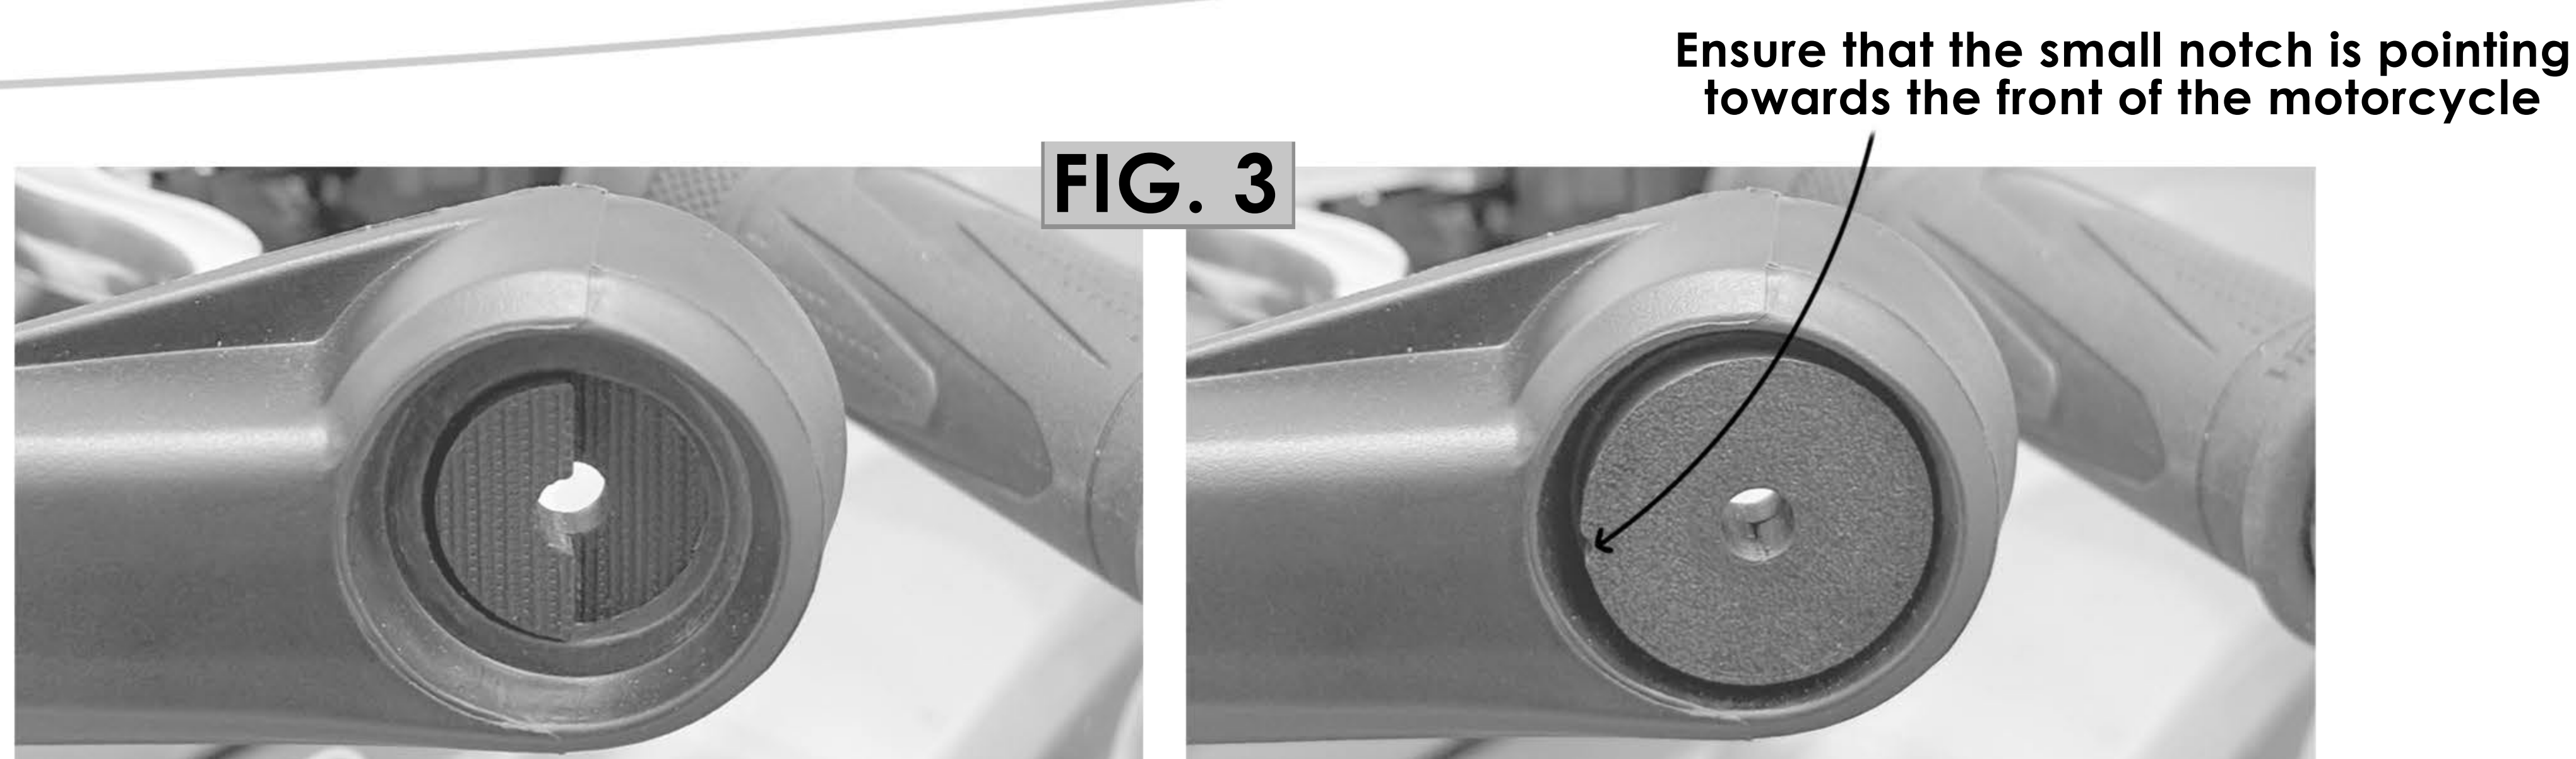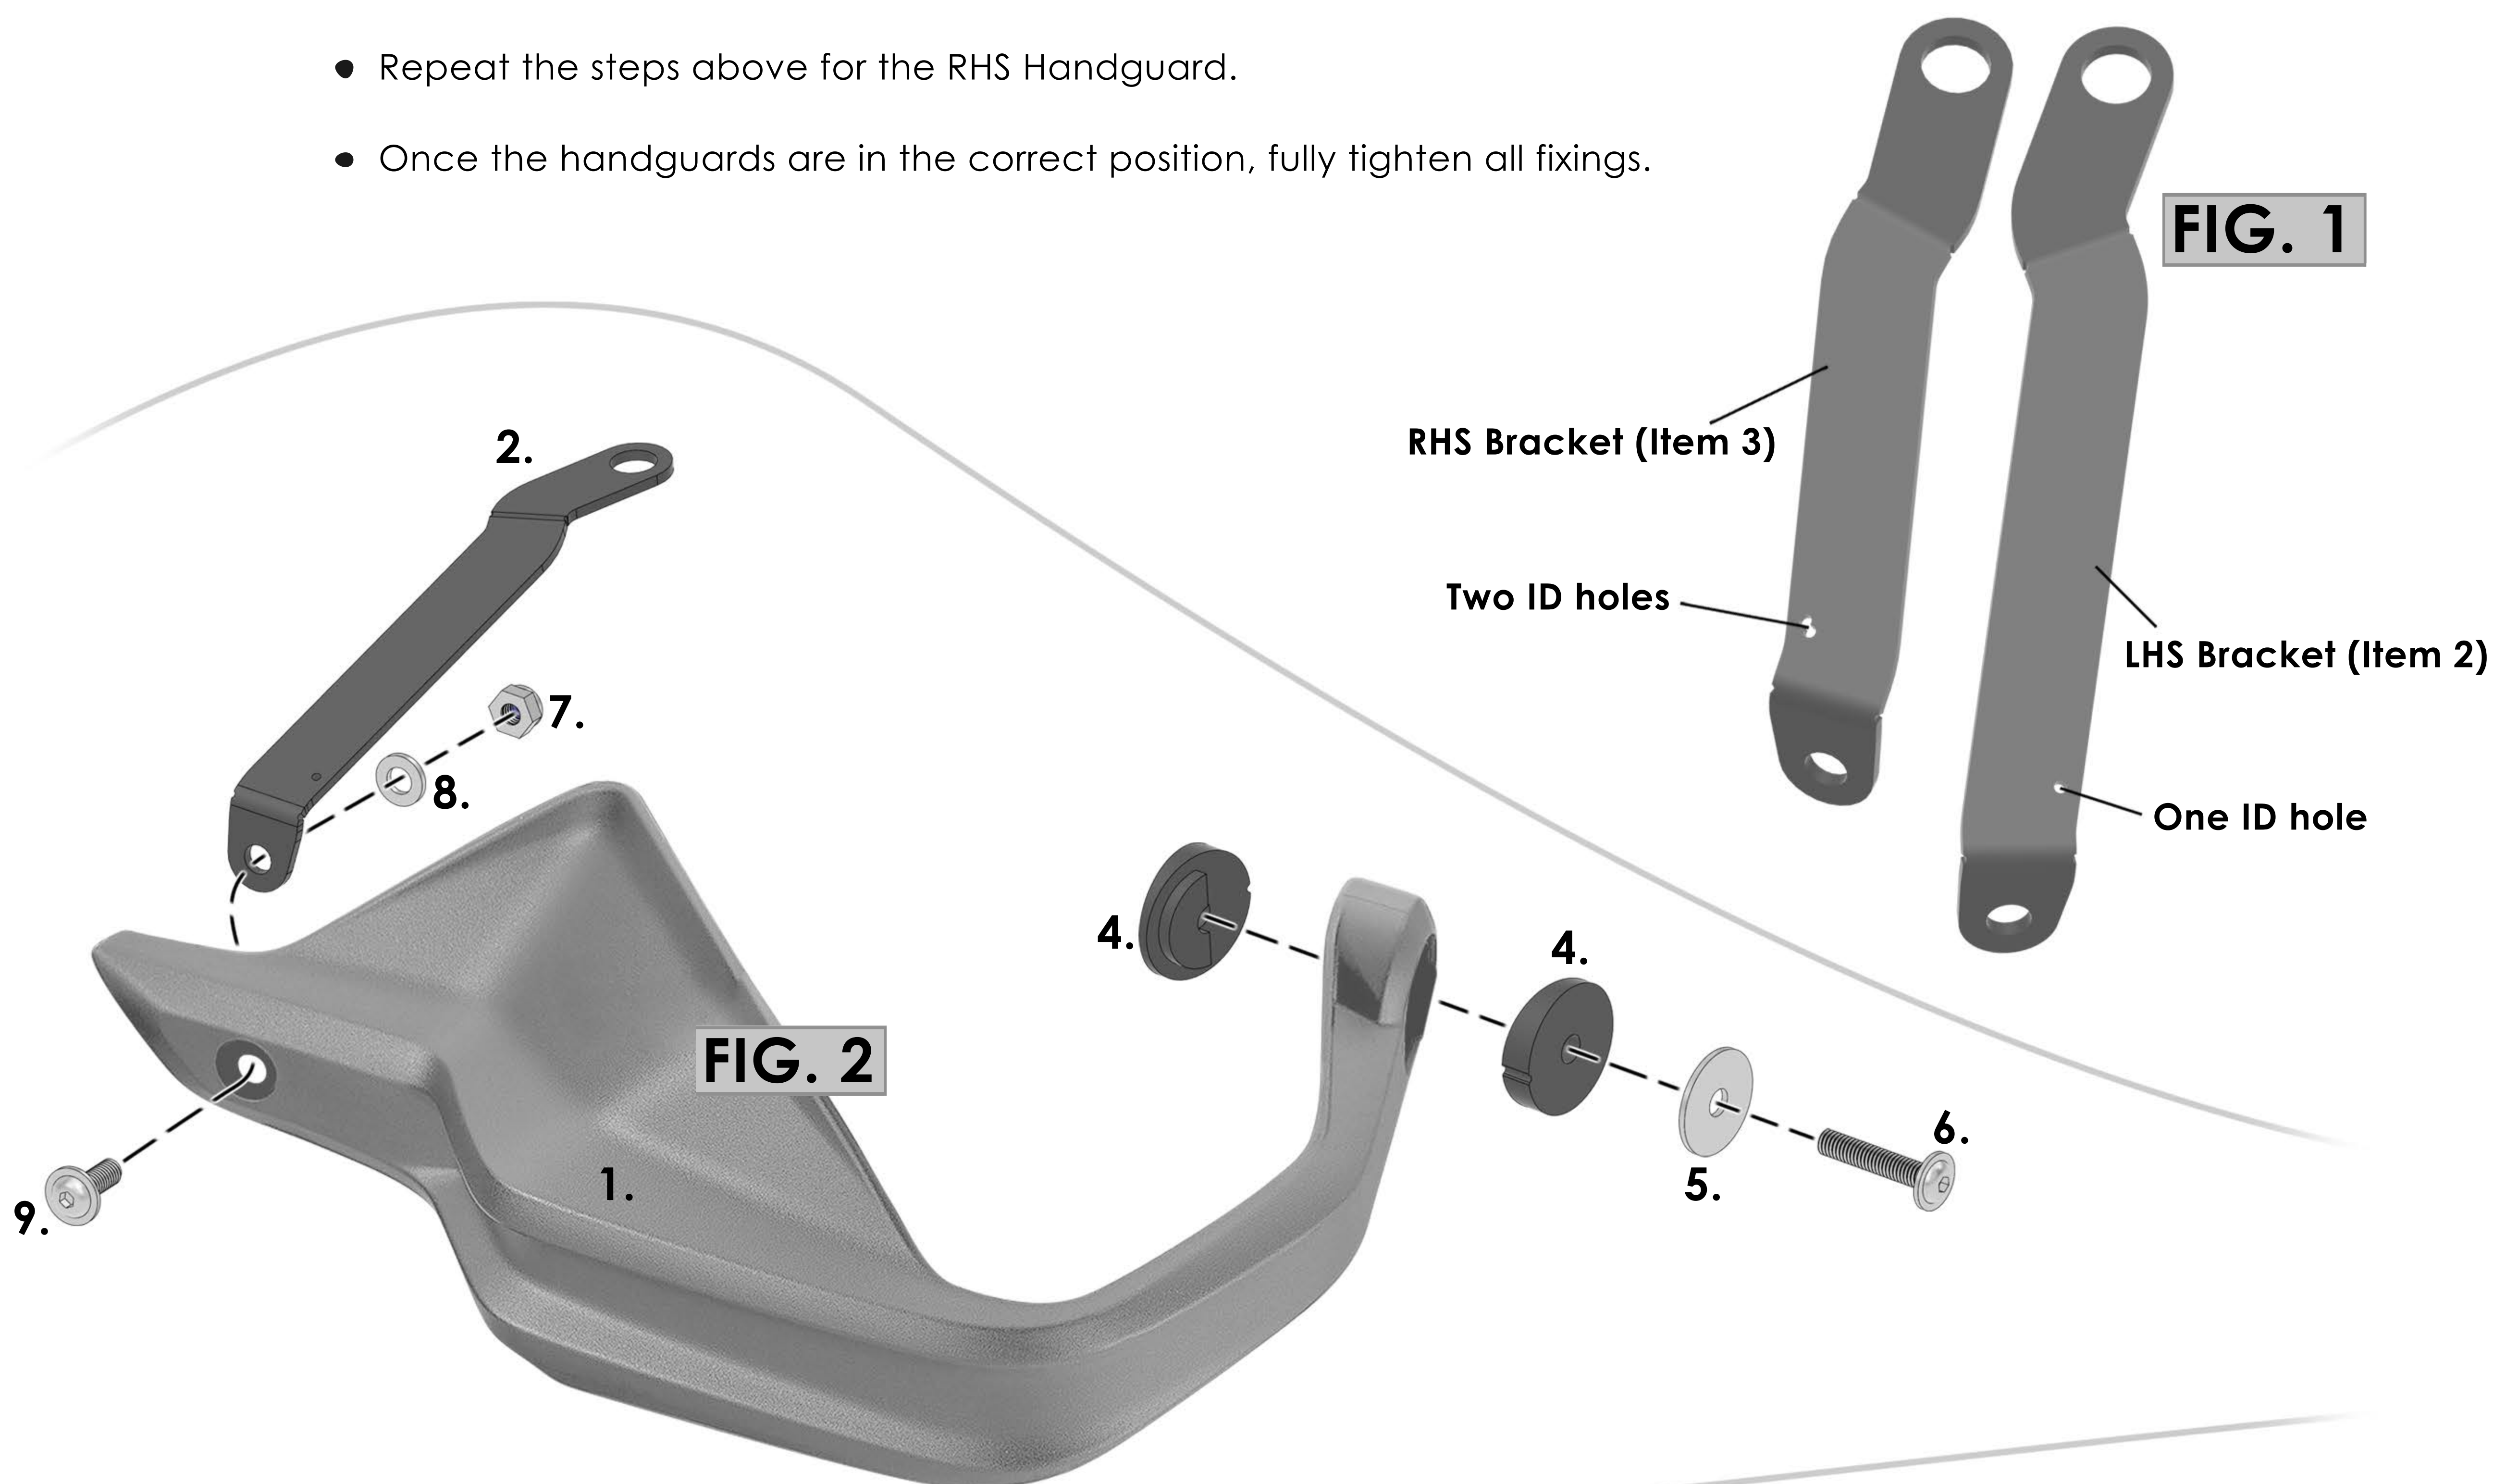

Please Note: Pyramid advise that all fixings are checked periodically.