

32110M Yamaha MT-09 Blanking Blocks 2024> Fitting Instructions

Kit Includes:

1.	X1	C32110A	Blanking Block (LHS)
2.	X1	C32110B	Blanking Block (RHS)
3.	X4	CBOLM80010	M8 x 25 Domehead Bolt
4.	X1	CNUTM50002	M5 Nyloc Nut

OEM Parts (From the Motorcycle):

5.	X1	OEM M4 Bolt
6.	X1	OEM Bracket

Assembly Instructions

- Begin by removing the Pillion foot pegs.
- Using the same mounting points as the OEM foot pegs, attach the LHS Blanking Block (Item 1) using the M8 Bolts provided (Item 3). See '**FIG. 1**' for reference.
- Before fitting the RHS Blanking Block (Item 2), loosely fit the Oil mount reservoir to the Blanking Block using the OEM Bracket (Item 6), M5 Nyloc Nut (Item 4) and the OEM M4 Bolt (Item 5). See '**FIG. 2**' for reference.
- Loosely fit the RHS Blanking Block using the M8 Bolts provided. See '**FIG. 3**' for reference.
- Once the Blanking Blocks are in the correct position, fully tighten all fixings.

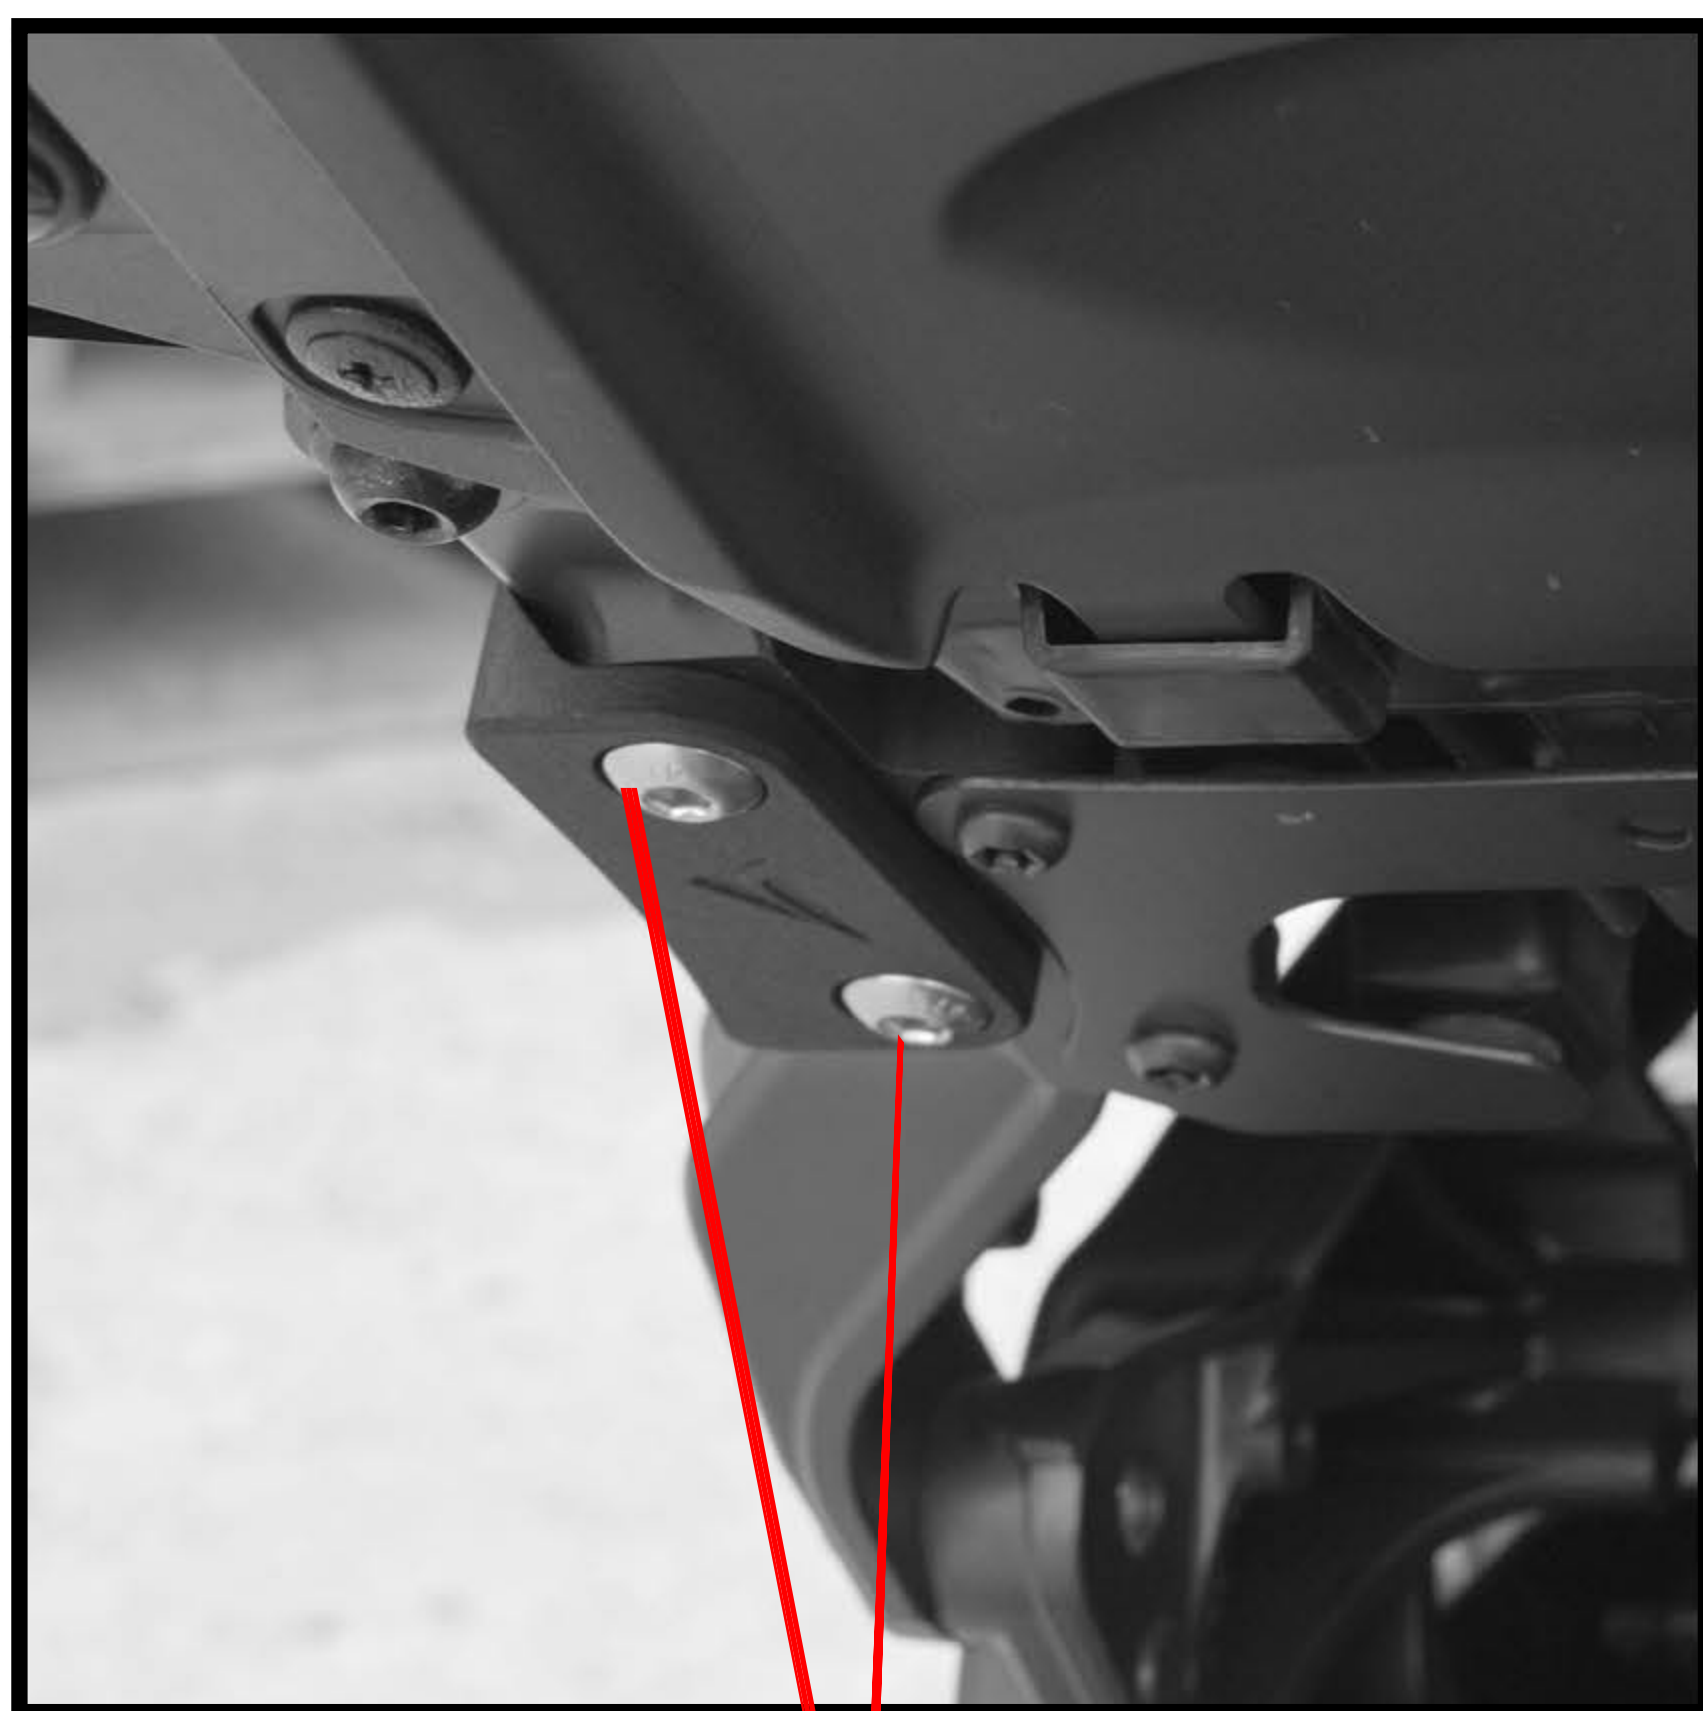


FIG. 1

M8 x 25 Bolts
LHS Mounting Points

FIG. 2


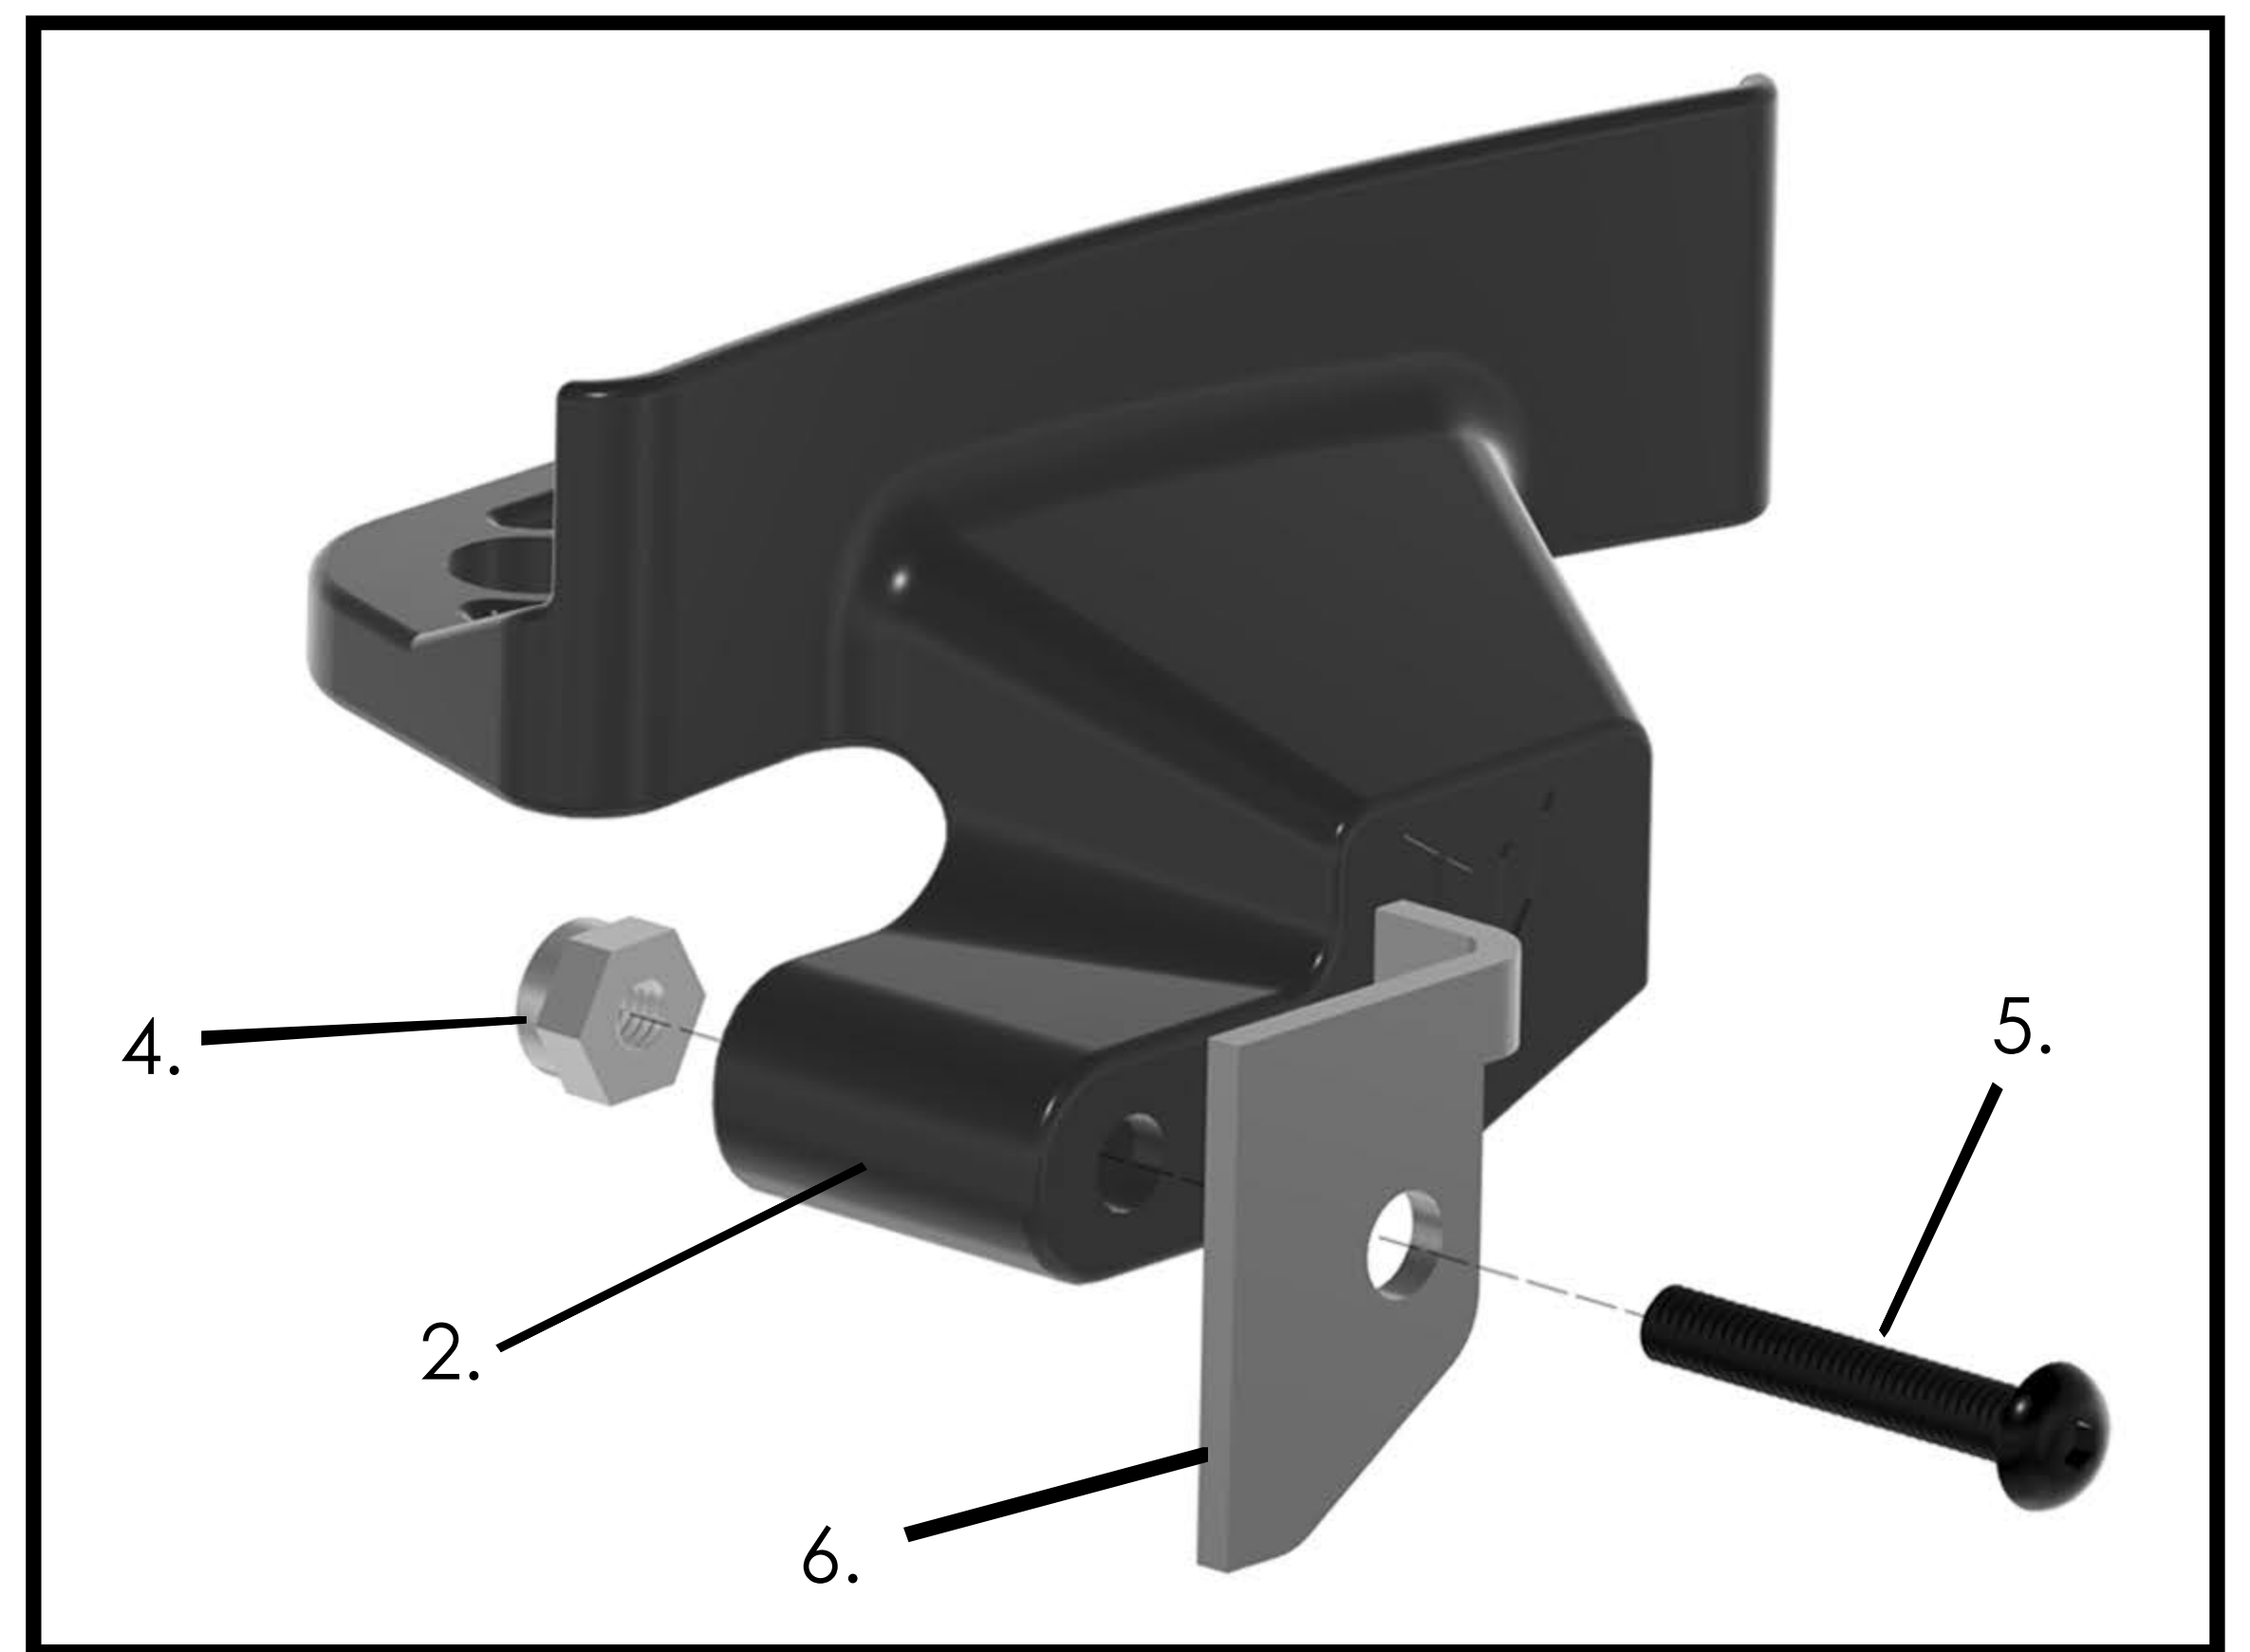


FIG. 3

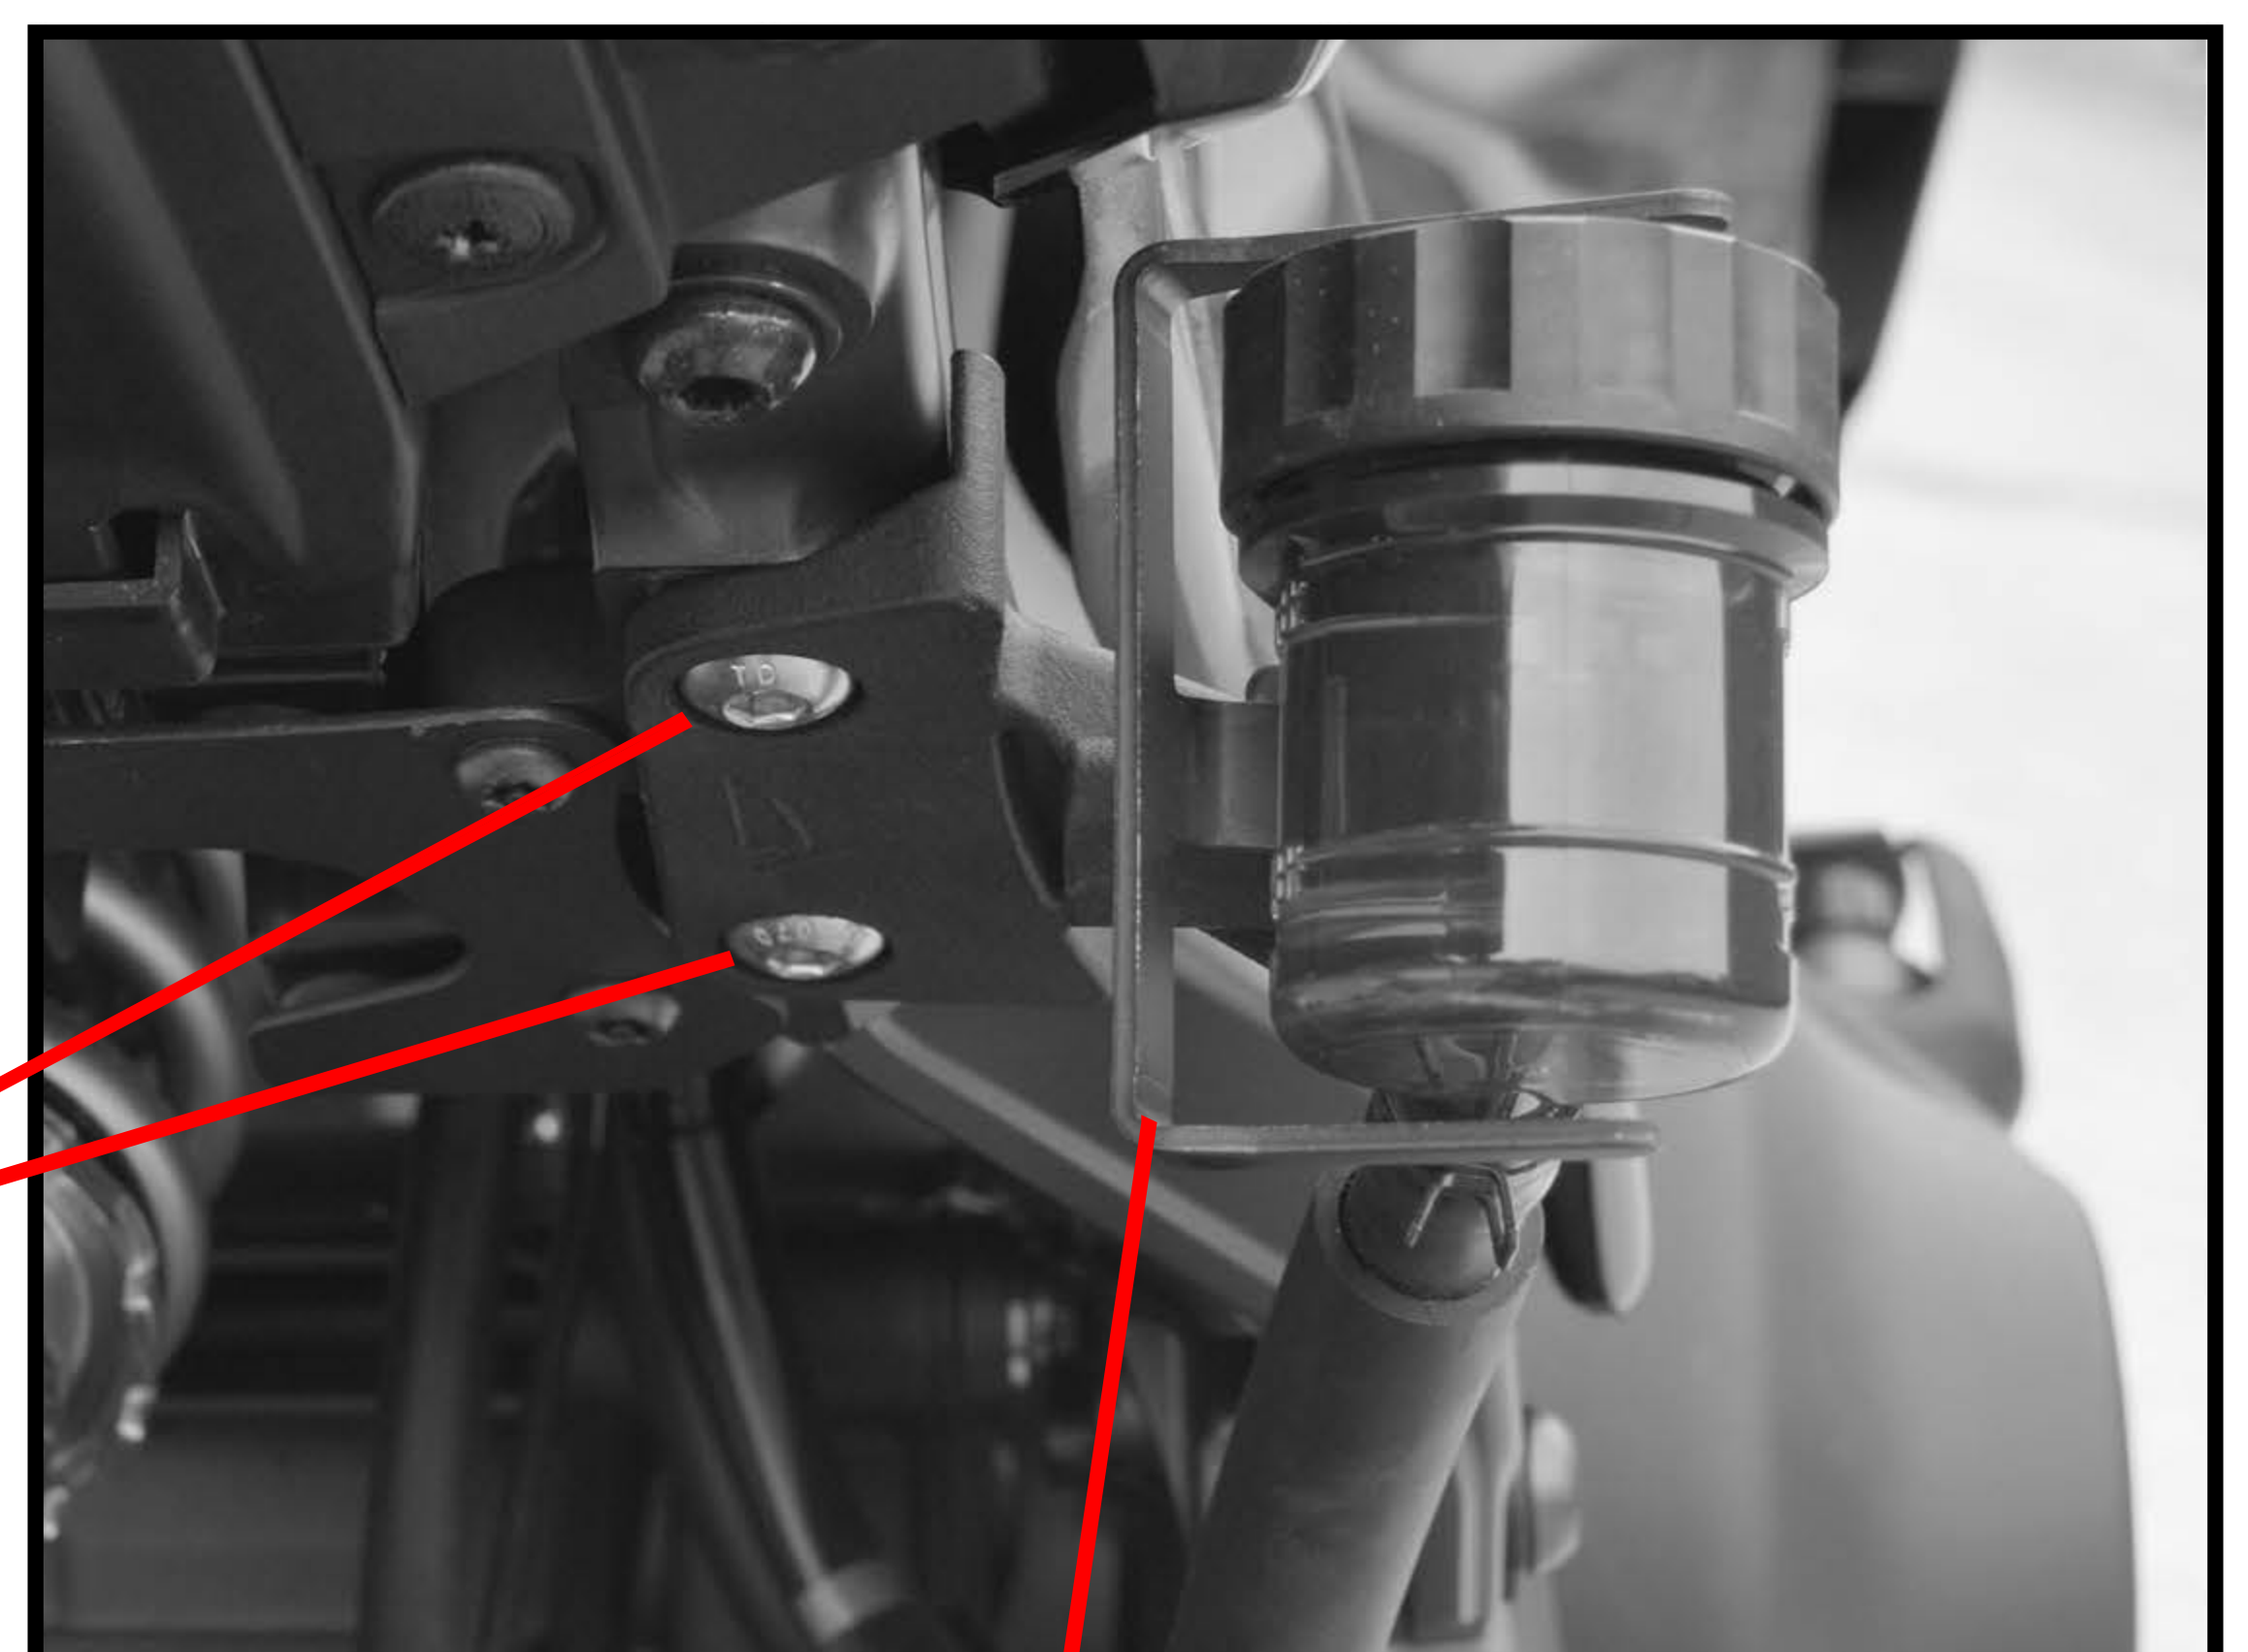

M8 x 25 Bolts
RHS Mounting Points

OEM Bracket

Please Note:

We advise that all fixings
are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!