

Kit Includes:

1.	X1	C09620	Headlight Guard
2.	X2	CBOLM50008	M5 x 16mm Bolt
3.	X4	CRUB0007	Clear Rubber Foot (9.5mm Diameter)
4.	X4	C090001	3M Velcro Tabs (25mm x 12.5mm Rectangle)

Assembly Instructions

- Start by attaching the clear rubber feet and 3M velcro tabs to the inside of the headlight guard as illustrated in **Fig 1**.
- Remove the OEM bolts from the underside of the headlight.
- Remove the adhesive backing from the 3M velcro tabs and fit the headlight guard using the bolts supplied (see **Fig 2**).
- Fully tighten all mounting points and check fixings periodically.

Fig 1

Repeat on both sides

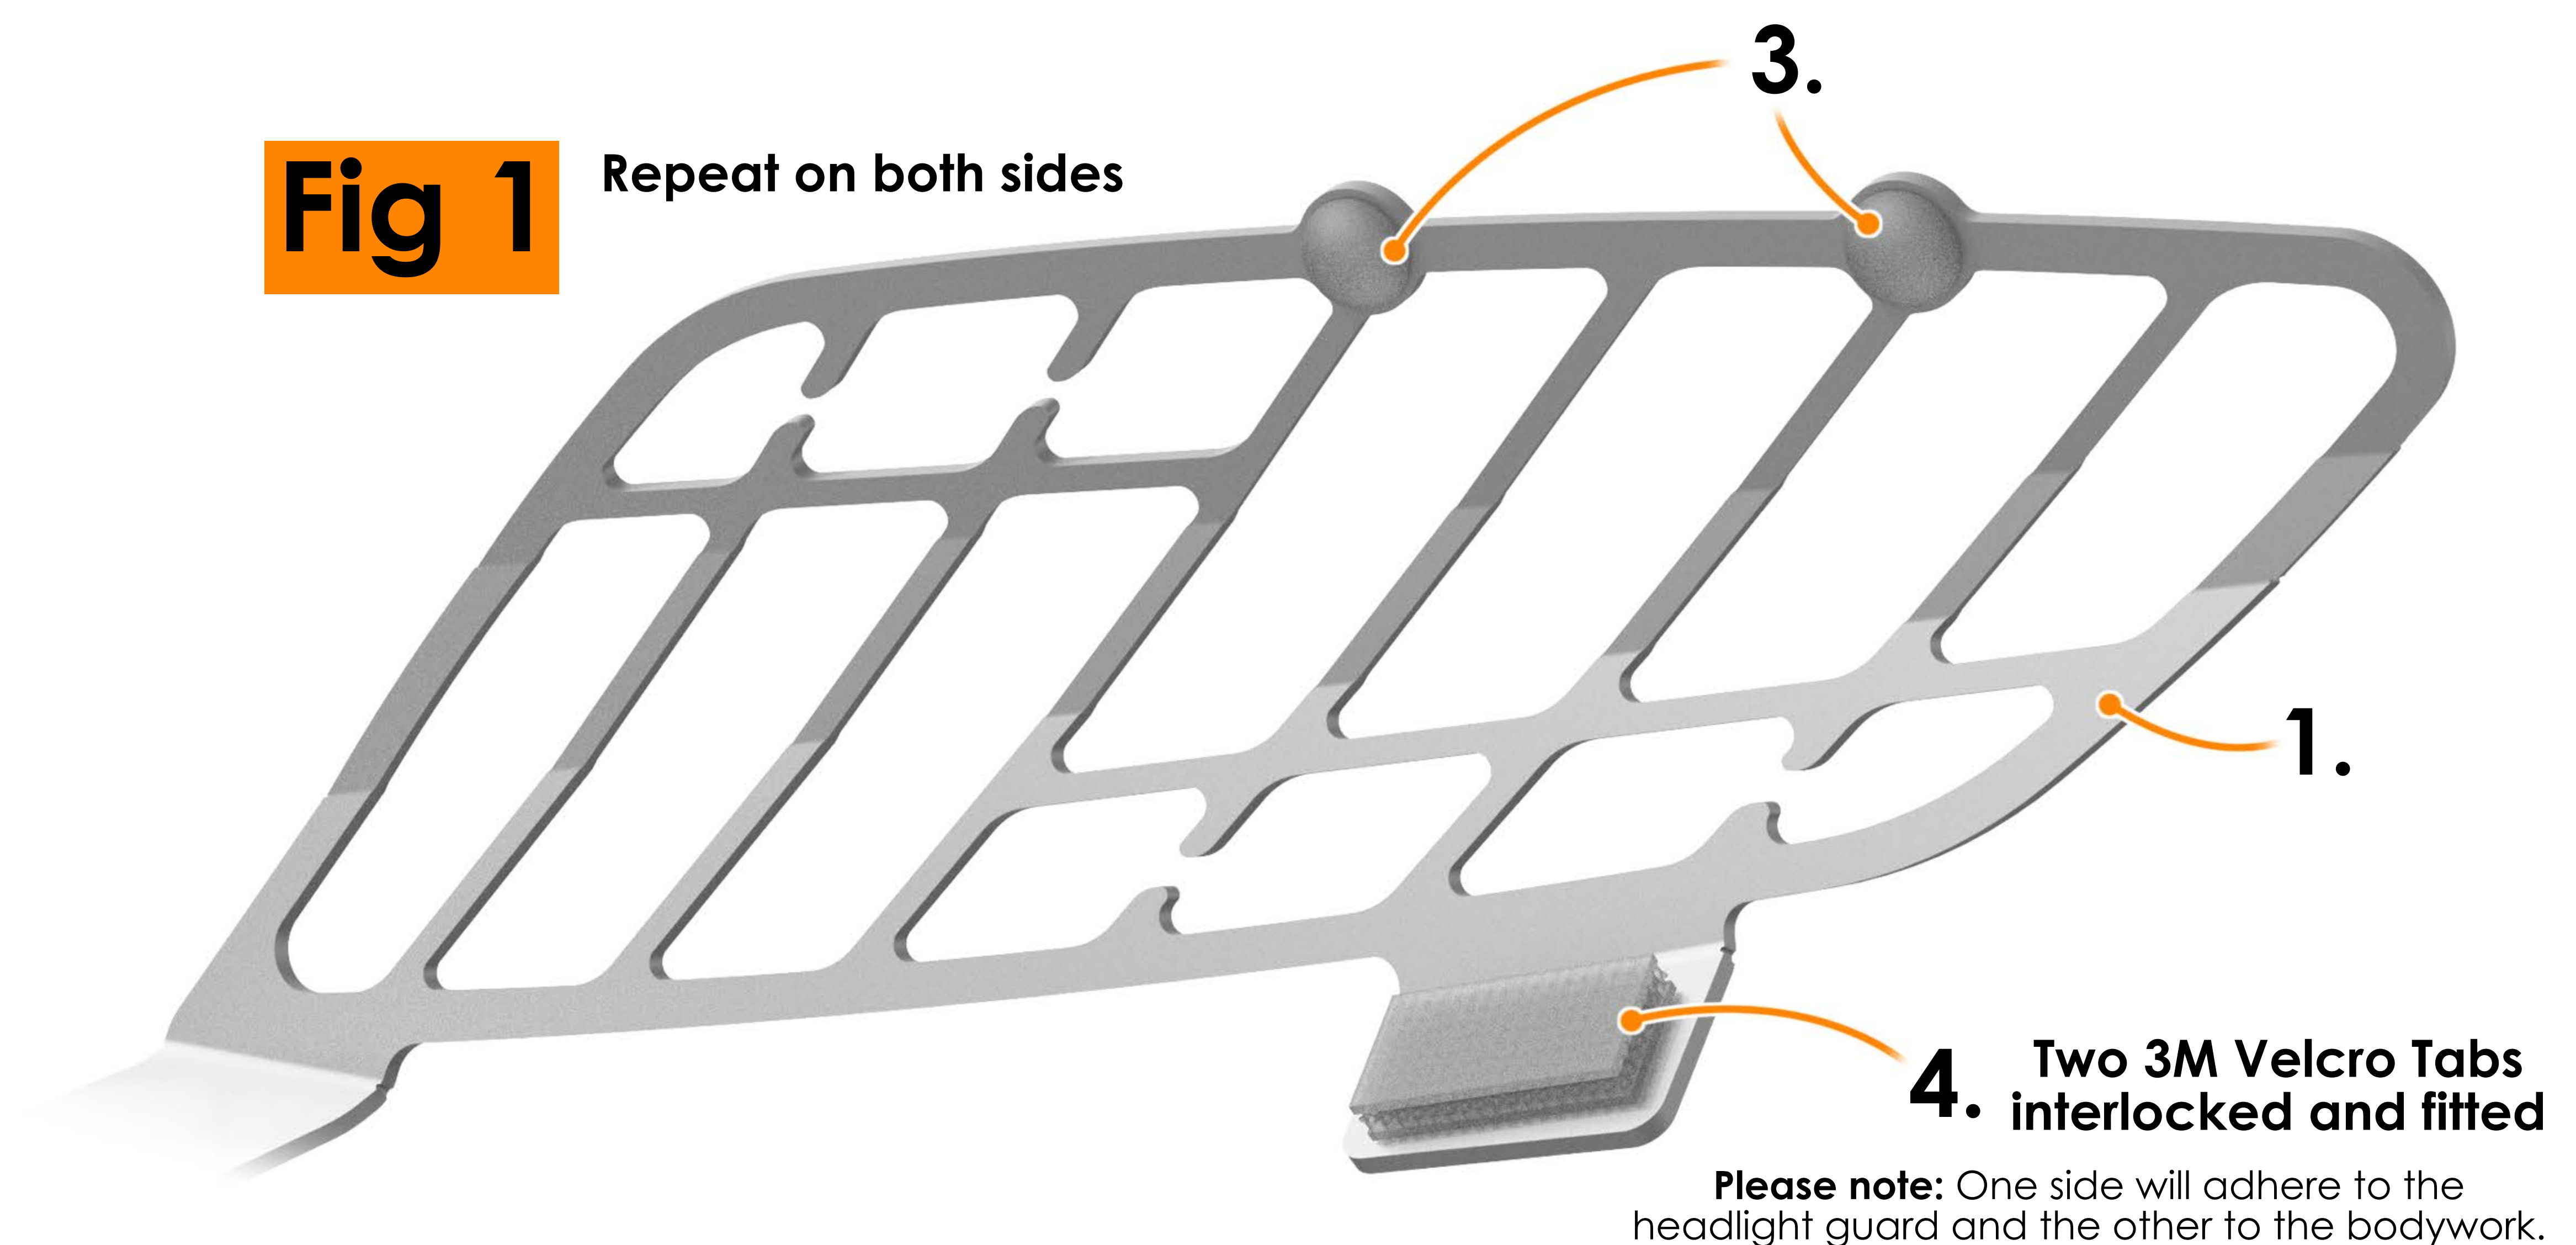


Fig 2

Please note: Once the bolts are almost fully tightened apply pressure to the 3M velcro tabs on both sides of the headlight guard to ensure proper adhesion to the bodywork.

