




22210 Yamaha XSR 900 Fly Screen Fitting Instructions

ID.	DESCRIPTION	QTY.	
1	Fairing	1	SMOT
2	Screen	1	SMOT
3	Screen Kit (3X Well Nuts, M5 X 16mm Bolts, Washers & Bolt Caps)	3	SMOT
4	Metal Brackets (pair)	2	SMOT
5	M6 X 8mm Bolts	4	CBOLM60043
6	M6 Plastic Washers	4	CWASM60003
7	Rubber Trim	1	SMOT

Follow the diagrams below for assistance when fitting.

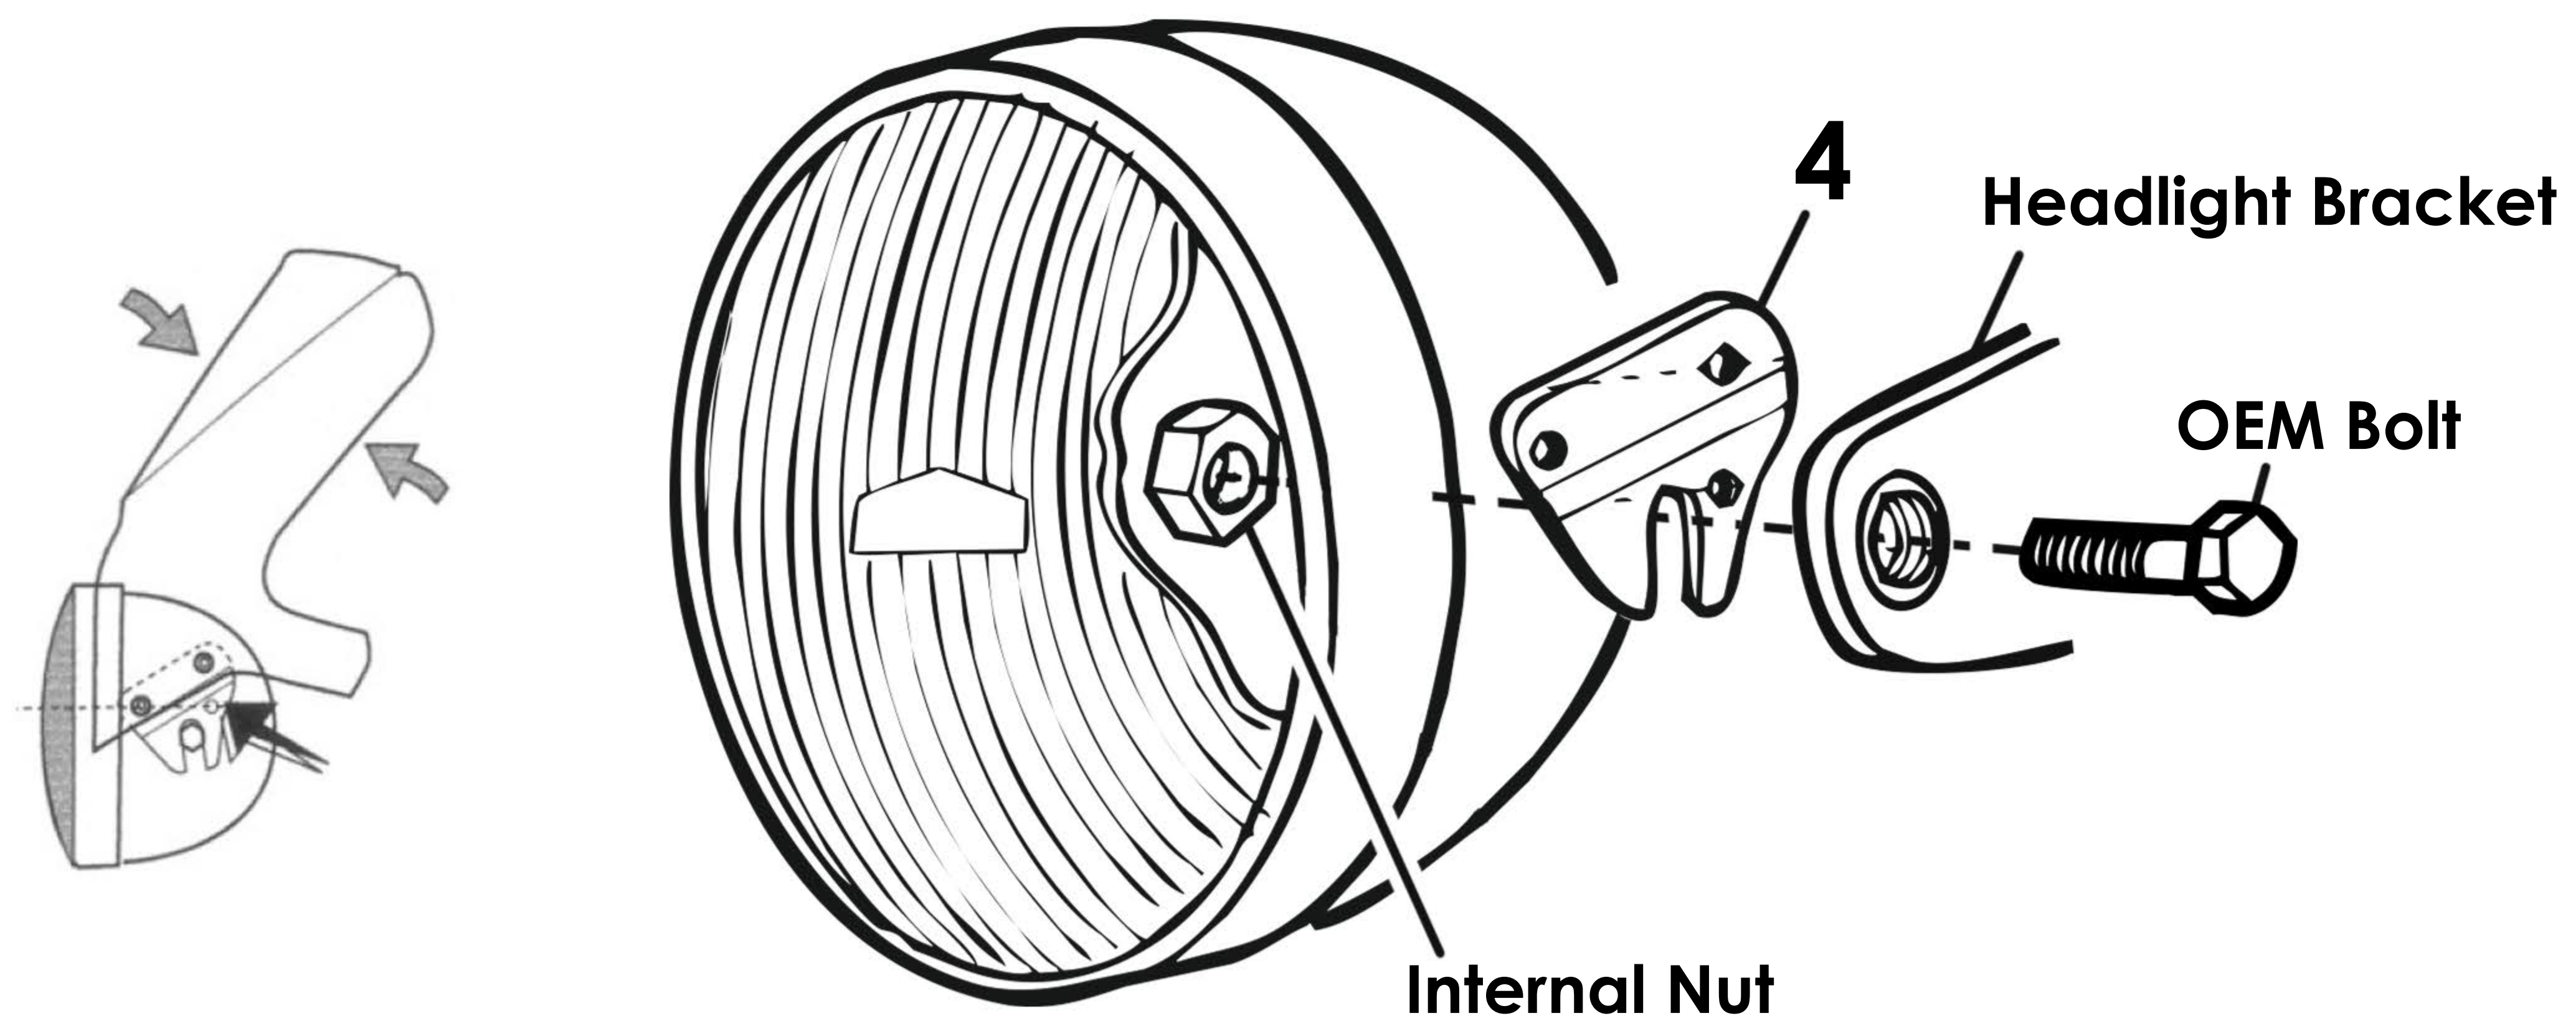

Fitting notes:

The internal nut on the headlight may need to be accessed to tighten up the fly screen brackets.

To do this the outer ring of the headlight (shown in diagram above) needs to be removed temporarily.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

