

32299M Yamaha XSR 900 2022> Fitting Instructions

Kit Includes:


1. X1 C32299 Clutch Cover

OEM Parts (From the Motorcycle):

2. X2 OEM M6 Bolt

Assembly Instructions

- Begin by removing the M6 OEM Bolts (Item 2) as shown in 'FIG. 1'.
- Using the M6 OEM Bolts, loosely fit the Clutch Cover (Item 1) to the mounting points shown in 'FIG. 1'.
- Once the Clutch Cover is in the correct position, fully tighten all fixings.

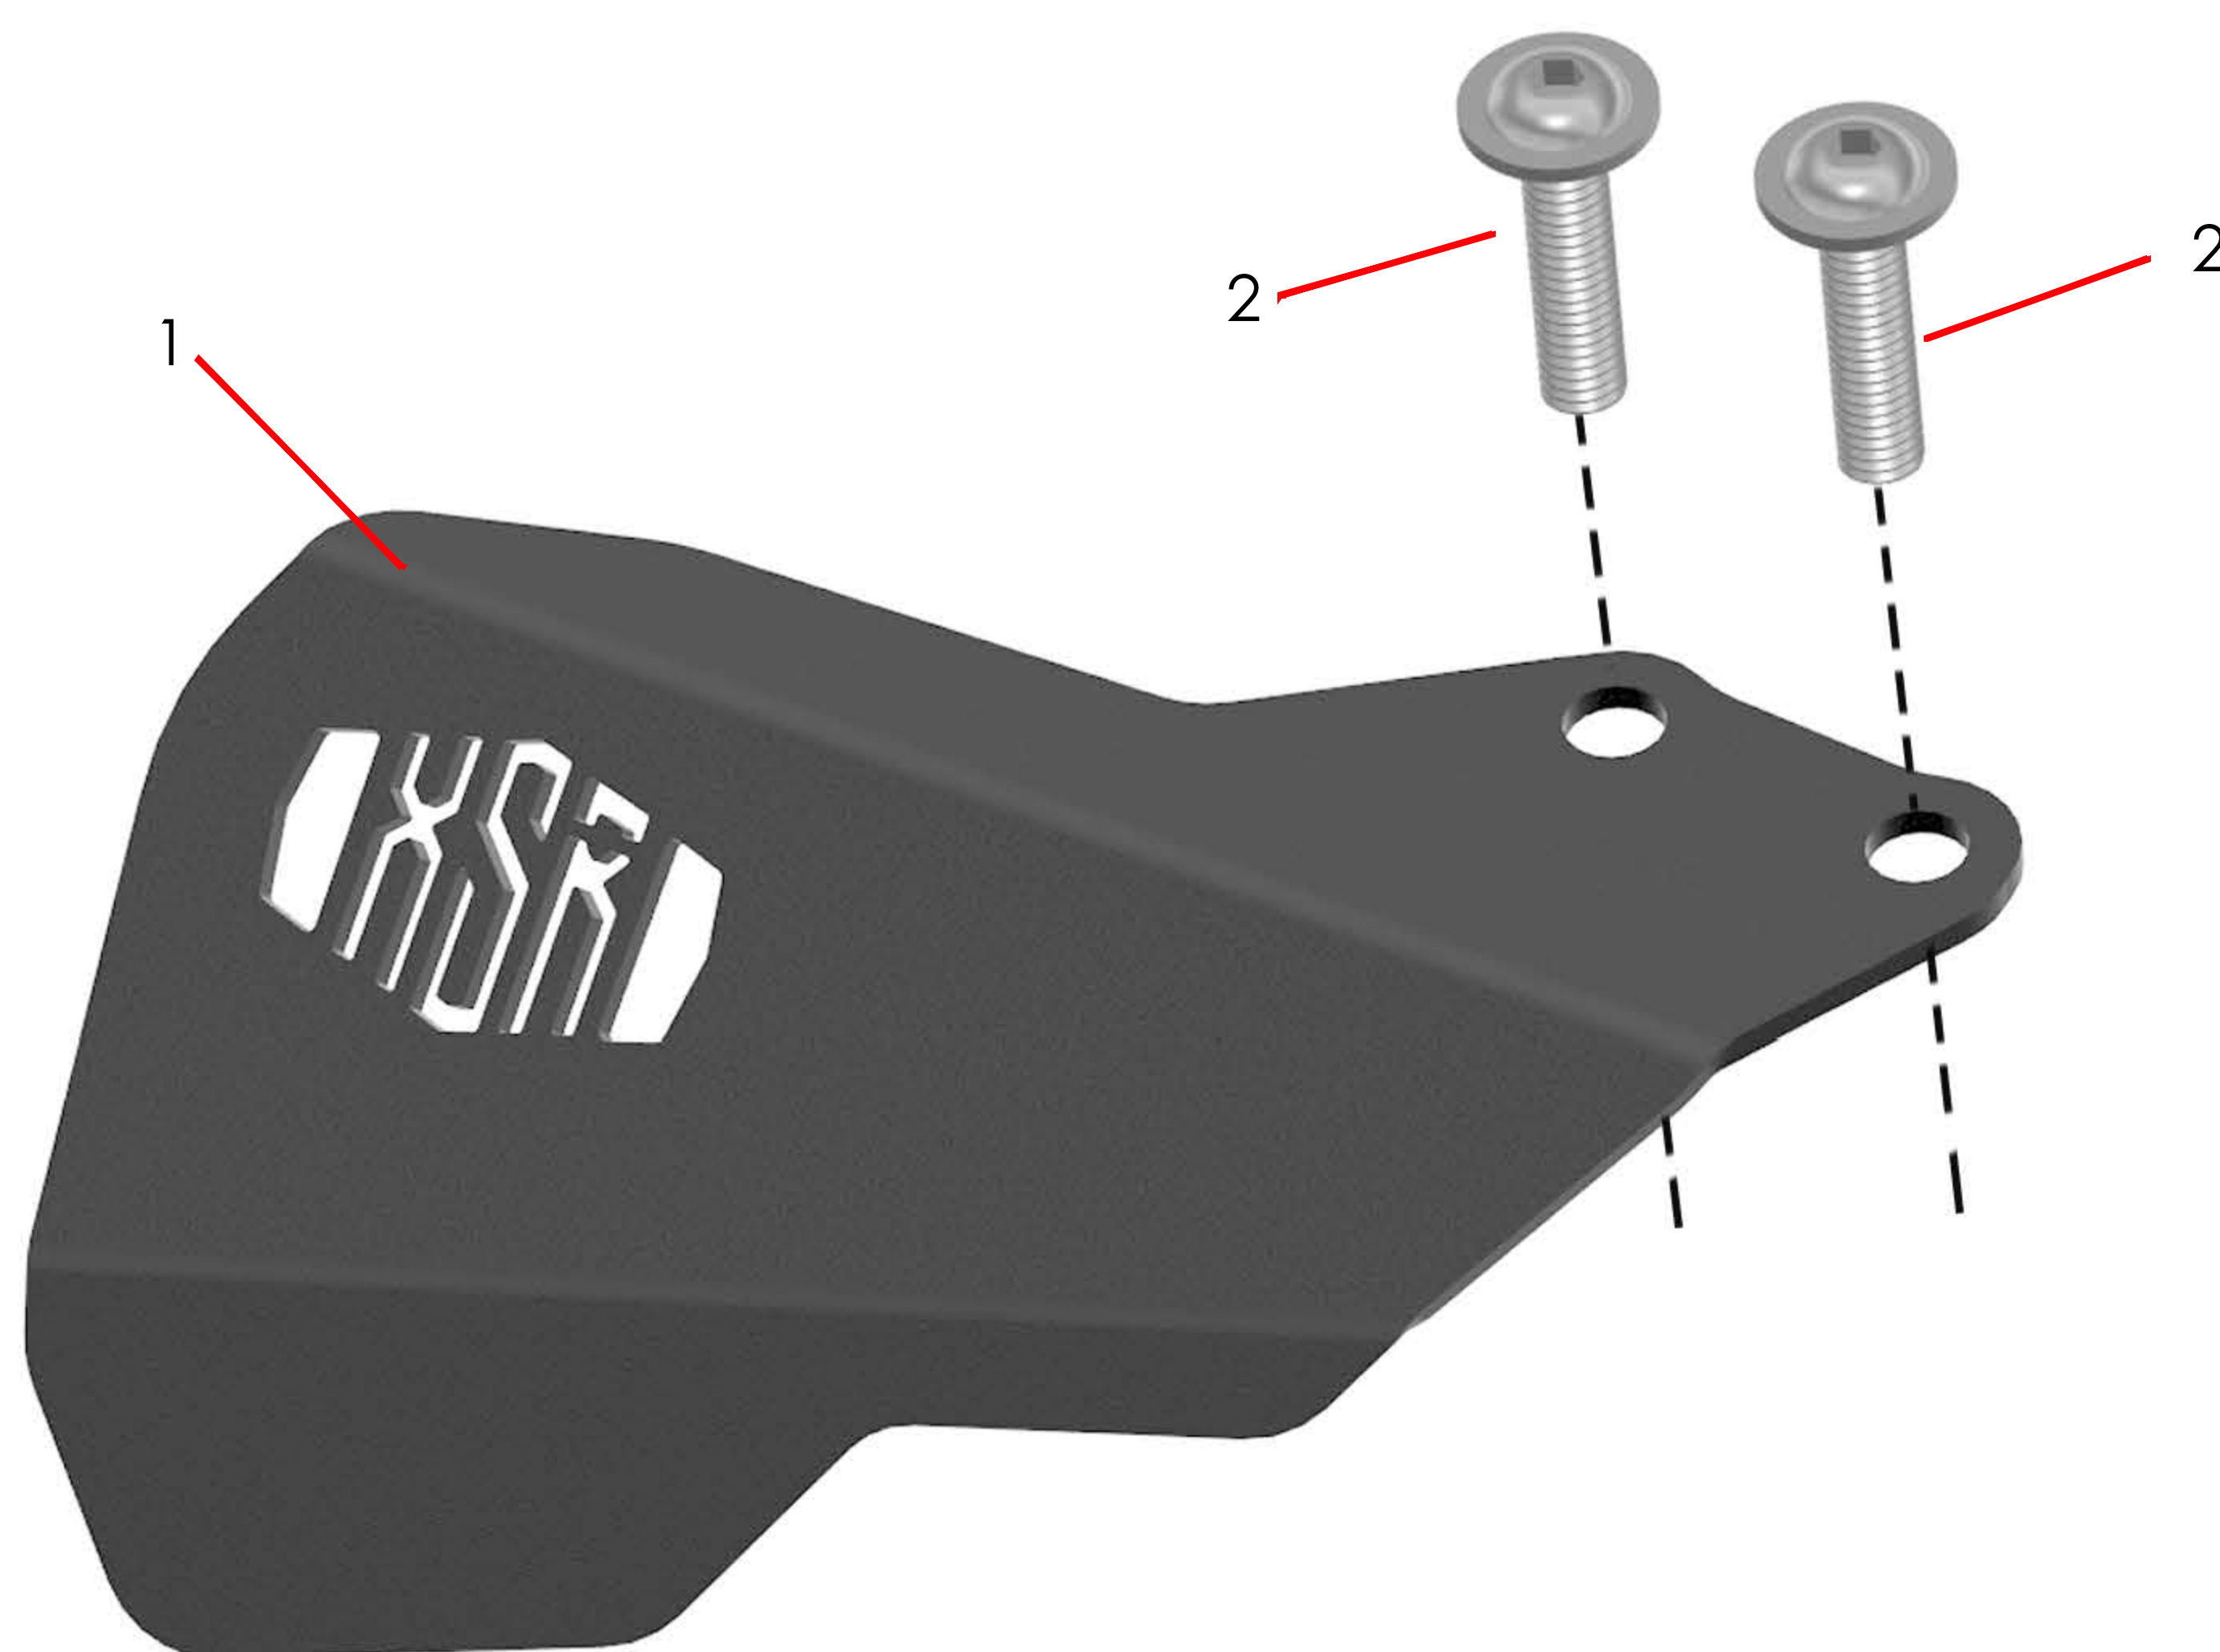

OEM M6 Bolts
Mounting Points

Please Note:

We advise that all fixings
are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

FIG. 1

