

38250 Yamaha MT-09 Frontal Wing 2024> Fitting Instructions

Kit Includes:

1.	X1	C38250	Frontal Wing
2.	X1	CTAP0053	Stick-Fit Pads (x12)
3.	X1	CWIP002	Alcohol Wipe

OEM Fittings:

4.	X1		OEM Bolt
----	----	--	----------



Assembly Instructions

- Begin by attaching the stick-fit pads supplied to the frontal wing (not all pads are needed). Trim the pads with scissors as necessary to achieve the correct fitment (see **Fig 1**).
- Use the supplied alcohol wipe to clean any debris from the mounting areas below the head unit.
- Remove the OEM bolt from underneath the headlight.
- Remove the backing paper from the stick-fit pads.
- Position the OEM bolt (removed in step 3) inside the mounting point on the frontal wing and loosely attach to the motorcycle.

Note: It is important to align the outer edges of the frontal wing as accurately as possible whilst fitting.

- Once the wing is aligned, press down firmly on each side of the wing to ensure good contact with the stick-fit pads. Finally, tighten the OEM bolt securely.

Please note: We advise that all fixings are checked periodically.

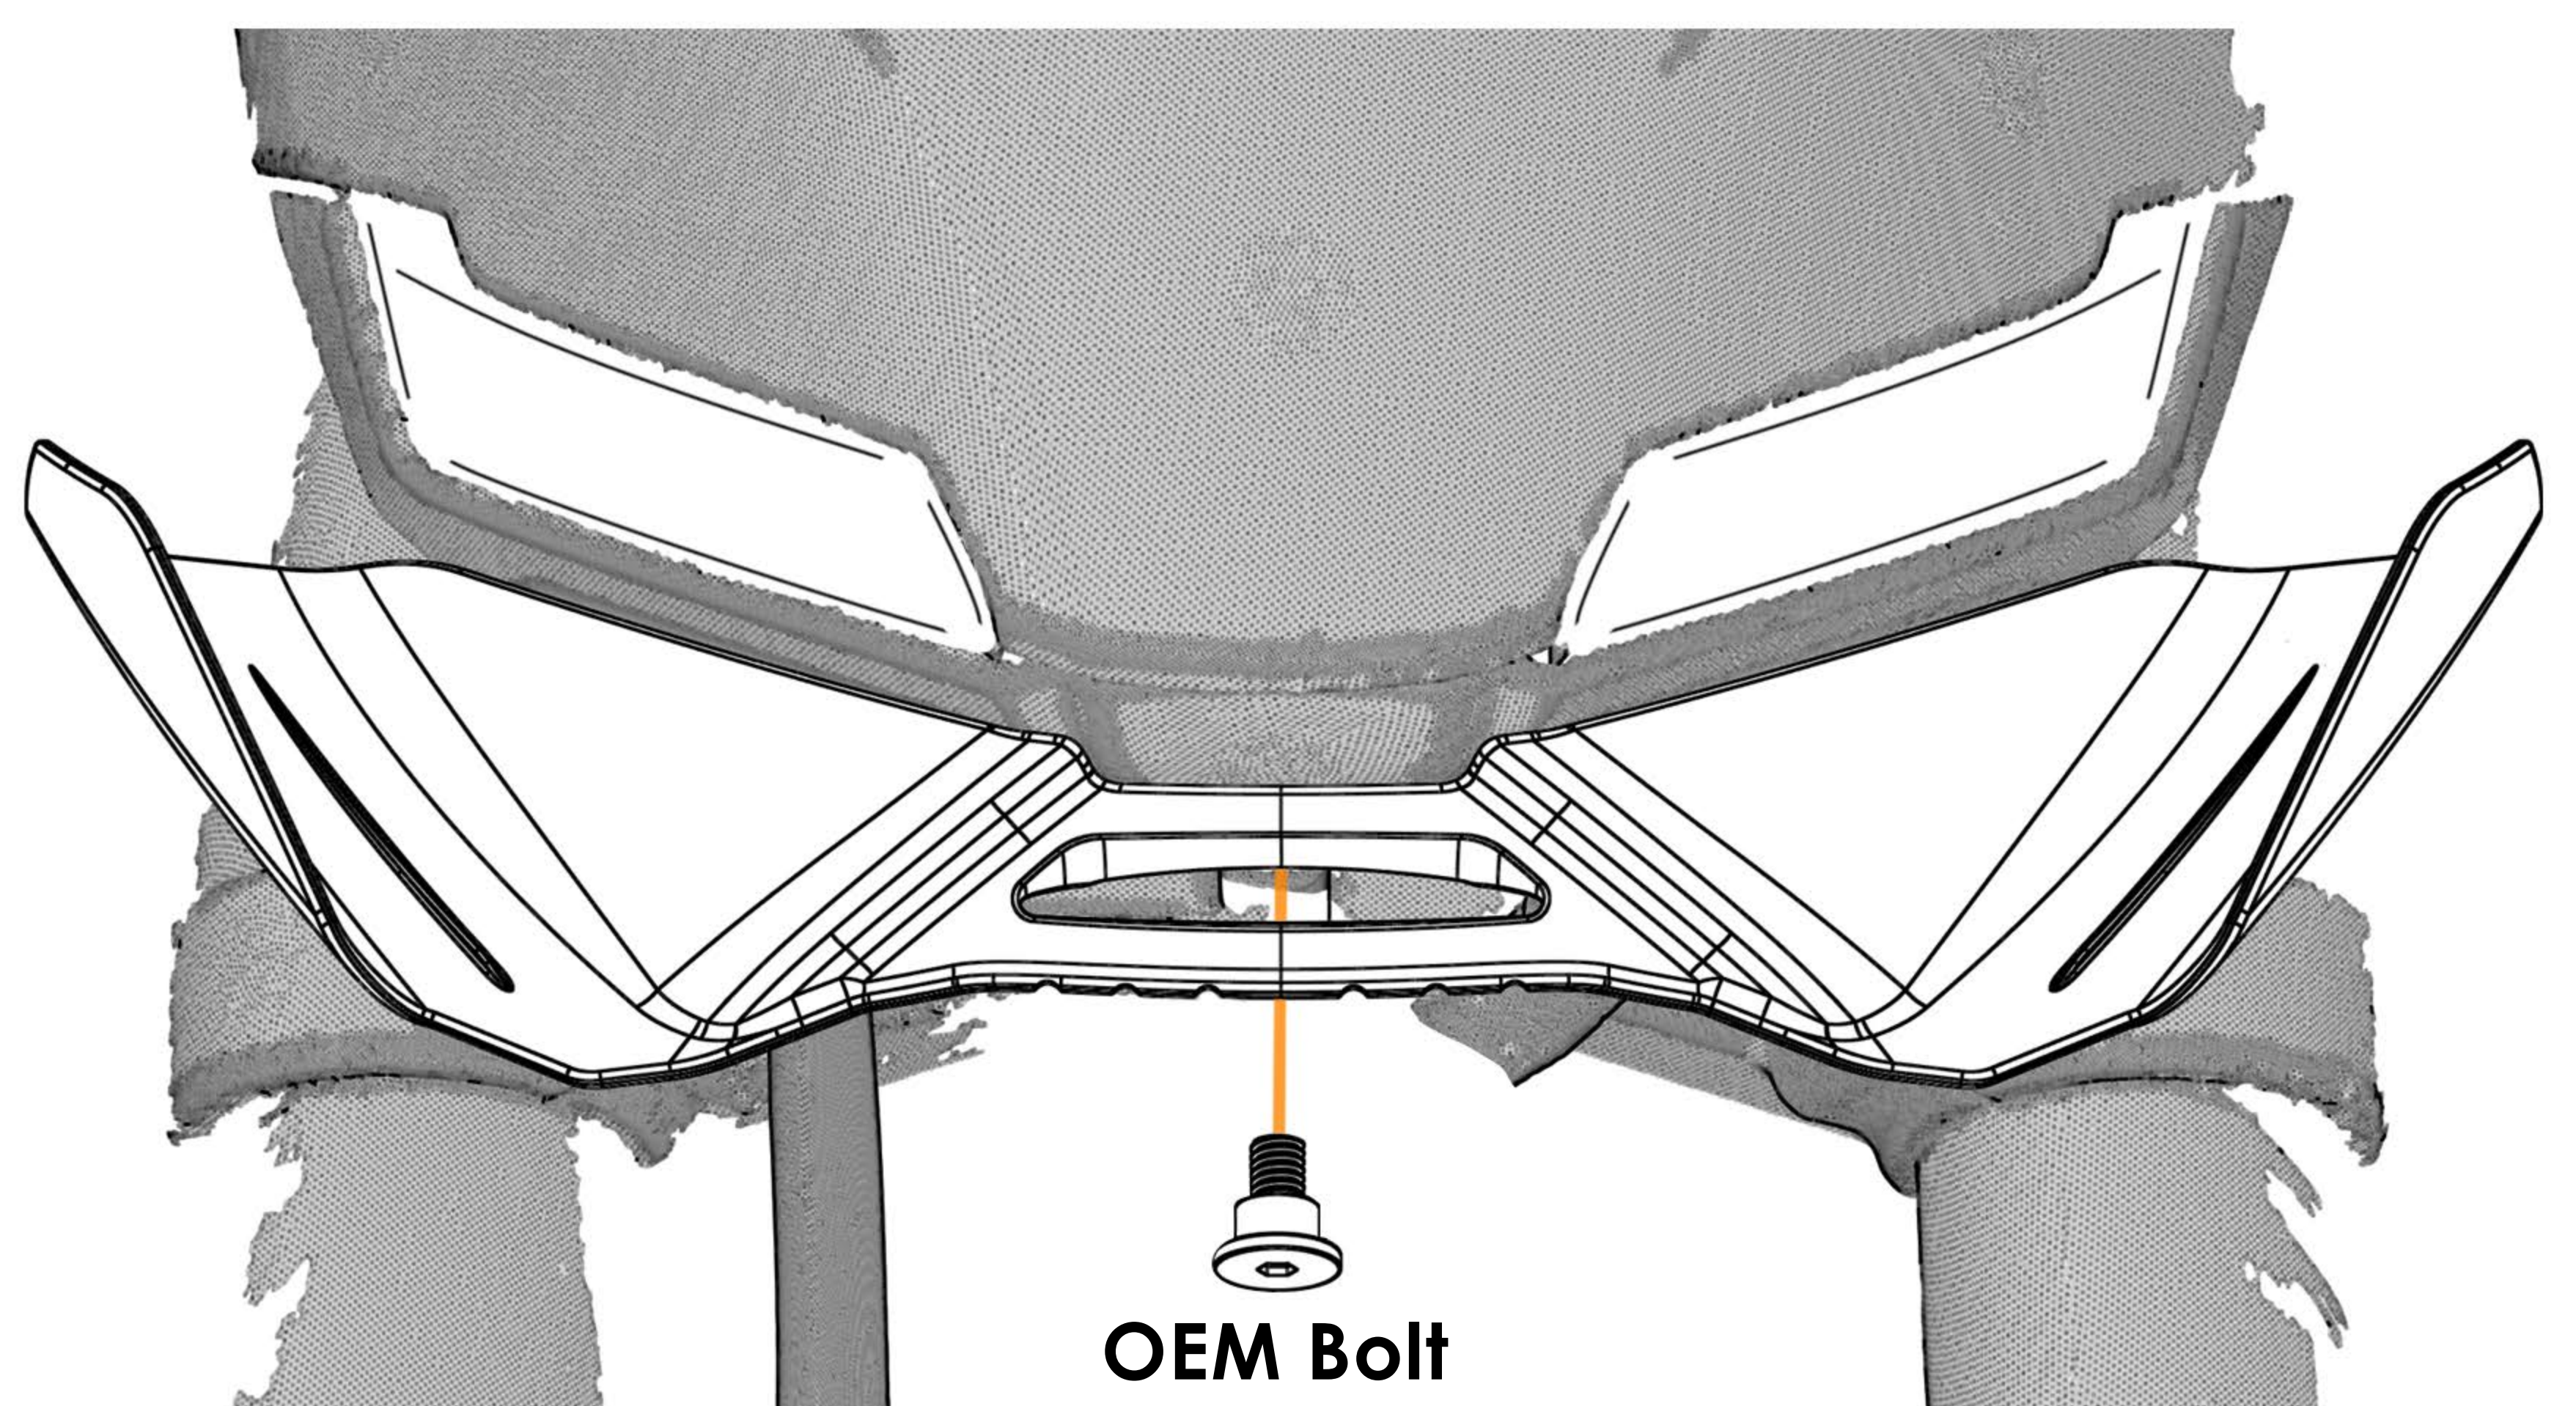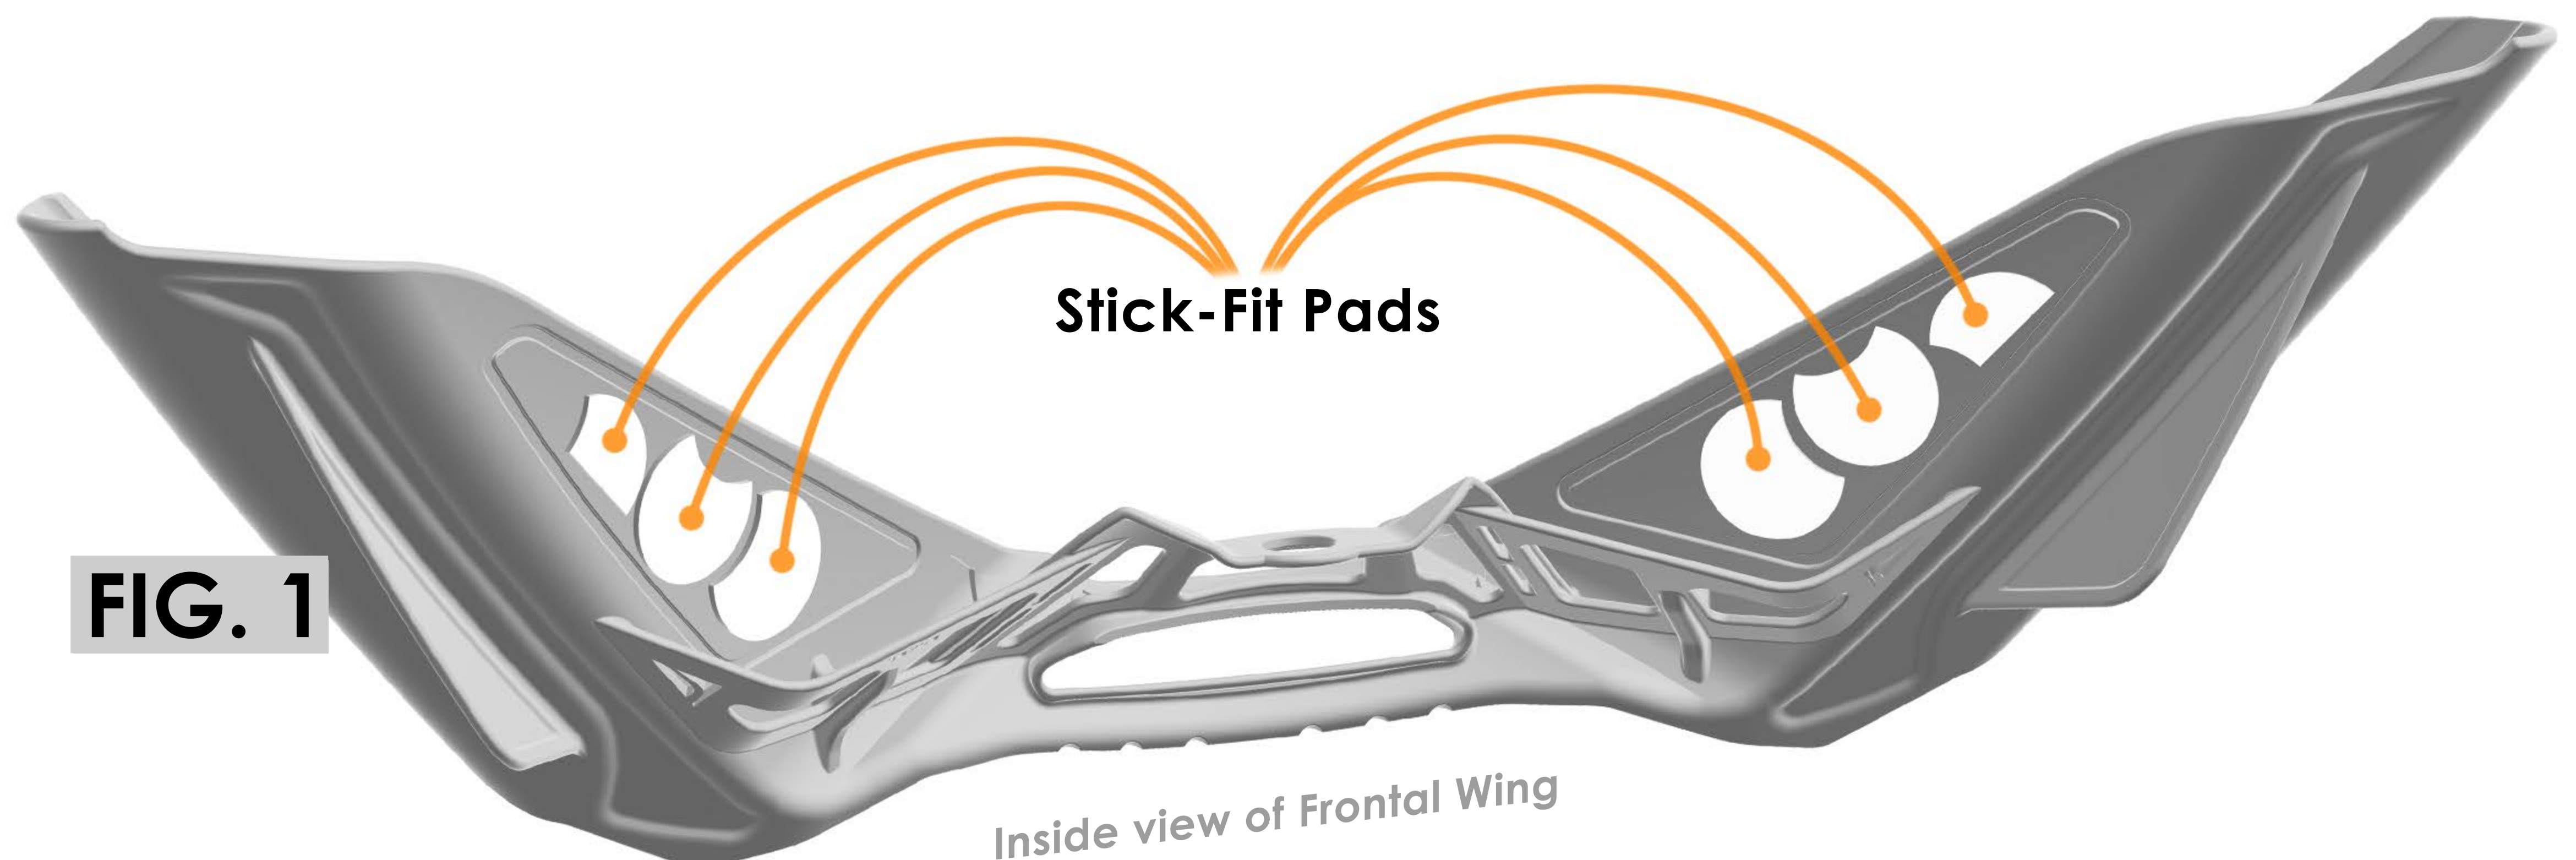

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!