



529700 Royal Enfield Guerrilla 450 Radiator Guard Fitting Instructions

Kit Includes:

1.	X1	C529700	Radiator Guard
2.	X1	CFOA0002	Foam Strip 300mm

OEM Parts (from Motorcycle):

3.	X3		OEM M6 Bolt
----	----	--	-------------


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by removing the OEM M6 bolts from the radiator.
- Trim and attach the foam strip supplied to the areas shown in **Fig 1**.
- Fit the radiator guard using the OEM M6 bolts removed in step 1 - see **Fig 2**.
- Fully tighten all mounting points and check fixings periodically.

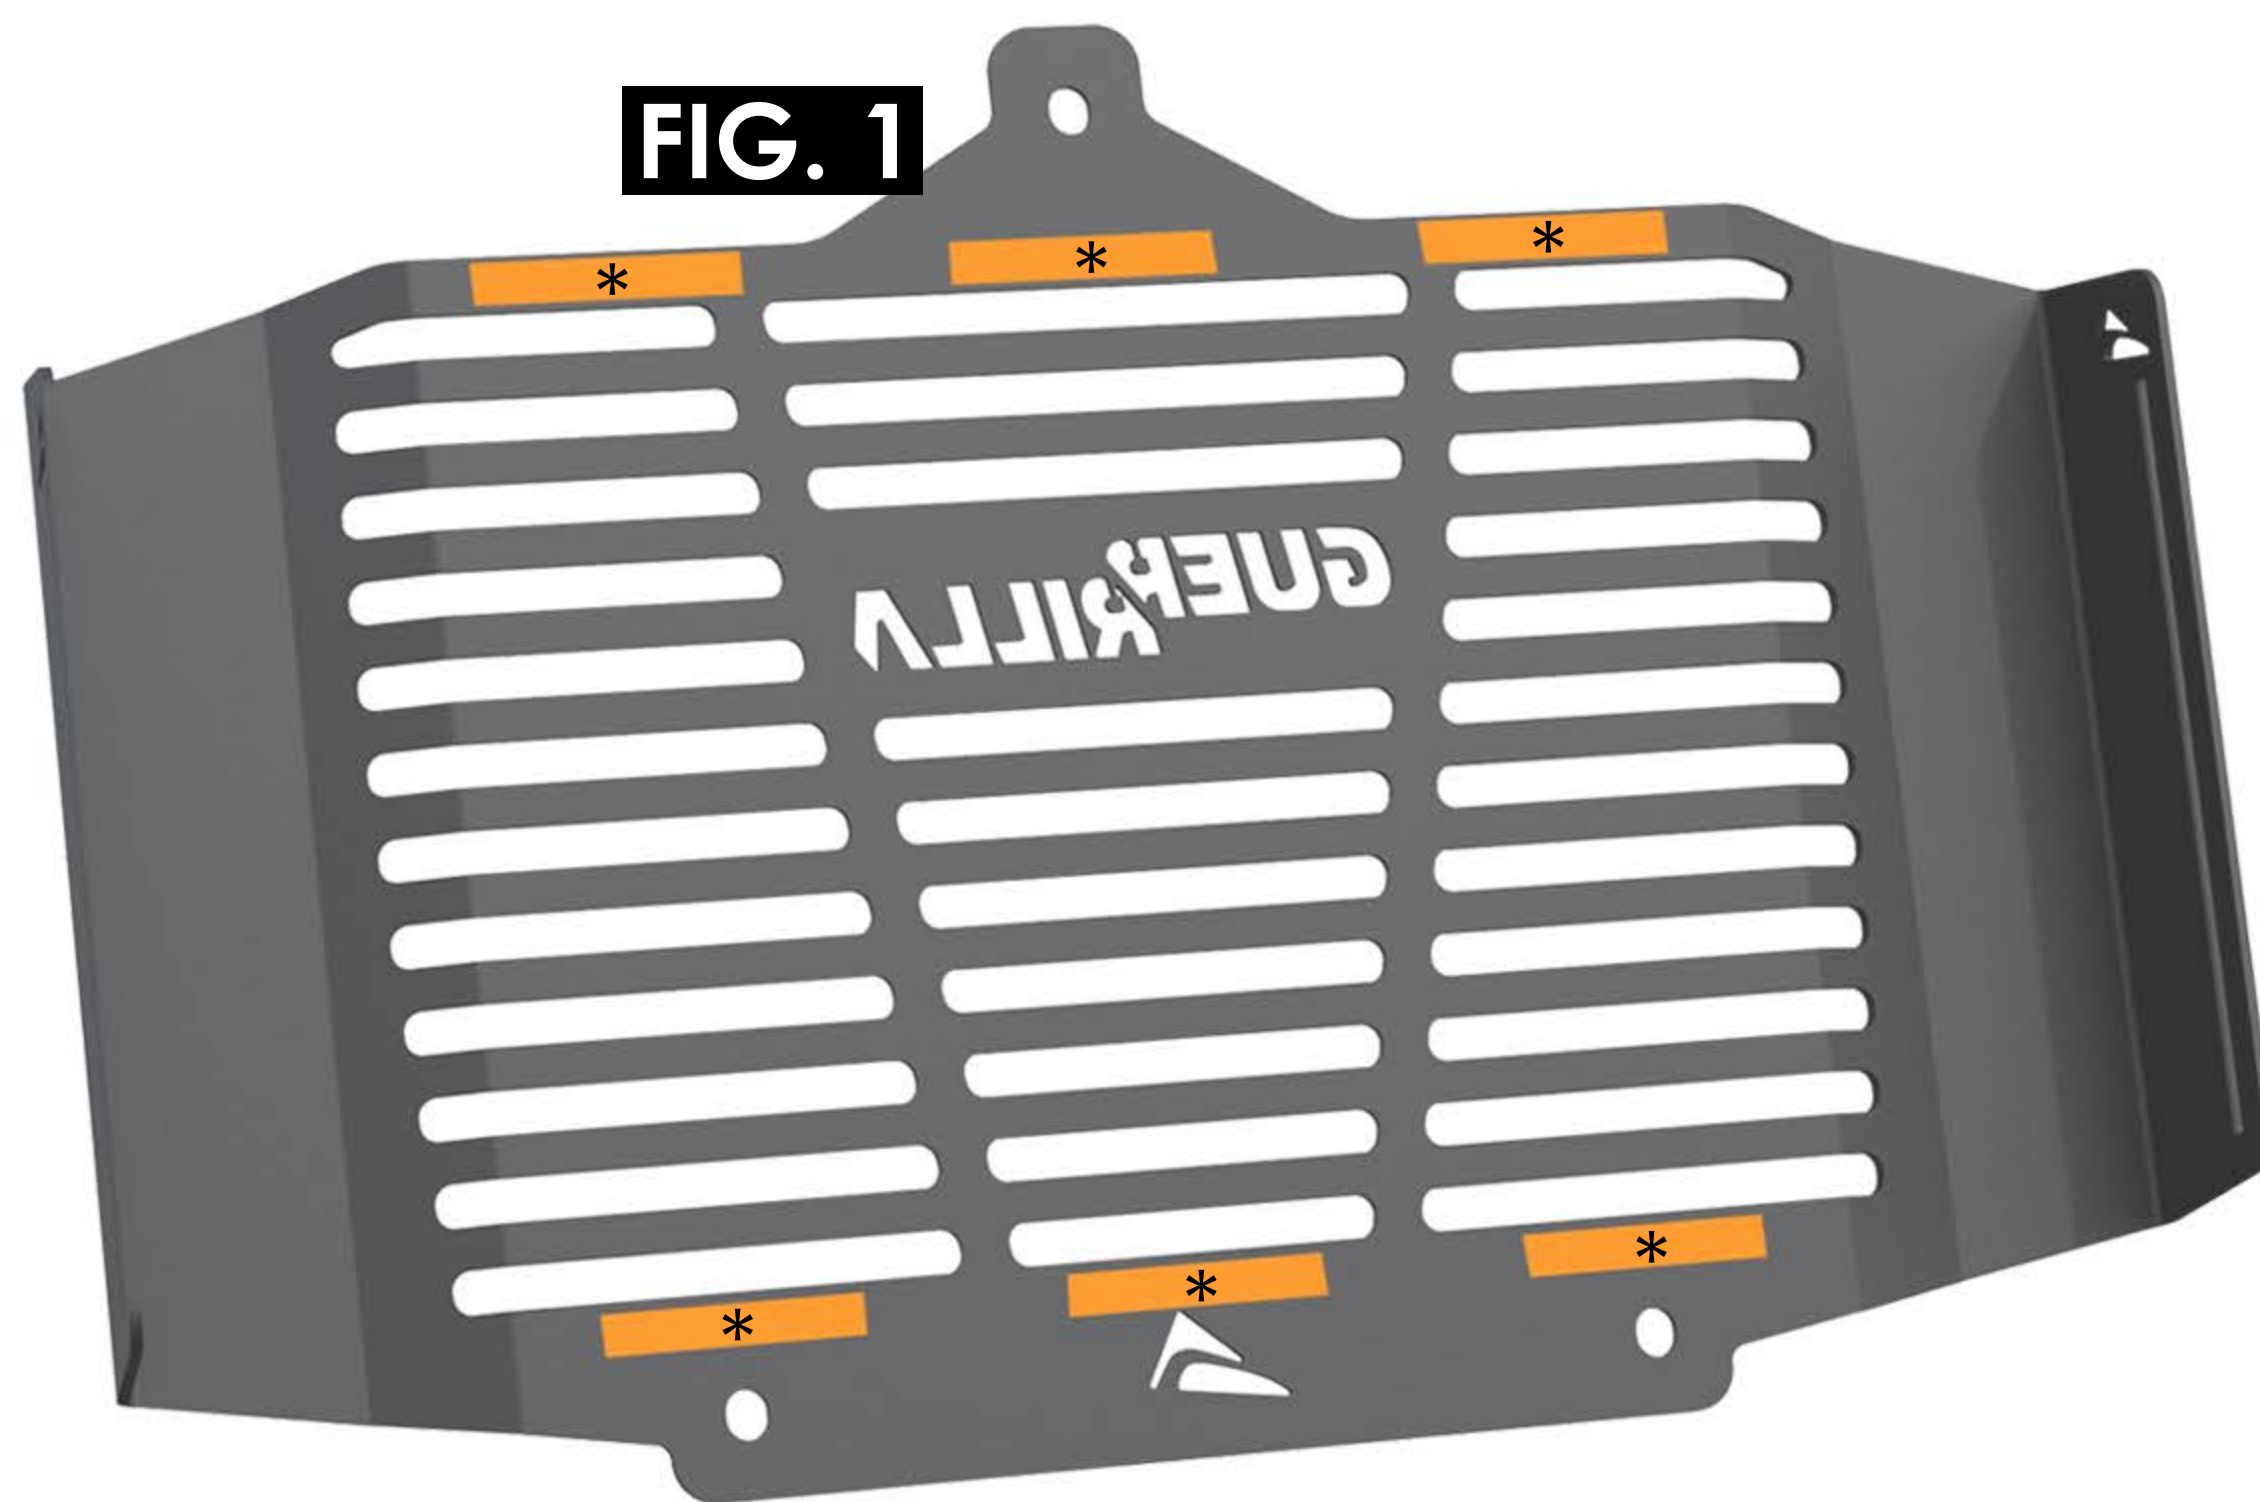

* = Recommended fitting areas for
foam strips (inside of radiator guard)



* = OEM M6 Bolts



529700 Royal Enfield Guerrilla 450 Radiator Guard Fitting Instructions

Kit Includes:

1.	X1	C529700	Radiator Guard
2.	X1	CFOA0002	Foam Strip 300mm

OEM Parts (from Motorcycle):

3.	X3		OEM M6 Bolt
----	----	--	-------------


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by removing the OEM M6 bolts from the radiator.
- Trim and attach the foam strip supplied to the areas shown in **Fig 1**.
- Fit the radiator guard using the OEM M6 bolts removed in step 1 - see **Fig 2**.
- Fully tighten all mounting points and check fixings periodically.

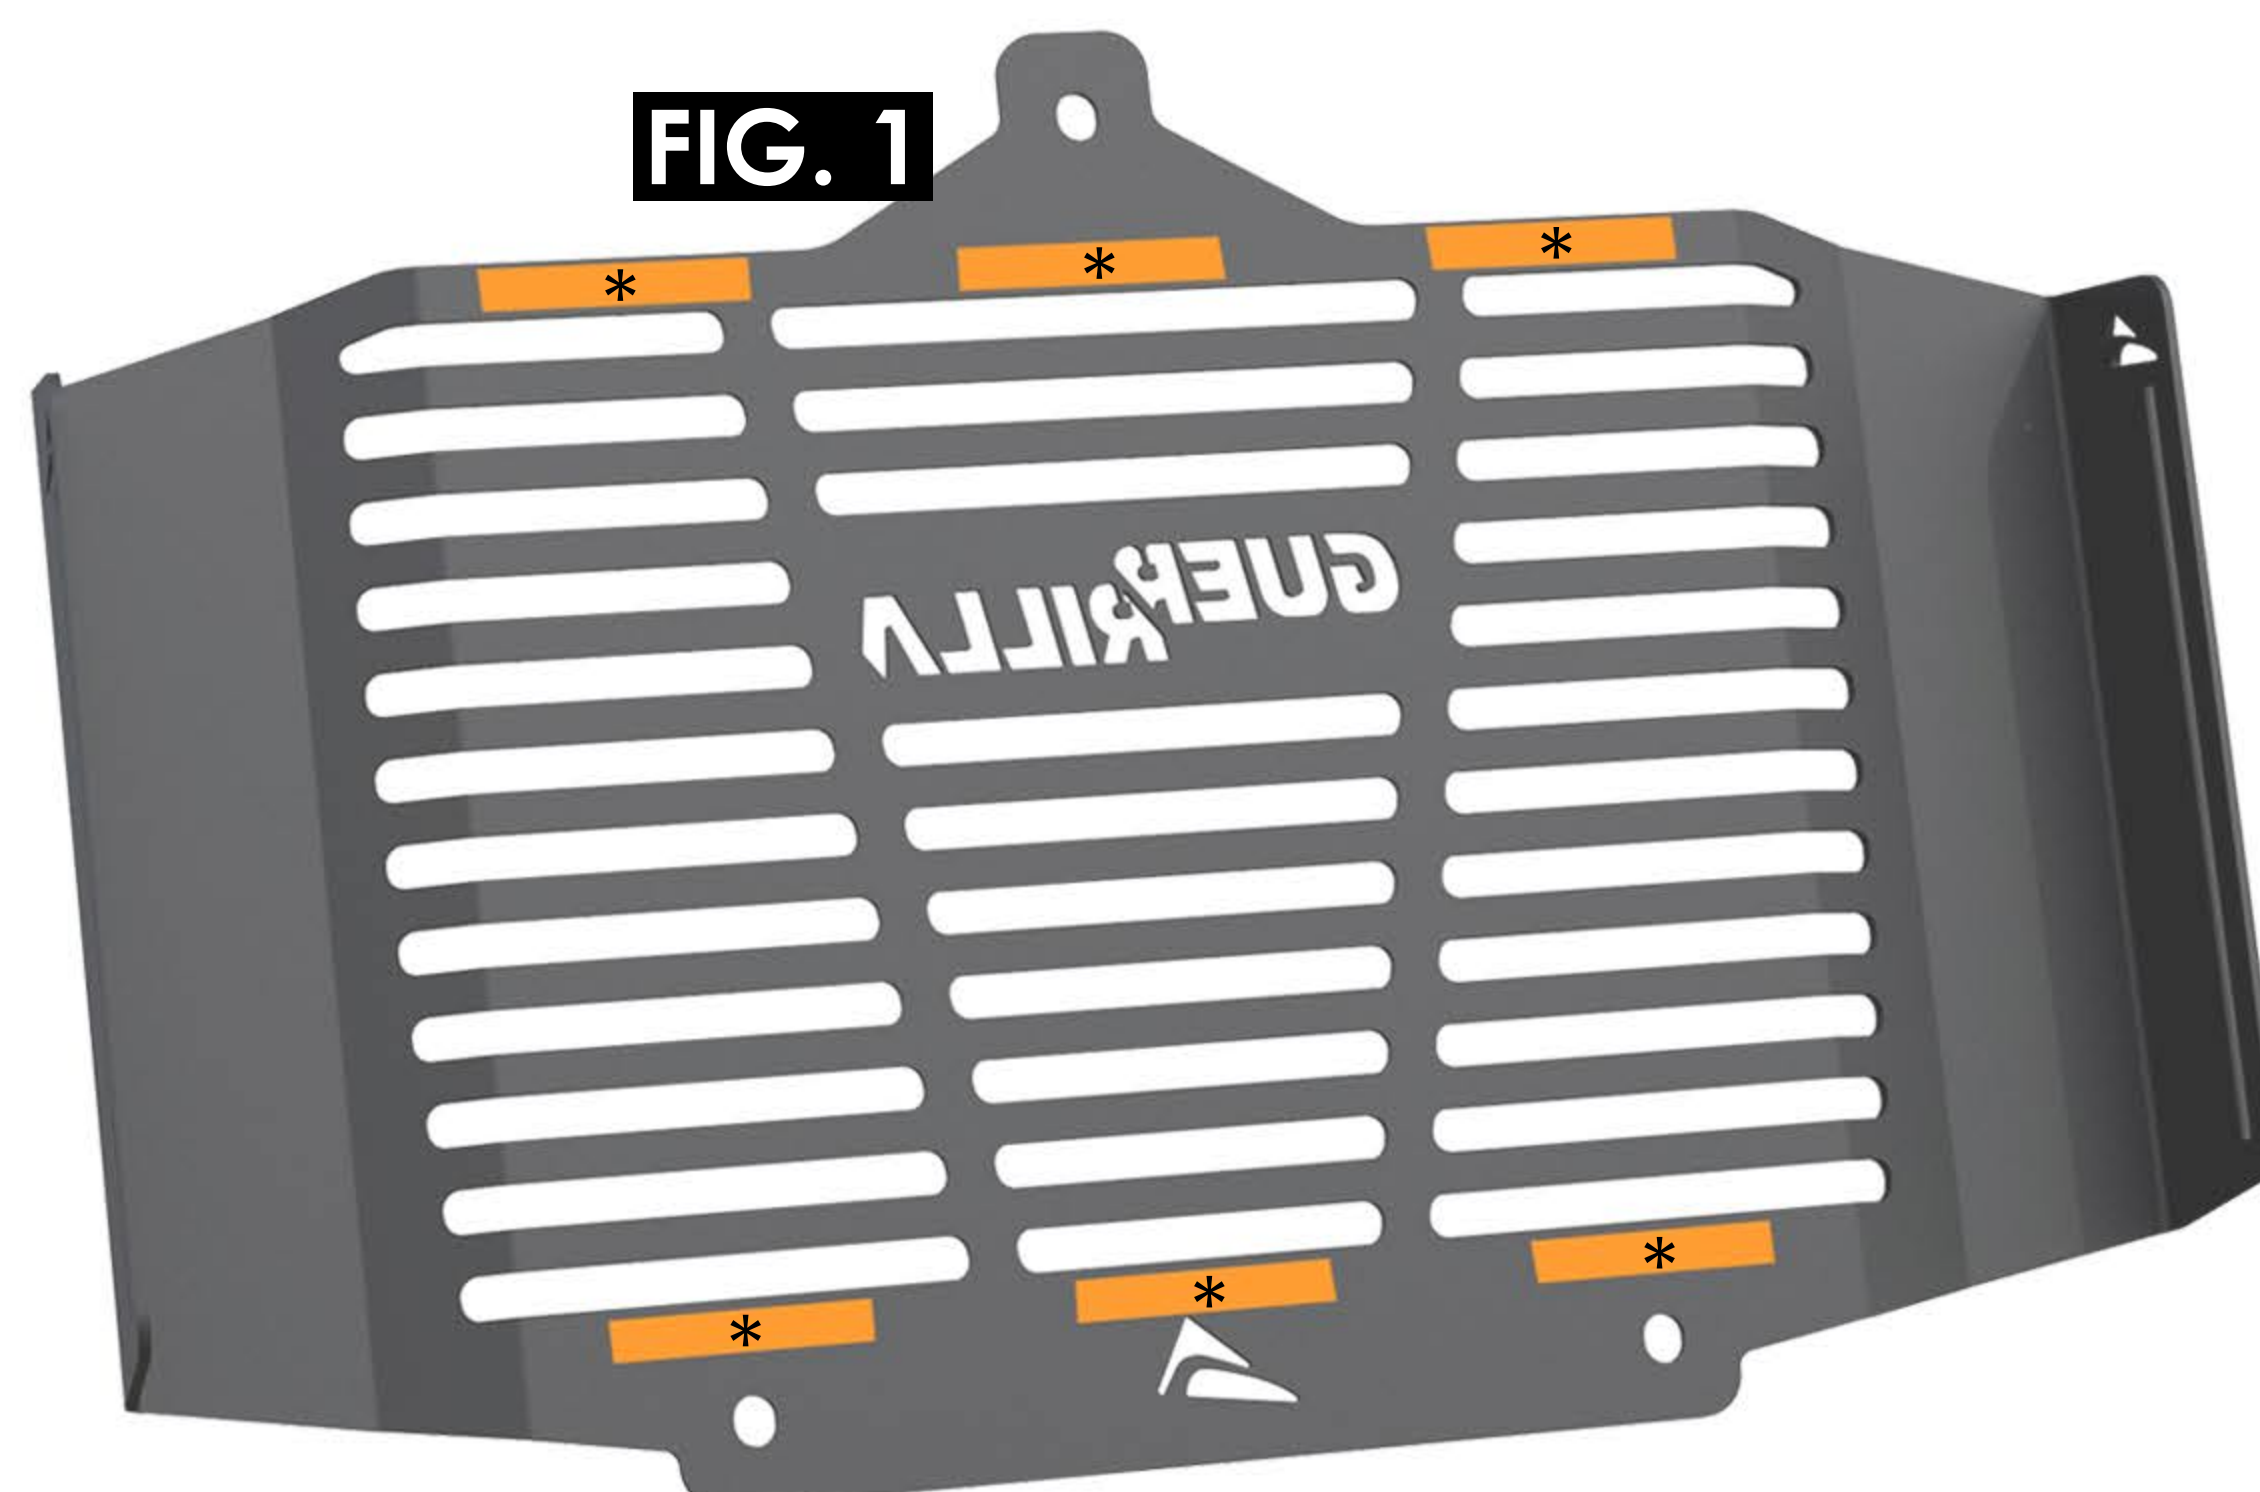

* = Recommended fitting areas for
foam strips (inside of radiator guard)

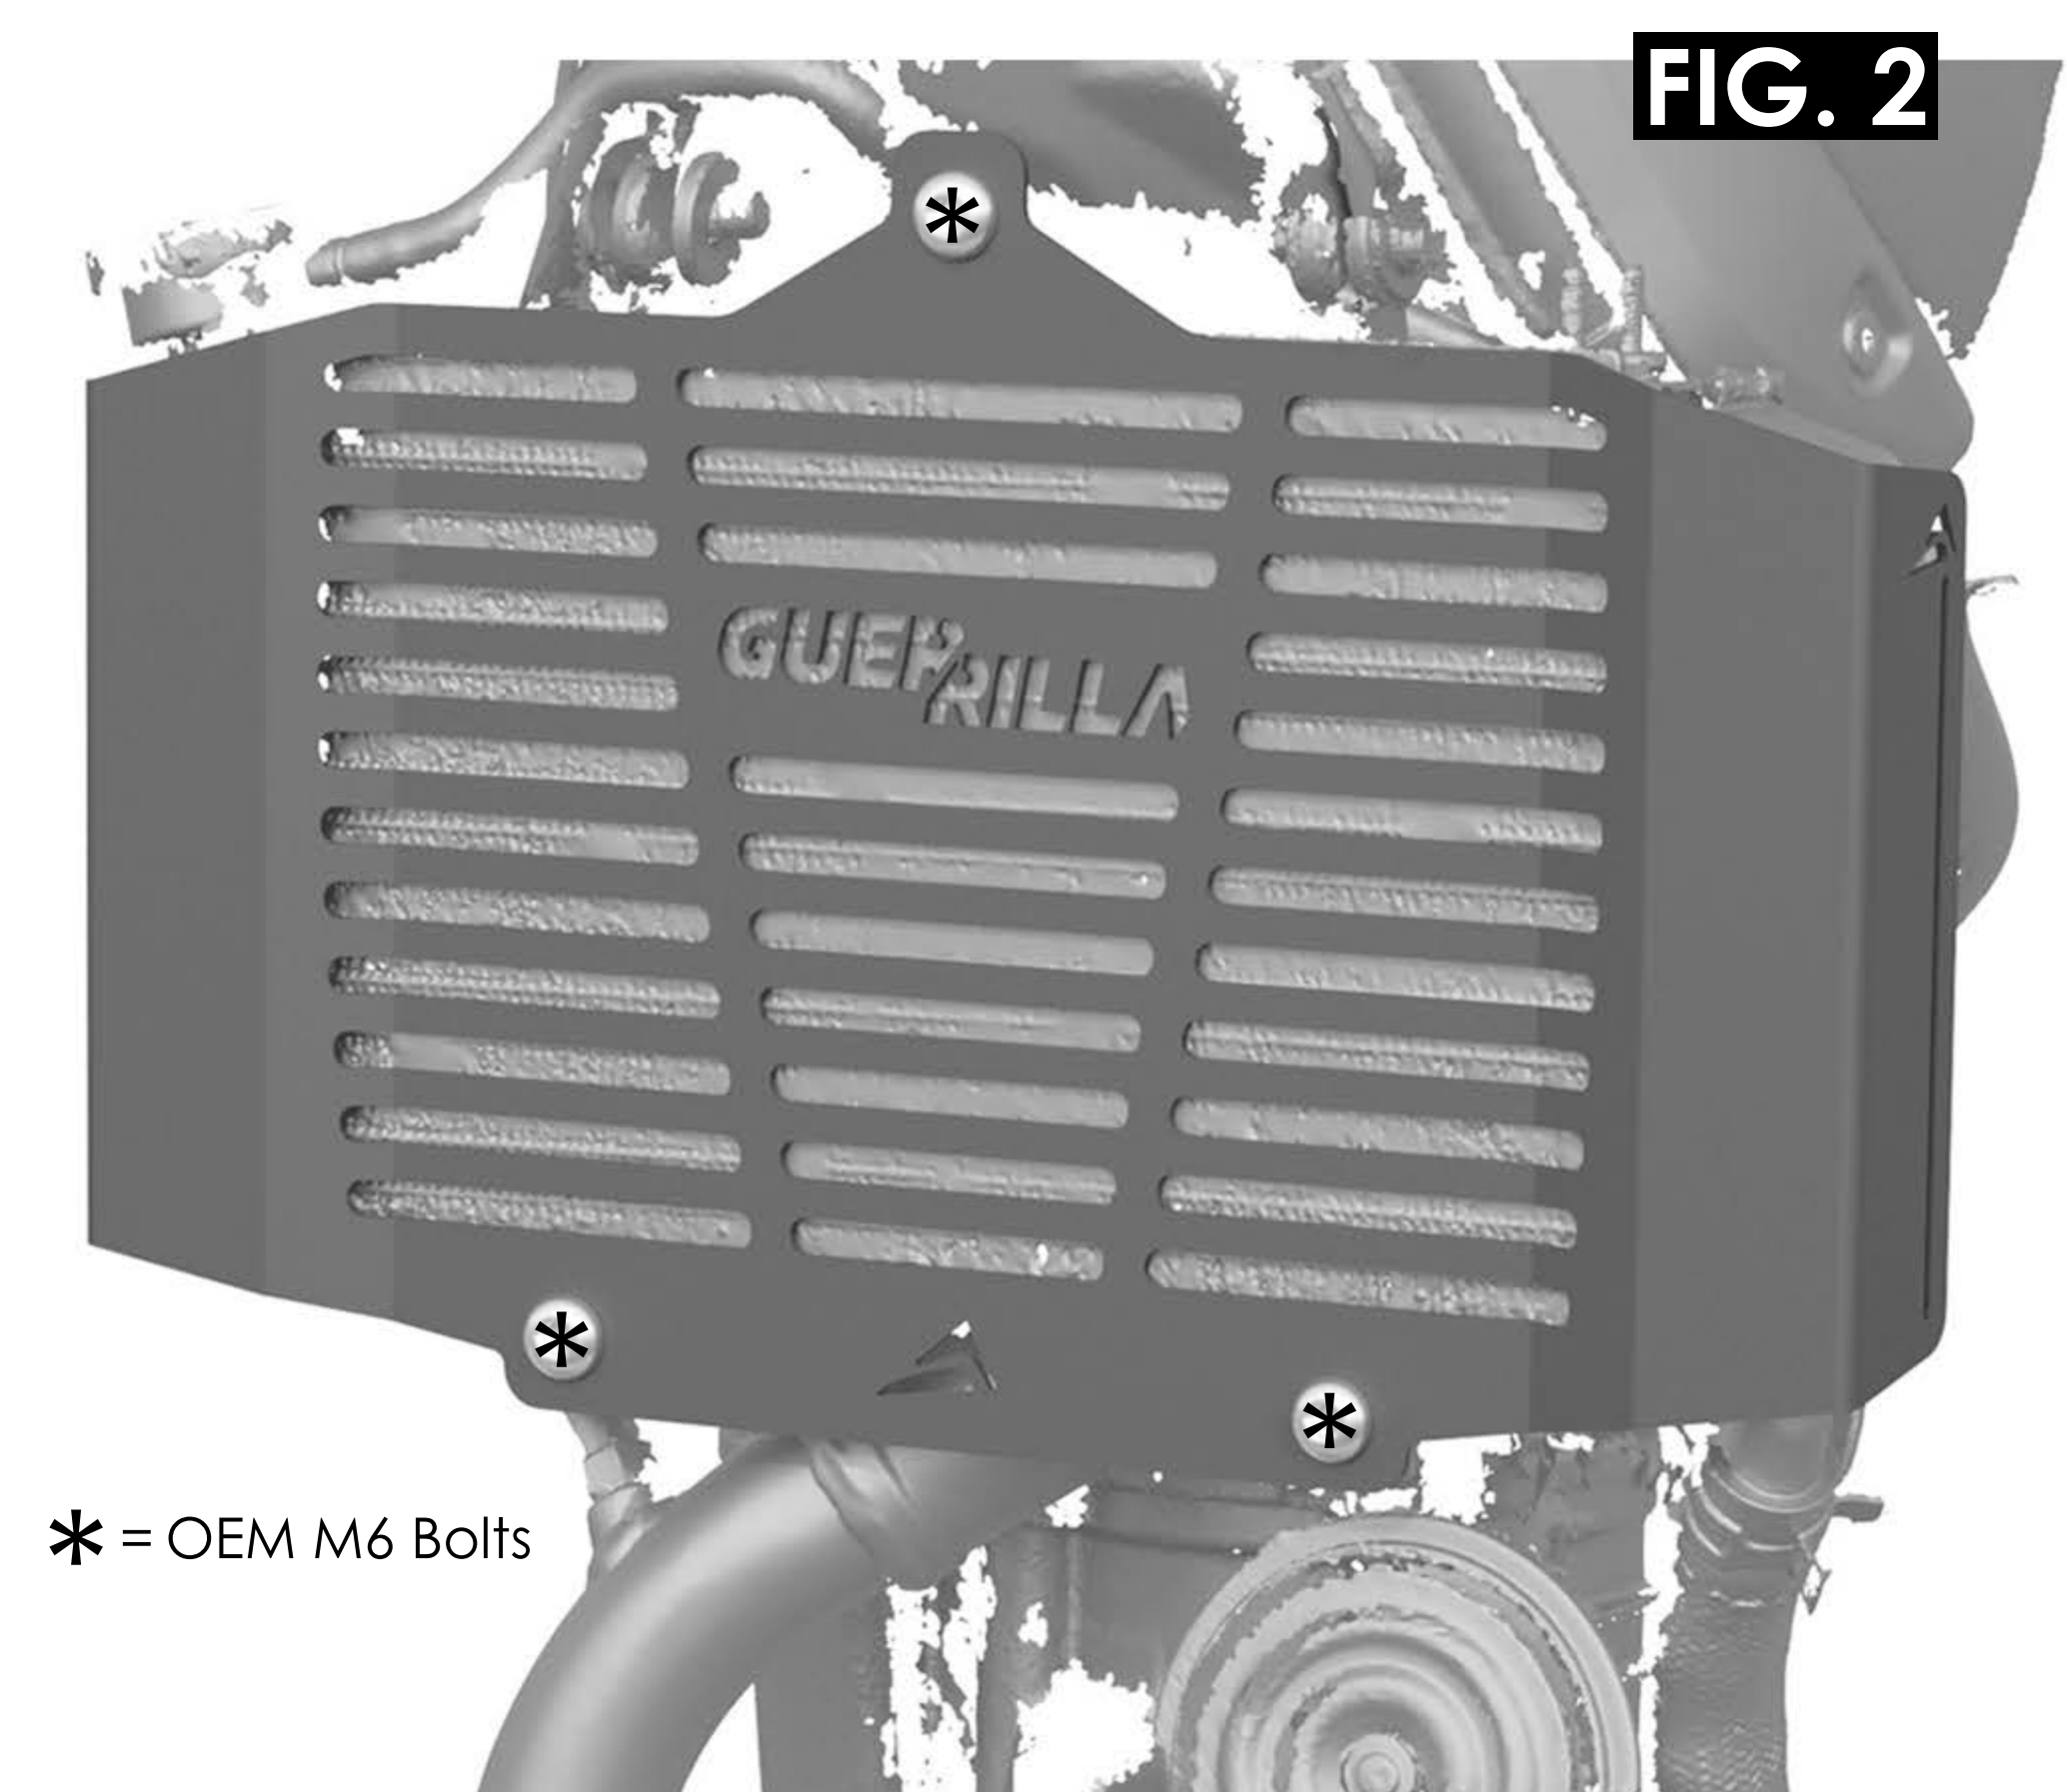

* = OEM M6 Bolts