

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-RS660-2021-1-GBR / Secondary Clutch Cover Part No. EC-RS660-2021-2-GBR /



Secondary Water Pump Cover Part No. EC-RS660-2021-5-GBR

Paddock Stand Bobbins Part No. BA12-6-GBR-SET / Lower Chain Guard Part No: CGA09-GBR





SECONDARY ALTERNATOR COVER PART NO. EC-RS660-2021-1-GBR

- 1 Remove / loosen lower fairing.
 - 2 Remove 4 existing bolts from the stock Alternator cover, shown as position Bolts 1, 2, 3 & 4.
 - 3 Place the Secondary Alternator Cover over the stock cover.
 - 4 Assemble 4 replacement bolts loosely in the correct position as shown.
 - 5 Tighten bolts to a Torque of 12Nm as per Manufacturer's recommendations.
 - 6 Replace / tighten lower fairing.
- DO NOT OVERTIGHTEN.

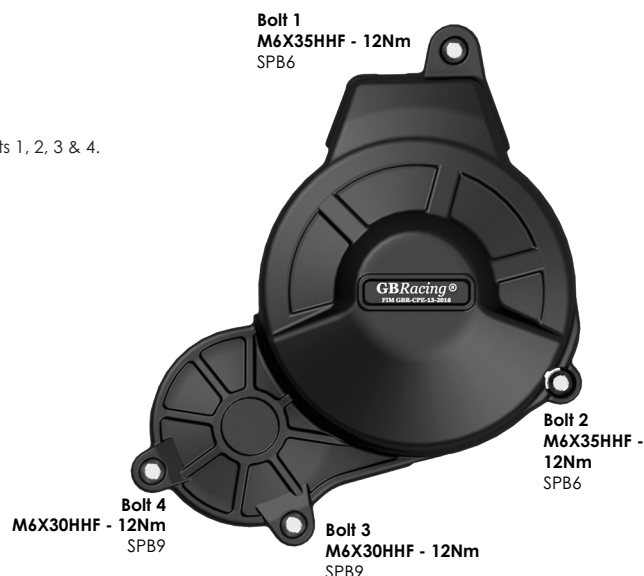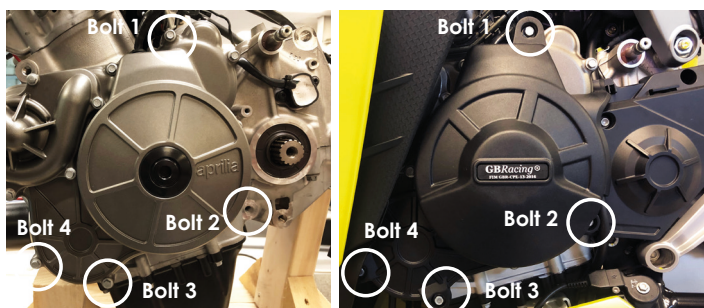

SECONDARY CLUTCH COVER PART NO. EC-RS660-2021-2-GBR

- 1 Remove 4 existing bolts from the stock Clutch cover, shown as position Bolts 1, 2, 3 & 4.
 - 2 Place the Secondary Clutch Cover over the stock cover.
 - 3 Assemble 4 replacement bolts loosely in the correct position as shown
 - 4 Tighten bolts to a Torque of 12Nm as per Manufacturer's recommendations.
- DO NOT OVERTIGHTEN.

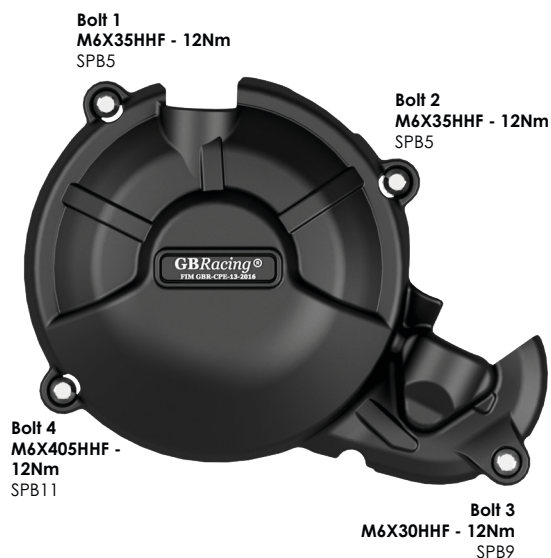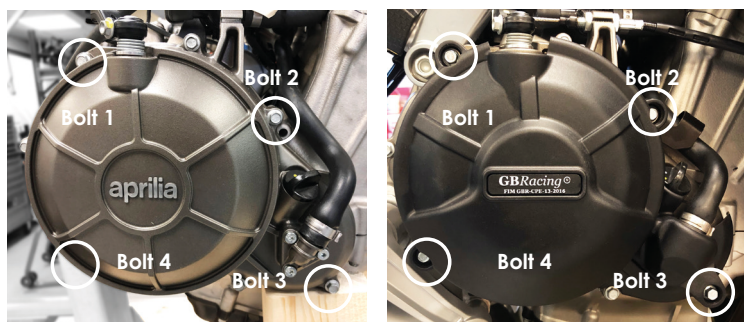

SECONDARY WATER PUMP COVER
PART NO. EC-RS660-2021-5-GBR

Please Note: Only fit with a cold engine. Leave radiator cap on to reduce fluid loss – you will lose fluid.

- 1 Remove fairing.
- 2 Remove the 3 existing bolts from the stock water pump cover in this order:
Bolt 1, 3 and then Bolt 2 – Bolt 2 last as this is the drain bolt.
- 3 Place the Secondary water pump cover over the stock cover.
- 4 Replace Bolt 2 first limiting fluid loss: Assemble the bolt loosely in the correct position as shown using the two supplied copper washers - see **Fig.1 for Bolt position 2**
- 5 Assemble the remaining two replacement Bolts 1 & 3 loosely in the correct position as shown
- 6 Tighten bolts to a Torque of 12Nm as per Manufacturer's recommendations.
DO NOT OVERTIGHTEN.
- 7 Replace fairing and check coolant level.




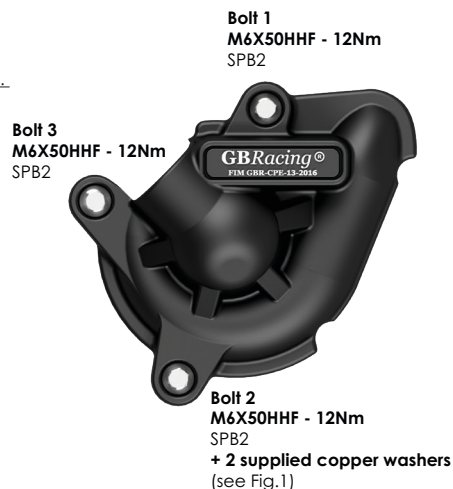



Fig. 1

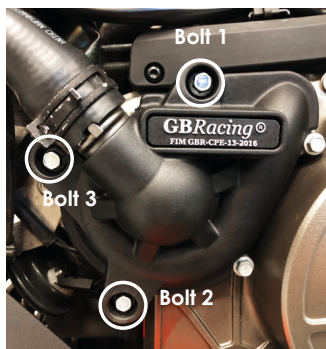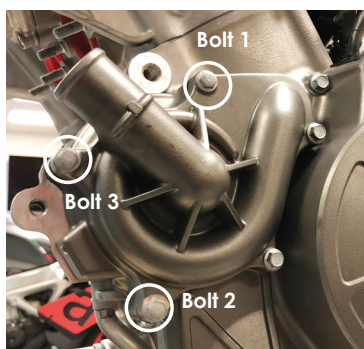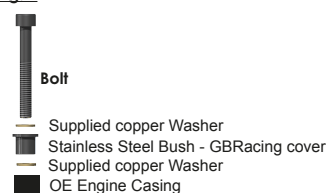

SET: EC-RS660-2021-SET-GBR: EC-RS660-2021-1-GBR / EC-RS660-2021-2-GBR / EC-RS660-2021-5-GBR

PADDOCK STAND / BOBBIN SET
PART NO. BA12-6-GBR-SET

- 1 Assemble M6 x 40mm Bolt & M6 Washer fthrough the moulded bobbin.
- 2 Tighten bolts to swing arm boss, 8 Nm.
DO NOT OVERTIGHTEN

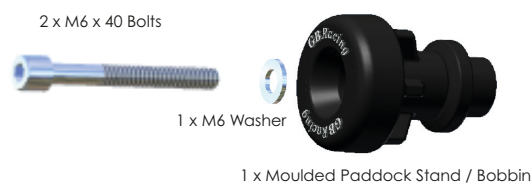
LOWER CHAIN GUARD
PART NO. CGA09-GBR

- 1 Assemble 2 off M6 x 20mm bolts and washers through the moulded lower chain guard into the Black Anodised aluminium mounting block CGA09-2.
- 2 Position the assembly underneath the swing arm, closing the gap to the rear sprocket. Note : There should be a 5mm minimum gap from the bike chain to the lower chain guard.
- 3 Mark the position of the Black Anodised block, relative to the swing arm.
- 4 Disassemble the assembly, leaving the block to be replaced into the correct position.
Mark the C/Sunk fixing hole positions on the underside of the swing arm.
- 5 Drill & Tap the marked holes , M6 - (Drill 5mm Dia. for tapping)
- 6 Re-assemble the lower chain guard to the fixed block.

